 


# Kaffè

## Electric Coffee Grinder

Model: KF2010, KF2020, KF2030

Operating and Safety Instructions

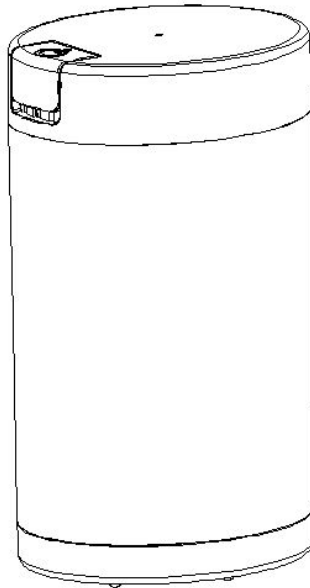

- FOR HOUSEHOLD USE ONLY -



**READ ALL INSTRUCTIONS BEFORE USE**

# IMPORTANT SAFETY INSTRUCTIONS

## Definitions

*Whenever used, the following identify safety and property damage messages and designate a level of hazard seriousness.*



- This is the safety alert symbol. It alerts you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.

**DANGER** - Indicates an imminently hazardous situation, which, if not avoided, will result in death or serious injury. Usage of this signal word is limited to the most extreme situations.

**WARNING** - Indicates a potentially hazardous situation, which, if not avoided, could result in death or serious injury.

**CAUTION** - Indicates a potentially hazardous situation, which, if not avoided, may result in moderate/serious injury.

**NOTICE** - Addresses practices not related to personal injury, such as product and/or property damage.

**When using electrical appliances, always follow basic safety precautions, including the following:**



**WARNING - To reduce the risk of fire, electric shock, or serious personal injury:**

- To protect against risk of electrical shock **DO NOT** put the unit in water or any other liquid nor use the unit near any water or liquid.
- **NOT** to be used by children.
- Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.
- Avoid contacting moving parts.
- **DO NOT** operate any appliance with a damaged cord or plug or after the appliance malfunctions or is dropped or damaged in any manner. Return the appliance to the nearest authorized service facility for examination, repair or electrical or mechanical adjustment.
- **DO NOT** use any attachments as it may cause fire, electric shock or injury.

- Check inside bowl for presence of foreign objects before each use.

 
## SAVE THESE INSTRUCTIONS

**⚠ CAUTION - To reduce the risk of personal injury and/or product/property damage:**


- This product is intended solely for indoor, non-commercial, non-industrial use in grinding coffee beans. Do not use the product outdoors or for any other purpose.
- Do not allow the Power Cord to hang over the edge of a table or counter, where it may be tripped over or pulled.
- Always place the product on a flat, level, stable surface before use.

**WARNING:** This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, the plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician.

Do not modify the plug in any way.



## PARTS

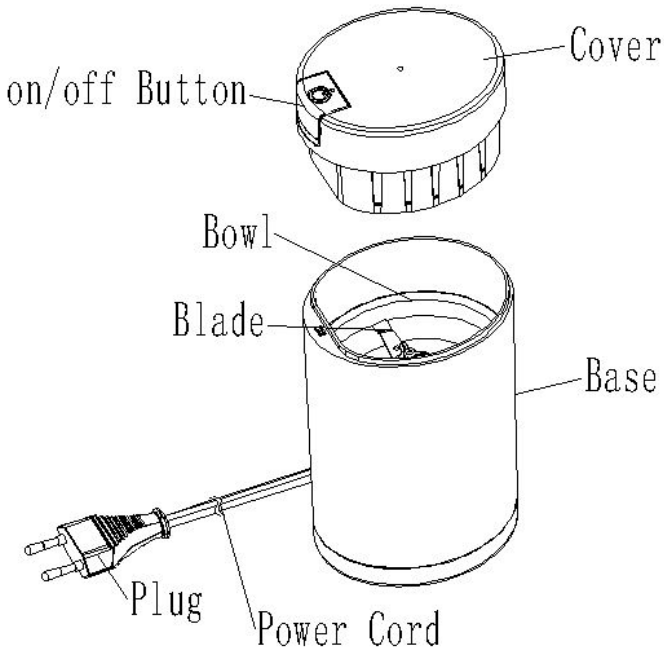 

## Before First Use

Clean the Cover, Bowl, and Blade as described in the “Care and Maintenance” section.

## To Use

1. Make sure the Coffee Grinder is unplugged.
2. Remove the Cover by lifting it up. Add up to 2.5 oz. of coffee beans to the Bowl.
3. Close the Cover and plug the Power Cord into a standard 230-volt AC electrical outlet.
4. To operate, press and hold the ON/OFF Button. Release the ON/OFF Button to stop grinding.  
**NOTICE:** Do not operate for more than 30 seconds at a time. After 30 seconds of continuous operation, allow the unit to rest for 30 seconds.  
**NOTE:** *The Coffee Grinder will not operate unless the Cover is in place.*

5. Unplug the Power Cord from the electrical outlet and remove the Cover. Remove the coffee grounds from the Coffee Grinder.

## **CARE AND MAINTENANCE**

### **WARNING:**

- Always make sure the Coffee Grinder is unplugged from the electrical outlet before cleaning it.
- This product was permanently lubricated at the factory before shipping and will not require further lubrication for the life of the product. Additional lubrication of motor parts could increase the risk of a fire hazard.

**NOTICE:** Do not use harsh or abrasive cleaners or pads (metal scouring pads) on the Coffee Grinder.

- Hand wash the Cover with soapy water or place it on the upper rack of a dishwasher for cleaning.
- Clean the Bowl and Blade with a clean, wet, soapy sponge. Rinse the Bowl and Blade, but do not immerse the Base in water. Gently pat the Bowl and Base dry using a clean, dry cloth.

**CAUTION:** Clean the Bowl and Blade carefully to avoid personal injury.

- Wipe the Base with a damp cloth to clean.
- Replace the Cover once all parts are dry.
- Store in a cool, dry place.

## **ELECTRICAL SPECIFICATIONS**

<b>Voltage</b>	<b>Frequency</b>	<b>Wattage</b>
120VAC	60Hz	150W