


Motion Sensor Ceiling Light

Operating Instructions

Battery Installation & Replacement

- 1) Rotate the battery cover counter-clockwise and remove it.
- 2) Install 3 C batteries making certain to match the polarity as shown in the diagram in the battery compartment.
- 3) Do not mix battery types. Use only fresh batteries. Alkaline are recommended.
- 4) Check light operation to confirm that batteries are correctly installed.
- 5) Replace the battery cover and rotate it clockwise to lock it in place.

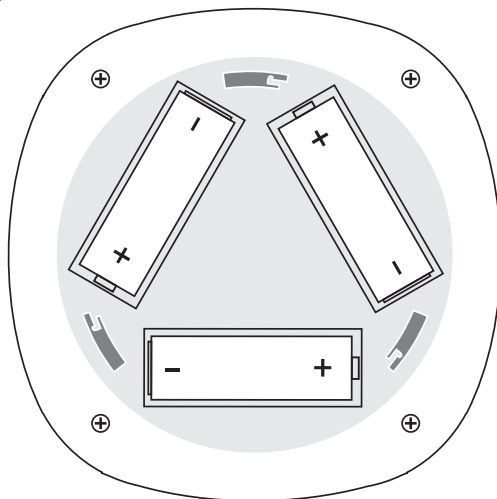

Versatile...installs anywhere

The Motion Sensor Ceiling Light is battery-operated with an versatile mounting system that installs virtually anywhere in minutes. It is perfect for lighting clothes closets, cabinets, utility rooms, sheds, garages, and much, much more.

Automatic, Manual or Portable

The Motion Sensor Ceiling Light can be operated manually or automatically using the built-in sensor. The motion sensor will automatically turn on the light at night or in dark spaces whenever a moving heat source is detected. The light comes on for 30 or 60 seconds (user selectable) and remains on as long as motion continues to be detected. The Motion Sensor Ceiling Light also has a photo sensor which prevents the light from being activated during the day or when the area is already illuminated by another light source. If you prefer, you can also use it in the manual mode...ideal during emergencies or when you are performing an intricate task. You can even remove the light from its mounting bracket and use it as a portable light or a hands-free task light.

Selecting a Location

The motion sensor's maximum detection distance is 15 feet and has a detection angle of 100°. The light should not be installed near heaters, heat vents, or other heat sources. Reflective surfaces (light colored walls, mirrors, etc.) may trigger the motion sensor resulting in false activation. Be aware that pets can activate the motion sensor and that in some locations external factors such as automobiles and pedestrians may also need to be considered.

Mounting Instructions

Determine the location of the light, as noted above, then remove the battery cover/mounting plate from the light and follow the steps below to mount it.

Double-sided Tape Mounting: Because of the size and weight of the Ceiling Light, we recommend that it be mounted using the supplied screws and drywall anchors. We do not recommend the use of double-sided tape.

Screw Mounting – Wood Surfaces: Mount the bracket using a minimum of two screws. Drill a 1/16" pilot hole, insert the screw and gently tighten it until the mounting plate is secure. Do not over tighten.

Screw Mounting – Drywall: Mount the bracket using all four screws and anchors. Drill 3/16" pilot holes, insert drywall anchors and press firmly until they are fully seated into the wall. Insert the screws and gently tighten until the mounting plate is secure. Do not over tighten the screws.

Mode switch

Manual Operation

- a. Slide the switch to the ON position to turn the light on.
- b. Slide the switch to the OFF position to turn the light off.

Automatic (Sensor) Operation

- a. Slide the switch to 30S. Light will turn on automatically when motion is detected and will remain on while if activity continues. The light will automatically shut off in 30 seconds if no further motion is detected.
- b. Slide the switch to 60S. Operation is the same as described above, however the delay is 60 seconds.

ATTENTION

To avoid damage to the electrical components, please observe the following precautions:

Do not aim the Motion Sensor Ceiling Light directly towards the sun.

Do not shake or drop the light

Do not expose the unit to static electricity

Please note that circuit requires 90 ~ 180 seconds to stabilize after the batteries are inserted.

Do not mix battery types (carbon, alkaline, lithium, or NiMH)

When LEDs become weak, batteries must be replaced

Limited 1 Year Warranty

This product is guaranteed against defect and workmanship for a period of 1 year from the date of purchase. If the product fails during normal use, please return it to the place of purchase together with a copy of the sales receipt. Alternatively, you may contact us at info@fulcrumproducts.com and we will arrange to have the product replaced or repaired at our discretion.

WARNING: Modifications to this or other products by anyone other than an authorized repair agent may void that product's warranty.

Specifications Model # 30028-308

Operating Mode: PIR Motion Sensor

Max Detection Distance: 15'

LED Type: 6 x SMD

Lumens: 100 lumens (per light)

Color Temp: 4000 Kelvin (warm white)

Battery Type: C(x3), alkaline recommended

Battery Life (constant run time): approx. 40 hours

Battery Standby Life: approx. 14 months, actual battery life will vary according to frequency of use.

Included Items

Screws & drywall anchors • Operating Instructions

CAUTION

Do not mix battery types

Use only fresh batteries for reliable operation

Do not look directly into the light