

Use and Care Manual: Sturdy Patio Swing Chair with Stand

Durable Hanging Egg Chair with Rattan Weaving & Removable Cushion

Important Safety Warnings

READ THESE WARNINGS BEFORE USE TO PREVENT INJURY OR DAMAGE.

- **Maximum Weight Capacity:** Do not exceed 250 lbs (113 kg). Overloading may cause structural failure.
- **Supervision Required:** Keep children under 3 years old away unless supervised by an adult. Never leave children unattended.
- **Safe Usage:** Do not stand, jump, or rock violently in the chair. Excessive movement may cause tipping or damage to the stand/hanging mechanism.
- **Stable Surface:** Install only on a flat, level, and stable floor/ground. Avoid uneven surfaces (e.g., slopes, soft soil) to prevent tipping.
- **Environmental Hazards:** Keep the chair away from open flames, heaters, or sharp objects. Do not use in extreme weather (strong wind, heavy rain, snow, or direct sunlight for prolonged periods).
- **Regular Inspections:** Before each use, check for loose screws, frayed rattan, or damaged hanging components. Tighten or replace parts immediately if worn.

Assembly Instructions

Tools Needed: Included Allen wrench (or Phillips-head screwdriver, if applicable) and rubber mallet (optional, for securing poles).

1. Unpack and Verify Parts:

Lay out all components on a clean, flat surface. Ensure you have:

- Stand frame (poles, base, top connector)
- Hammock chair with rattan weaving
- Hanging chain/hook (attached to chair)
- Hardware kit (screws, washers, locking nuts)
- Removable cushion

2. Assemble the Stand:

- Connect the base poles: Align the pre-drilled holes on the base poles and insert screws. Tighten with the Allen wrench until secure (no wobbling).
- Attach the vertical support pole: Slide the vertical pole into the base connector. Secure with the locking nut and tighten firmly.
- Install the top hanging arm: Connect the top arm to the vertical pole using the provided bolts. Ensure it is centered and tight to prevent shifting.

3. Hang the Chair:

- Lift the chair by its hanging chain/hook. Hook it securely onto the stand's top hanging mechanism.
- Adjust the chain length (if adjustable) to set your desired sitting height (typically 12–18 inches from the floor). Ensure the chair hangs straight and stable.

4. **Test Stability:**

Gently push the stand and chair to check for wobbling. Tighten any loose screws if movement occurs. Place the removable cushion on the chair seat.

Using Your Hammock Chair

- **Sitting Safely:** Sit slowly, centering your weight over the cushion. Keep feet flat on the floor or rest them gently on the ground (avoid dangling to prevent strain).
- **Gentle Movement:** Rock slightly for comfort, but avoid violent swinging. Excessive motion may loosen hardware or damage the rattan.
- **Weight Distribution:** Do not lean heavily to one side. Keep your body centered to maintain balance.

Care and Maintenance

Rattan Weaving:

- **Prevent Fading/Damage:** Avoid prolonged direct sunlight (can dry out and fade rattan). If using outdoors, place in a shaded area or use a UV-protective spray (test on an inconspicuous area first).
- **Check for Loose Strands:** Inspect rattan regularly for fraying or loose weaves. Trim small loose strands with scissors; contact the manufacturer for replacement parts if damage is severe.

Metal/Wooden Stand (if applicable):

- **Rust Prevention (Metal):** Wipe the stand with a dry cloth weekly to remove dust/moisture. If rust appears, gently sand the area, apply rust remover, and coat with a metal sealant.
- **Wooden Stand Care:** Clean with a damp cloth and mild soap; dry immediately. Apply wood conditioner annually to prevent cracking.

Removable Cushion:

- **Washing:** Follow the care label on the cushion (typically: machine wash cold on gentle cycle, tumble dry low, or air dry). Do not bleach or use harsh detergents.
- **Waterproofing:** For outdoor use, treat the cushion with a fabric waterproof spray to repel light rain (test on a small area first).

Cleaning Instructions

- **Rattan Chair:**Wipe with a soft, damp cloth to remove dust. For stains, mix mild soap with warm water, gently scrub the area, and dry immediately with a clean cloth.
- **Stand:**Wipe with a damp cloth; dry thoroughly to prevent rust (metal) or warping (wood).
- **Cushion:**Remove the cover (if zippered) and wash as directed. Spot-clean small stains with a damp cloth and mild soap.

Storage

- **When Not in Use:**If storing indoors, disassemble the stand (if possible) to save space. Cover the chair with a breathable cloth to protect from dust.
- **Outdoor Storage:**Use a waterproof, breathable cover to shield from rain/snow. Ensure the chair and stand are completely dry before covering to prevent mold.