 


10'x10' Canopy Tent with Vented Top



Care And Maintenance


- Wash frame and canopy with a mild solution of soap and water, rinse thoroughly. Dry completely. Do not use bleach or solvents.
- Inspect frame periodically to ensure all bolts and nuts are tight.
- Always return the canopy to the storage bag after use. Be sure the canopy is completely dry before storing it.

DESCRIPTION	PART	QTY (PCS)
FRAME		1
CANOPY		1
SMALL STAKE		8
ROPE		4
STORAGE BAG		1
SAND BAG		4


Set-up instructions

Important: Do not use excessive force during any part of set-up


1 Open the canopy frame

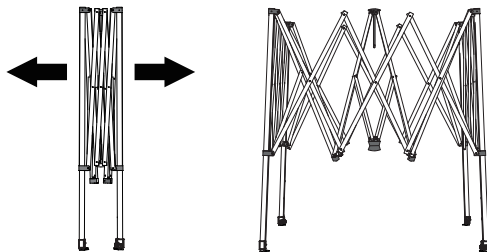


2 Attach the canopy top, using the corner velcro to attach to the top of each corner

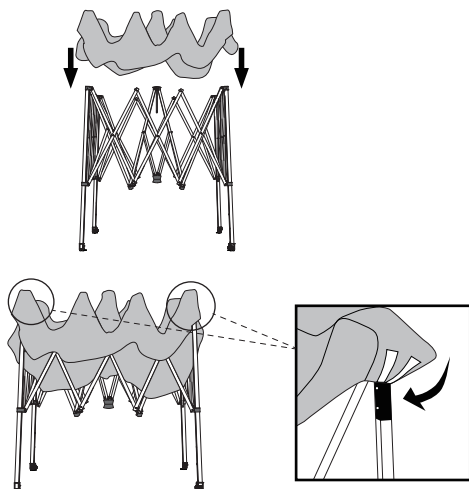


3 Lock the frame

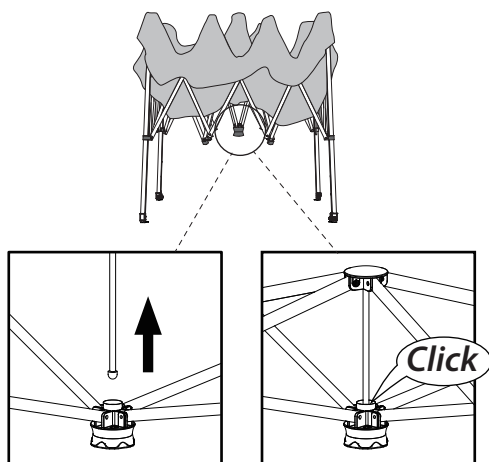

- 4 Use the velcro to secure roof to the frame. Adjust the canopy height with push button mechanism.**

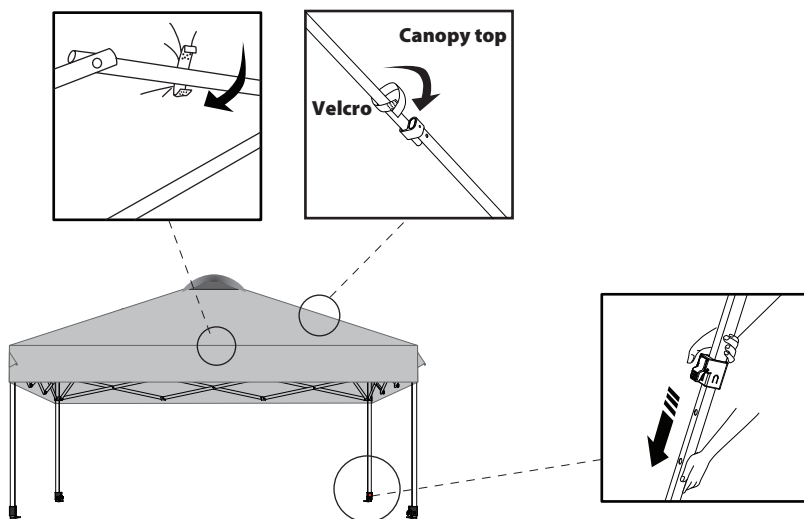



- 5 Secure the canopy in place insert the stakes to the ground and tie the ropes with plastic adjustment.**

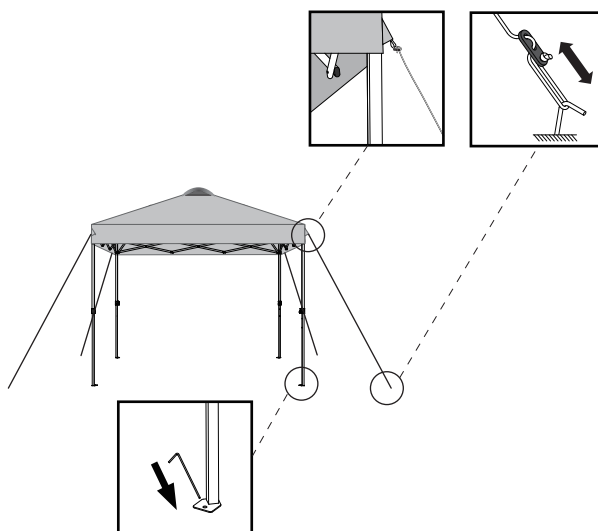



Disassembly instructions

**Important: Do not use excessive force during disassembly.
Please remove stakes and ropes before taking down.**



1 Remove stakes from the ground, and adjust the tube height.

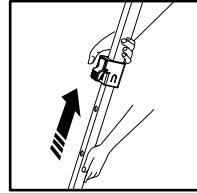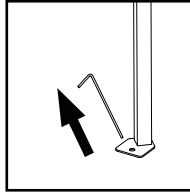

2 Unlock the frame.

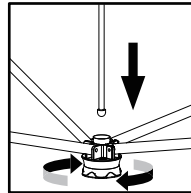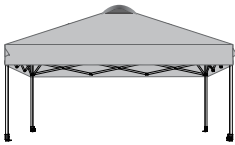

3 Store the canopy.

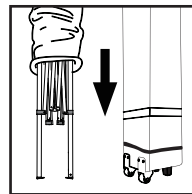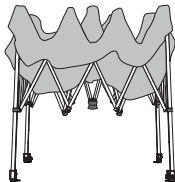

Any question about assembly or accessories please contact: customerservice@e2e-corp.com

Made in china