

LISTEN TO KITADIN'S STORY

We are the creator of KITADIN and is one of the leading brands of high-end canopy tents. We are professional in making the BEST QUALITY canopy tents so you can enjoy your leisure time.

We firmly believe that the details determine success or failure. So we insist on using the highest quality materials. The quality of fabrics, operating mechanisms, nuts and bolts marks the success of professional products. Each piece is sleekly designed, rigorously tested for durability, and assembly instructions have been standardized for simplicity from start to finish.

At the same time, we work with the world's top designers to provide new ideas and styles for our canopy tents. And we will continue to introduce new product lines, instilling fresh blood into our brand. You will see the canopy tents produced by KITADIN in the most beautiful places in the world.

It's never too early to start planning your own personal summertime oasis. And our canopy tents is the perfect answer for a bright and sunny day!

PRODUCT MANUAL

10Ft X 10Ft Canopy Tent Instruction Guide




ASSEMBLY INSTRUCTIONS

WARNING:

- KEEP ALL FLAME AND HEAT SOURCES AWAY FROM THIS TENT FABRIC. This tent is made with flame resistance fabric. It is not fire proof. The fabric will burn if left in continuous contact with any flame source. The application of any foreign substance to the tent fabric may render the flame-resistant properties ineffective.
- Always read and follow the instructions before use. Be cautious to avoid pinching your hands or fingers in any of the moving parts as frame opens and closes.
- The canopy is designed to provide shade only. Do not use this canopy in strong wind and rain. Wind and rain can damage the canopy and could result in injury to you and others.

Extra Reminder: This canopy is for sun shade only, not water proof and not intended to use in the rain. The water will sit easily at the canopy fabric as indicated in below diagram and severely damage the canopy. Please take a minute to take down the canopy before rain!

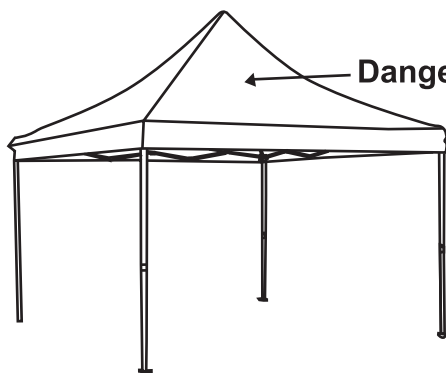

Danger: Water may accumulate here!

- Always stake or weight down your canopy at any time once set up. This canopy is **NOT** a permanent structure. Do not leave the canopy unattended. Take down and store it away after use. To erect this canopy requires a minimum of two persons. Keep all children away from the assembly area.

ASSEMBLY INSTRUCTIONS


SET-UP INSTRUCTIONS

IMPORTANT: DO NOT USE EXCESSIVE FORCE DURING SET-UP.

For easy assembly of your new canopy, we suggest a second person.


NOTE: First time attachment is required

Canopy top and frame are shipped unattached to avoid damage. A first time set up requires that top be attached on to the frame with Velcro. Once canopy top is permanently attached, set up and disassembly are easily accomplished within seconds.

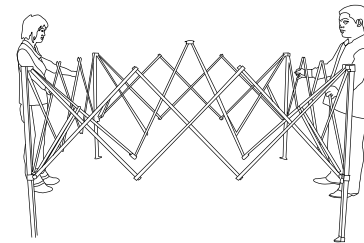



1. Stand frame upright. Starting at the corners, with each person standing on the opposite side, grasp the two outer legs, slightly lift the frame off the ground and step backward, stopping at full arms' length.

2. Each person should then grasp the bottom of the middle frame section (cross beams) where it forms diamond. Lift slightly and slowly walk backward until the frame is fully extended. Be careful not to pinch your finger or pull backward too hard as this may result in the bending of cross beams!

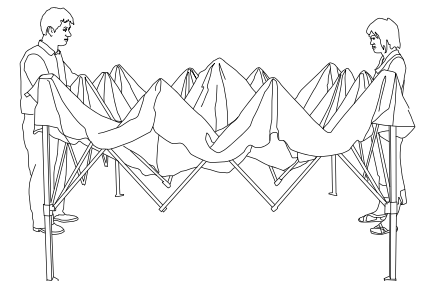


ASSEMBLY INSTRUCTIONS


3. Lift two adjacent outer legs and pull out inner legs slightly until pin locks in. Repeat on the remaining legs. The canopy offers three height levels. To adjust, lift the leg up, pull the pin out at the connector and slowly pull out the inner leg and then release. The pin until it pops in next position. Repeat on the other legs.

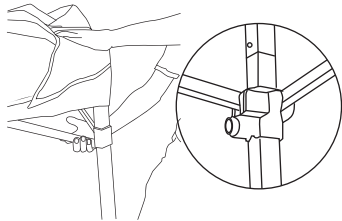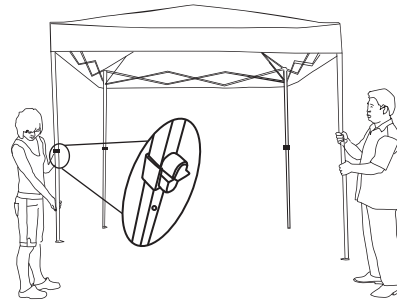

4. Engage the auto slider at each corner by pushing up the slider with one hand while holding down the top of the leg with the other hand. Repeat this operation at remaining corners till all sliders lock in place.

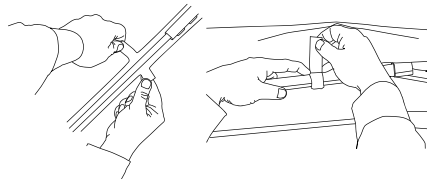

5. To secure the fabric top to the frame, please wrap the velcro loop straps around roof tubes and cross beams.

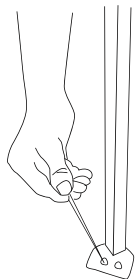

6. Stake down the canopy by driving the provided 8 small anchors through the hole on each base foot. This will keep the leg from moving sideways in mild conditions.



THIS GAZEBO MUST BE SECURED TO THE GROUND WITH ANCHORS.

ASSEMBLY INSTRUCTIONS

DISASSEMBLY INSTRUCTIONS



IMPORTANT: DO NOT USE EXCESSIVE FORCE DURING DISASSEMBLING. PLEASE REMOVE ANCHORS AND ROPES BEFORE DISASSEMBLING YOUR GAZEBO.

1. With a second person, lift two adjacent outer legs slightly, depress snap button and telescope inner legs up into outer legs. Undo the velcro straps of the fabric top from around the roof tubes and cross beams. Failure to do so may result in the tear of fabric during disassembly.

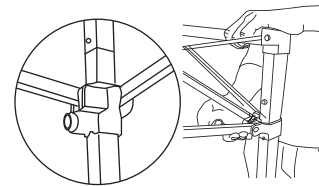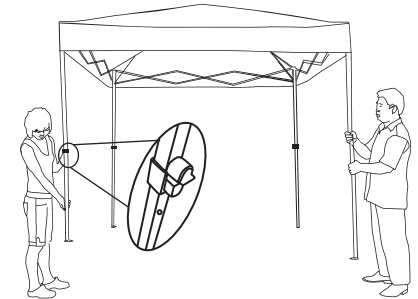

2. Release auto slider at all four corners by a slight upward pressure with one hand while pulling out locking pin with the other hand. Once locking pin is pulled out, push slider down past snap button.

3. With second people on the opposite side, grasp the upper portion of outer legs and slightly lift up. Shake the frame slightly and step towards each other until the canopy is 3/4 closed. **Please do not push too hard.**

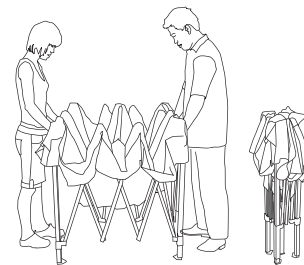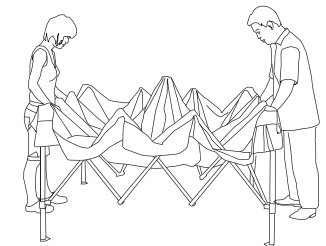

4. Grasp the adjacent outer legs and push the unit together until fully closed. **Be careful not to pinch your fingers!** Make sure the fabric canopy is completely dry and then return your folded POP UP canopy to the carry bag.

WARRANTY

90 day Limited Warranty

This product is warranted to the original purchaser against defects in workmanship and materials. If a product fails during the first 90 days from date of purchase under the terms of our limited warranty, please contact customer support. Manufacturer reserves the right in the case of discontinued or out of production models, to replace with an item of similar quality.

Frames

Frames are warranted against defects in materials and workmanship from the date of original purchase. Damage to frame or welds due to commercial use, improper assembly, exposure to water and sub-freezing temperatures, and/or abuse are not covered.

Fabric

The fabric is warranted against separation at the seams. Fading, mildew and/or discoloration due to exposure to the elements, chemicals and spills are not covered.

Metal Finishes and/or Paint

The finish is warranted against blistering, peeling, or cracking. Fading resulting from exposure to elements, chemicals, and spills are not covered. Scratches and chips due to normal wear and use are not covered.

WARRANTY

Storage

Your new canopy was crafted from steel and treated with a powder coat finish to protect it from rust. Please periodically inspect your new canopy for any scratches or chips and touch up with a paint for metal from your local hardware store to insure many years of use. This product will rust if not protected. If you are dismantling and storing your canopy after use, store in dry place wiping down and drying off all metal parts.

Care and Maintenance

Wash frame and canopy with a mild solution of soap and water, rinse thoroughly. Dry completely. Do not use bleach or solvents. Inspect frame periodically to ensure all bolts and nuts are tight. Always return the canopy to the carry bag after use. Be sure the canopy is completely dry before storing it.

Note: You must retain original receipt to obtain warranty!

Exclusions

- Damage caused by acts of nature.
- Wind damage.
- Failure caused by unreasonable, unanticipated or abusive use.
- Normal fade of fabrics, upholstery or woven materials.
- Bursting or cracking of tubing due to exposure to water and freezing temperatures.
- Warranty will be void without original receipt.