

Insulation Instructions:

- 1. Place insulation batt between joists, studs or rafters with vapor barrier to inside.
- 2. Start placing supports 4" from end of batt.
- 3. Use one support every 12" to 16" .

WARNING:
Wear safety goggles and use other appropriate safety devices during installation



BW13G155



Robinson Tech International Corp.
Haddonfield, New Jersey
MADE IN CHINA

Insulation Supports
For use with 16" on center joists or studs

- Simply push into place; spring steel holds batt insulation between joists or studs
- Chisel-cut ends dig into joists or studs for permanent installation
- Useful in hard-to-reach crawl space
- 100 pieces,cover approximately 150 sq.ft.with 16" on center spacing

100
Pieces

161-1760

Insulation Supports
For use with 16" on center joists or studs

Simply push into place; spring steel holds batt insulation between joists or studs



Simply push
into place

100
Pieces

Covers approximately 150 sq.ft.
with 16" on center spacing

161-1760

Insulation Supports
For use with 16" on center joists or studs

- Simply push into place; spring steel holds batt insulation between joists or studs
- Chisel-cut ends dig into joists or studs for permanent installation
- Useful in hard-to-reach crawl space
- 100 pieces,cover approximately 150 sq.ft.with 16" on center spacing

100
Pieces

161-1760

Insulation
Supports
For use with 16" on
center joists or studs
100 Pieces

Insulation
Supports
For use with 16" on
center joists or studs
100 Pieces