

CLEANING AND MAINTENANCE

CLEANING/MAINTENANCE INSTRUCTIONS

 
Follow these instructions to correctly and safely care for this fan. Please remember:

REPLACEABLE FUSE

If the (2.5 Amp, 125 Volt) replaceable fuse blows, please visit our website at www.getholmesfans.com for information on how to order a new fuse. Follow the below instructions to replace the fuse on the plug.

User Servicing Instructions

1. Unplug the fan. Grasp plug and remove from the receptacle or other outlet device. Do not unplug by pulling on cord.
2. Open fuse cover, located on the top of the plug, by using your thumb or a flathead screwdriver to slide the cover down towards the prongs.
NOTE: Ensure that fuse cover is completely open before attempting to remove fuse.
3. Remove fuse carefully by using a small screwdriver to pry the fuse out of the compartment by the metal ends of the fuse. (see Figure 5)
4. Place plug on a solid, flat surface. Insert new 2.5 Amp, 125 Volt fuse into fuse compartment and use a small screwdriver to secure the metal ends of the fuse into the compartment.
CAUTION: Risk of fire. Replace fuse only with 2.5 Amp, 125 Volt fuse.
5. Slide fuse cover closed completely. If fuse cover is difficult to close, make sure fuse is secured in place completely by pressing down on metal ends of the fuse.
6. Risk of fire. Do not replace attachment plug. Contains a safety device (fuse) that should not be removed. Discard product if the attachment plug is damaged.

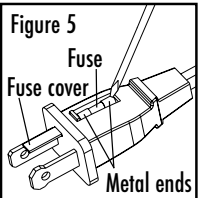

FAN CLEANING

- Always unplug the fan before cleaning.
- Do not allow water to drip on or enter into fan housing.
- Be sure to use a soft cloth moistened with a mild soap solution.
- Do not use gasoline, thinner or benzene as a cleaner.

Clean the fan grill, housing and base with a soft, damp cloth. Do not attempt to remove the fan blade. Please use caution around the housing area. Do not allow the motor or other electrical components to be exposed to water.

FAN STORAGE

When storing this fan in the off season, it is important to keep it in a safe dry location. It is important to protect the fan from dust.

For inquiries regarding recycling and proper disposal of this product, please contact your local waste management facility.

FCC STATEMENT

FCC STATEMENT

Potential for Radio/Television interference

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and
(2) this device must accept any interference received, including interference that may cause undesired operation.
This product has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules.
These limits are designed to provide reasonable protection against harmful interference in a residential installation. The product generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that the interference will not occur in a particular installation. If the product does cause harmful interference to radio or television reception, which can be determined by turning the product on or off, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the product and the receiver.
- Connect the product into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.
- Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

The following importer is the responsible party:

Company Name: SEG Products US Corp.
Address: 8 The Green, Suite #6962, Dover, DE 19901
Telephone: 1-959-202-4223

WARRANTY INFORMATION

3 YEAR LIMITED WARRANTY

This device has a limited warranty of 3 years from the original date of purchase against workmanship and defects in material. If under normal use, your product fails to operate, please contact our customer service department at info@getholmesfans.com. A refund or replacement will be provided to you with proof of purchase. Star Elite Inc. may deny claims of damage caused by misuse or modifications of this product.

Warranty Service

Contact our customer service at www.getholmesfans.com/en/contact-us or info@getholmesfans.com or 1-866-769-3166 (8:30 am - 5:00 pm EST) Monday-Friday. Our team will be happy to assist.

www.getholmesfans.com

© 2023 Sunbeam Products, Inc. All rights reserved.
HOLMES® is a registered trademark of Sunbeam Products, Inc. used under license.
Distributed by Star Elite Inc., Montreal, Canada H3B 3X9
SEH022-030323

Printed In China

Holmes®

Instruction Manual

Item: 12095
Model: 32510341



45 Inch Digital Tower Fan

PLEASE READ AND SAVE THESE IMPORTANT INSTRUCTIONS

 
PLEASE READ AND SAVE THESE IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be taken including the following:

1. Read all instructions before using this appliance.
2. Use fan only for purposes described in the instruction manual. This fan is not for continuous operation or equivalent.
3. To protect against electrical shock do not immerse unit, plug or cord in water or spray with liquids and plug the appliance directly into a 120V AC electrical outlet.
4. Close supervision is necessary when any appliance is used near children.
5. Not intended for use by children
6. Unplug from outlet when not in use, when moving fan from one location to another, before putting on or taking off parts and before cleaning.
7. Avoid contact with moving parts.
8. Do not operate in the presence of explosive and/or flammable fumes.
9. To avoid fire hazard, NEVER place the cord under rugs or any parts near an open flame, cooking or other heating appliance.
10. Do not operate any appliance with a damaged cord or plug after the appliance malfunctions, or has been dropped/damaged in any manner. Discard fan or contact customer service.
11. Do not run cord under carpeting. Do not cover cord with throw rugs, runner, or similar coverings. Do not route cord under furniture or appliances. Arrange cord away from traffic area and where it will not be tripped over.
12. The use of attachments not recommended or sold by the appliance manufacturer may cause hazards.
13. Do not let the cord hang over the edge of a table, counter or come in contact with hot surfaces or leave exposed to high traffic areas.

14. Do not use outdoors.
15. To disconnect, grip plug and pull from wall outlet. Never yank on cord.
16. Always use on a dry, level surface.
17. Do not operate fan until fully assembled with all parts properly in place.
18. This product is intended for household use ONLY and not for commercial or industrial applications.
19. **WARNING:** To reduce the risk of electrical shock and injury to persons, do not use in window.
20. **WARNING:** To reduce the risk of fire or electric shock, do not use this fan with any solid-state speed control device.
21. **WARNING:** This product employs overload protection (fuse). A blown fuse indicates an overload or short-circuit situation. If the fuse blows, unplug the product from the outlet. Replace the fuse as per the user servicing instructions (follow product marking for proper fuse rating) and check the product. If the replacement fuse blows, a short circuit may be present and the product should be discarded or contact customer service.

⚠ WARNING: Chemical Burn Hazard. Keep batteries away from children. This product contains a lithium button/coin cell battery. If a new or used lithium button/coin cell battery is swallowed or enters the body, it can cause severe internal burns and can lead to death in as little as 2 hours. Always completely secure the battery compartment. If the battery compartment does not close securely, stop using the product, remove the batteries, and keep it away from children. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

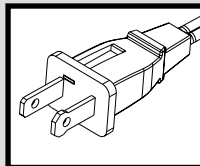

THIS APPLIANCE HAS A POLARIZED PLUG (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician to install the proper outlet.

DO NOT ATTEMPT TO MODIFY THIS PLUG OR DEFEAT THIS SAFETY FEATURE IN ANY WAY.

FEATURES - OPERATIONS

PLEASE READ AND SAVE THESE IMPORTANT SAFETY INSTRUCTIONS

Figure 1


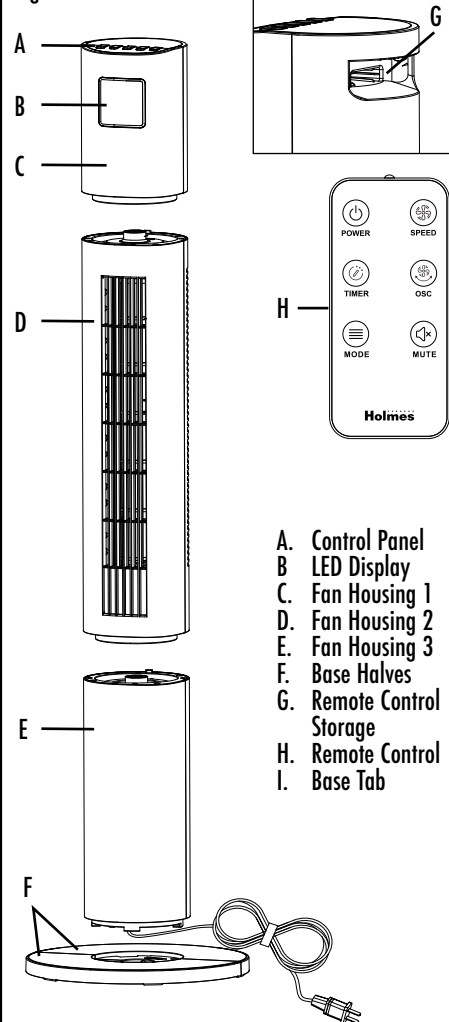 


Figure 2

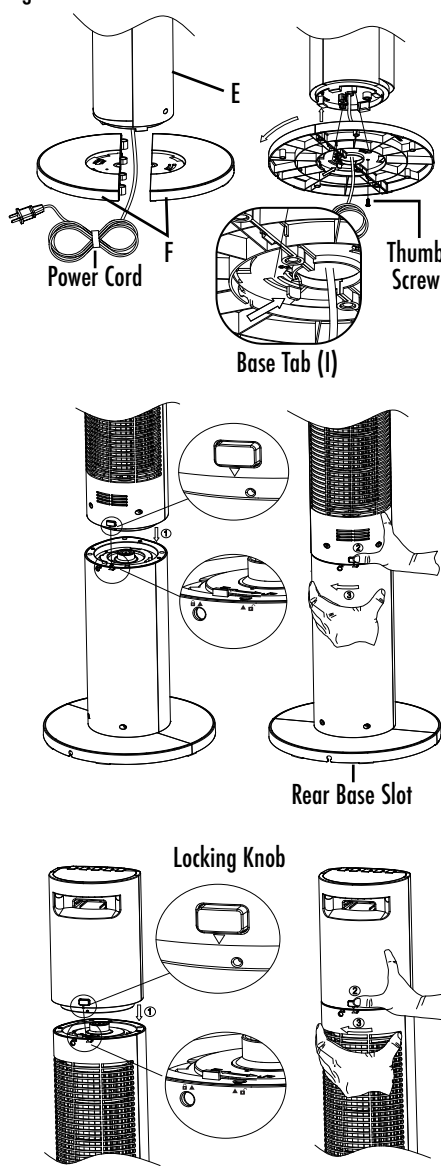 

FEATURES - OPERATIONS

ASSEMBLY INSTRUCTIONS: (SEE FIGURE 1 & 2)

Estimated assembly time: 5-10 minutes
Tool-Free, 1 thumb screw included

NOTE: MAKE SURE YOU REMOVE ALL CONTENTS FROM THE PACKAGE. PLEASE CHECK PACKAGING MATERIALS FOR PARTS THAT COULD BE REQUIRED TO OPERATE THIS FAN.

1. To secure the Base Halves (F) together, slide the posts of one base half into the slots of the second base half. (Refer to Figure 2.)
2. Pull the power cord through the center hole of the base.
3. Position the power cord into slot at the bottom of the base and into the rear base slot
4. Hold the Fan Housing 3 (E) onto the assembled base and turn the base clock-wise until it no longer turns and locks in place. Install thumb screw to secure.
5. Place the assembled Fan Housing 3 (E) with the Base right side up and place on a dry and level surface.
6. Insert Fan Housing 2 (D) into Fan Housing 3 (E) and match the location icon "Δ". Turn clockwise to lock into position. Once locked into position, verify the housing is secured and does not rotate.
7. Insert Fan Housing 1 (C) into Fan Housing 2 (D) and match the location icon "Δ". Turn clockwise to lock into position. Once locked into position, verify the housing is secured and does not rotate.

OPERATING INSTRUCTIONS: (SEE FIGURE 3)

1. Plug the cord into a standard 120 volt AC outlet.
2. To turn the fan on, press the POWER button (A) located on the control panel or remote control, indicator light will be on. The fan will start running on speed 3.
3. Press the speed button (B) to cycle through 4 speed settings in sequence. The corresponding indicator light will illuminate.

FEATURES - OPERATIONS

DISASSEMBLY INSTRUCTIONS:

1. Make sure the fan has been unplugged before disassembly.
2. Push and hold the locking knob in place. By holding the base in place, turn Fan Housing 1 (C) anticlockwise to release.
3. Repeat Step 2 to release Fan Housing 2 (D).
4. Pull the Base Tab (I) and rotate the base anticlockwise while keeping Fan Housing 3 (E) in place to unlock the base from the fan housing. Remove thumb screw.
5. Pull the power cord out through the centre hole of the base.
6. Store the disassembled fan pieces in the provided storage bag (O).

REMOTE CONTROL: (SEE FIGURE 4)

NOTE: PLEASE REMOVE THE PROTECTIVE PLASTIC FROM THE REMOTE CONTROL BATTERY BEFORE OPERATION.

This unit includes one lithium battery, CR2025/3V. Remove battery before discarding the remote.

Battery Replacement

The cells should be disposed of properly, including keeping them away from children. Even used cells may cause injury.

- a) Locate the battery compartment on the bottom back of the remote control handset. Push tab and pull battery tray.
- b) Remove old battery.
- c) Place new battery into battery compartment.
- d) Slide battery compartment into the remote control handset.

NOTES:

- Remove the battery from the equipment when it is not being used for an extended period of time.
- Remove the used battery promptly.
- Do not discard used batteries into household trash containers. Contact your local government for disposal or recycling practices in your area.

Figure 4


 
 
 
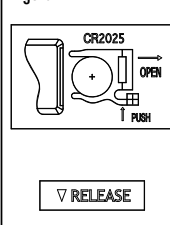 


Figure 3

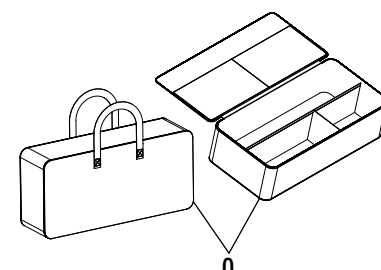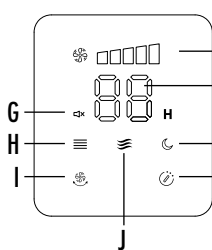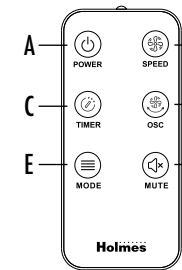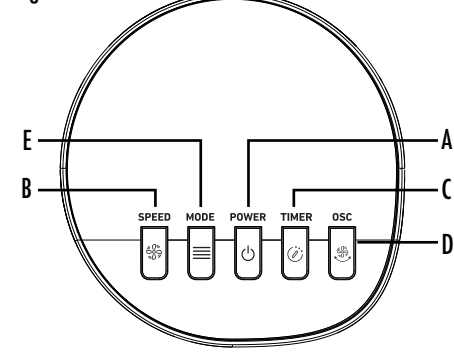 

- | | | | | |
|-----------------|-----------------------|--------------------------|--------------------------|---|
| A. Power Button | D. Oscillation Button | G. Mute Icon | J. Breeze Mode Indicator | M. Timer / Speed / Power Breeze Indicator |
| B. Speed Button | E. Mode Button | H. Mode Icon | K. Timer Indicator | N. Speed Indicator |
| C. Timer Button | F. Mute Button | I. Oscillation Indicator | L. Sleep Mode Indicator | O. Storage Bag |