

PROGRAMMING HANDHELD REMOTE CONTROL


1. Press and release the "Learn" button.
2. The "OK" LED will illuminate indicating ready for programming.



Beeps




30 sec

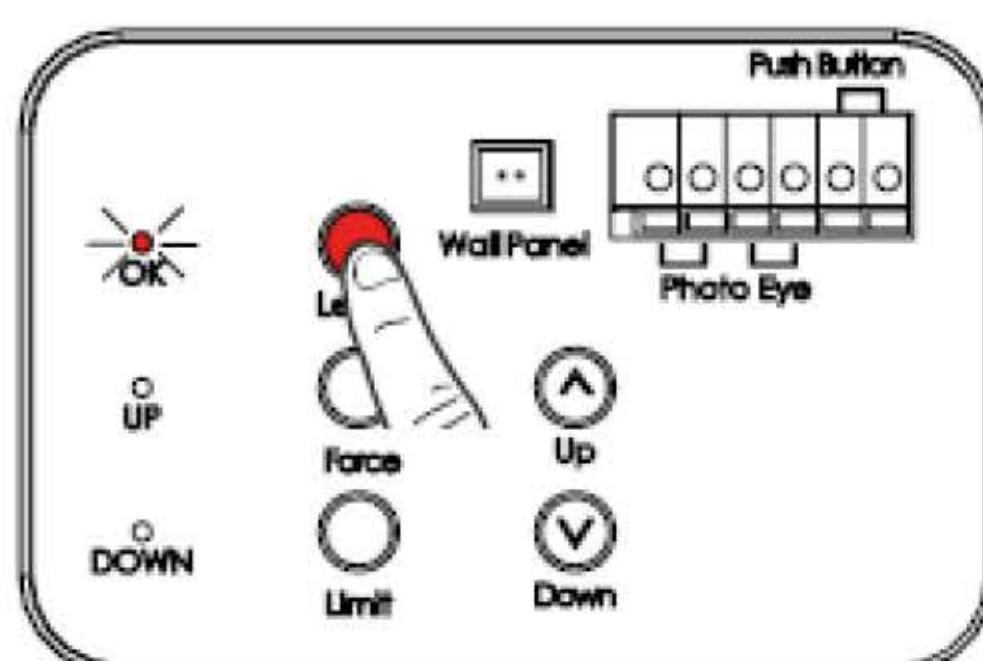

Press and release LEARN

3. Press button on remote control within 30 seconds to program.

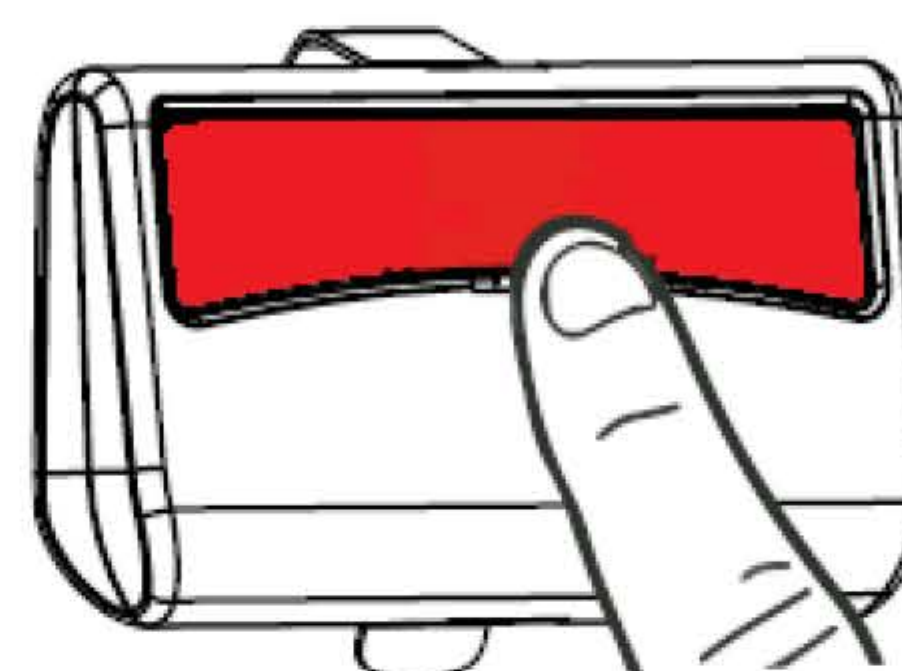

The "OK" LED flashes twice followed by two beeps to confirm remote has been programmed.

2 x flashes



2 x beeps

Learn

UP



Force




PROGRAMMING HANDHELD REMOTE CONTROL

Erasing ALL remote controls from memory:

To erase ALL remote controls from memory, press and hold "Learn" button for 3 seconds. "OK" LED will flash and beep three times indicating all remotes have been erased from memory.



Beeps

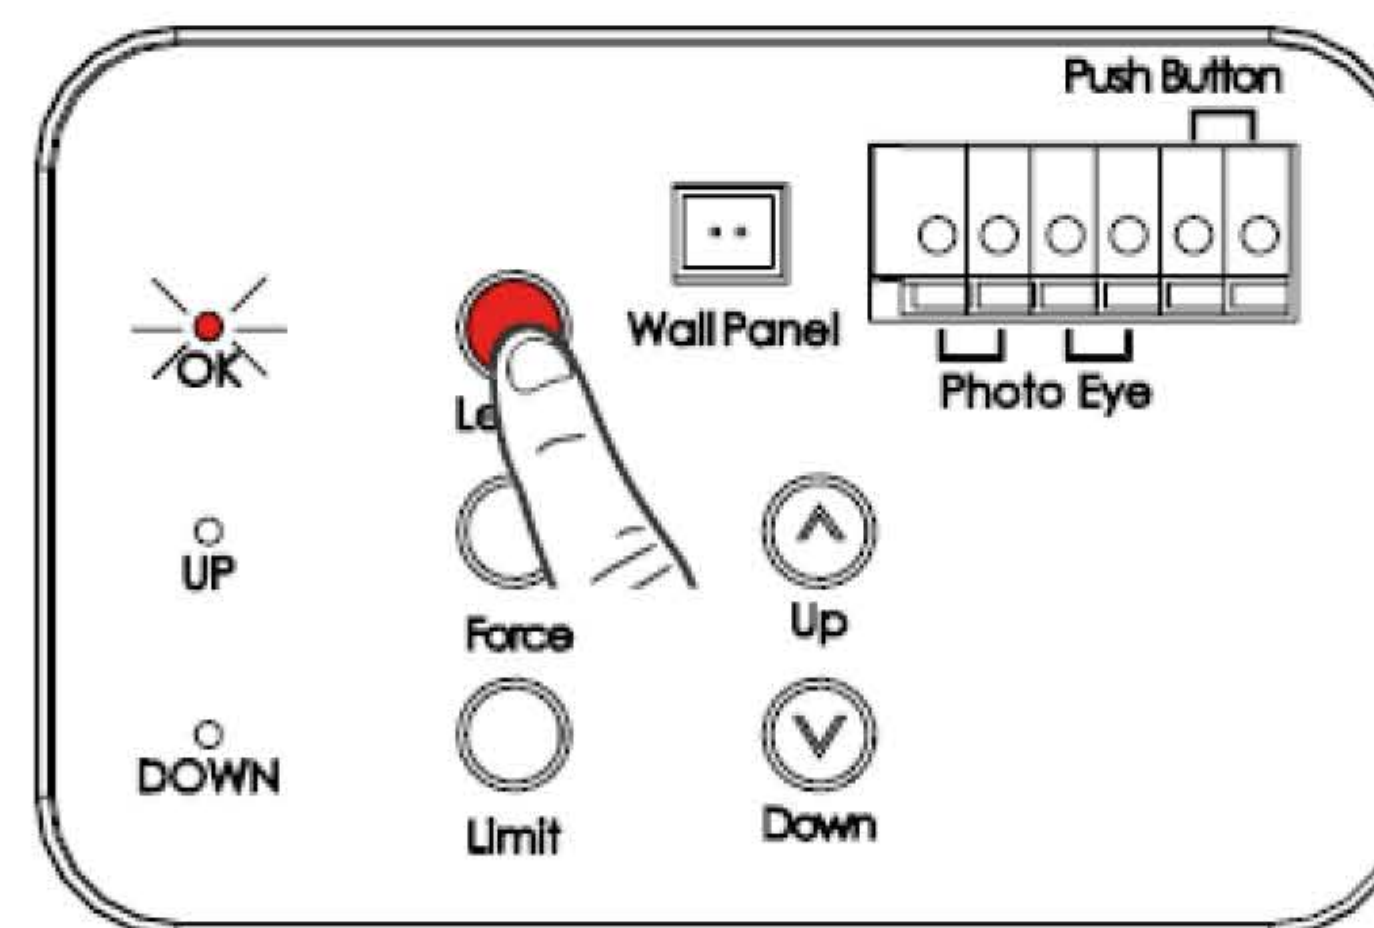

Press and hold
LEARN 3 sec

PROGRAMMING HANDHELD REMOTE CONTROL

When battery of hand held remote control is low, indicator LED will become dim and/or range of remote control will decrease. To replace battery, remove battery cover from remote control. Replace with a CR2032 3 volt battery.

