

INSTALLATION INSTRUCTIONS FOR WOOD MODELS AND FOR ALUMINUM MODELS

READ INSTRUCTIONS AND WARNINGS COMPLETELY BEFORE STARTING

IMPORTANT: Do not open folding attic ladder until instructed to in step number 3.

FOLDING ATTIC LADDER LOCATION:

Allow ample room for the swing clearance and the landing space of the folding attic ladder when it is opened (see Figure 3 and table 1). Locate the folding attic ladder rough opening so that when you enter the storage area, you will have adequate head clearance.

You must have a rough opening of 22 1/2" x 54" or 25 1/2" x 54". If not, proceed to the appendix for framing instructions.

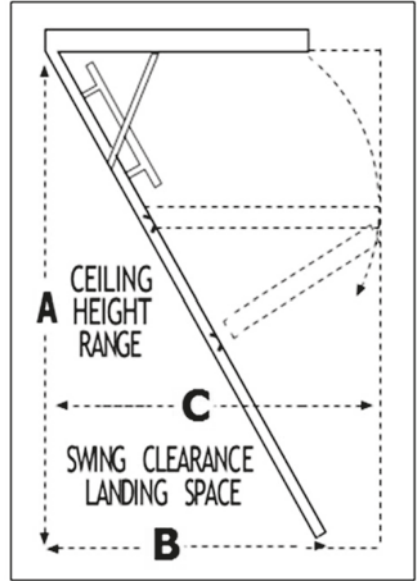


FIGURE 3

MODEL	ROUGH OPENING	CEILING HT. RANGE "A"	LANDING SPACE "B"	SWING CLEARANCE "C"
AA22101	25 1/2" X 54"	7' 8"- 10' 3"	* 66"	74"
AA25101	22 1/2" X 54"	7' 8"- 10' 3"	* 66"	74"

* FOR 10' 3" CEILING HEIGHT