 
Item # XXXXX XXXX Model # RS233Mb-M53-ORB-6



USE AND CARE GUIDE

SOLAR 10 LUMEN PATHWAY LIGHT WITH COLOR LOCK 6PK



Questions, problems, missing parts? Before returning to the store, call Hampton Bay Customer Service 8 a.m. - 7 p.m., EST, Monday - Friday, 9 a.m. - 6 p.m., EST, Saturday 1-855-HD-HAMPTON

HAMPTONBAY.COM

THANK YOU

We appreciate the trust and confidence you have placed in Hampton Bay through the purchase of this solar pathway light. We strive to continually create quality products designed to enhance your home. Visit us online to see our full line of products available for your home improvement needs. Thank you for choosing Hampton Bay!

Table of Contents

Table of Contents	2
Safety Information	2
Warranty	2
2-Year Limited Warranty	2
Pre-Installation	3
Planning Installation	3
Package Contents	3

Installation	4
Operation	5
Maintenance	6
Care and Cleaning	6
Troubleshooting	6
Service Parts	7
Model Type	7

Safety Information

Please read and understand this entire manual before attempting to assemble, operate or install the product.

For best performance, this solar light should be:

- Installed in a location with full and direct sunlight
- □ Installed in a location with minimal interference from other light sources
- $\Box\, \text{Not}$ installed in a shady area



CAUTION: This product contains nickel-metal hydride battery. The battery must be recycled or disposed of properly.



CAUTION: Do not dispose of batteries in fire or expose to excessive heat. Recycle all used batteries at a proper recycle facility.

NOTICE: Install the solar lights in full sunlight and allow their batteries to charge for 10-12 hours. It will take 8-12 entire charging and discharging cycles to reach the batteries' maximum capacity.

Warranty

2-YEAR LIMITED WARRANTY

WHAT IS COVERED

This warranty applies only to the original consumer purchaser and only to products used in normal use and service. If this product is found to be defective, the manufacturer's only obligation, and your exclusive remedy, is the repair or replacement of the product at the manufacturer's discretion, provided that the product has not been damaged through misuse, abuse, accident, modifications, alterations, neglect, or mishandling.

WHAT IS NOT COVERED


This warranty shall not apply to any product that is found to have been improperly installed, set-up, or used in any way not in accordance with the instructions supplied with the product. This warranty shall not apply to a failure of the product as a result of an accident, misuse, abuse, negligence, alteration, faulty installation, or any other failure not relating to faulty material or workmanship. This warranty shall not apply to the finish on any portion of the product, such as surface and/or weathering, as this is considered normal wear and tear.

Contact the Customer Service Team at 1-855-HD-HAMPTON or visit www.Hamptonbay.com.

PLANNING INSTALLATION

Before beginning installation of this product, make sure all parts are present. Compare parts with the package contents list. If any part is missing or damaged, do not attempt to assemble, install or operate the product.

PACKAGE CONTENTS

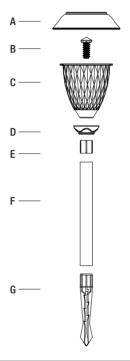

Part	Description	Quantity
А	Top Housing	6
В	Bolt with Reflector	6
C	Lens	6
D	Skirt	6
E	Nut	6
F	Mounting Pole	6
G	Ground Spike	6




IMPORTANT: Please keep small parts away from children.

Installation


Removing the isolation strip

- Before assembly, at the bottom of the top housing (A), pull off the isolation strip.
- □ Choose the preferred operating mode of the light using the switch located on the bottom of the top housing (A). The available settings are:
 - W (white): The light illuminates white.
 - C (colorful): The light illuminates in seven rotating colors.
 - L (lock): The light remains locked on the last color that was illuminated during C mode.

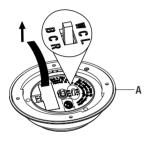

2 Assembling the lantern

- □ Use the nut (E) and bolt (B) to secure the skirt (D) to the lens (C).
- □ Twist and secure the lens (C) to the top housing (A). Attach the light assembly to the mounting pole (F) and ground spike (G).
- □ Push the assembly into the ground. DO NOT use a hammer. For ground with hard soil, use a trowel to loosen the soil before you push the assembly into the ground.

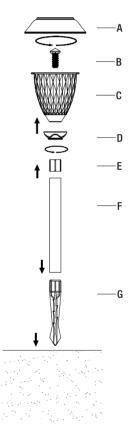

Operation

Replacing the battery

□Twist and remove the lens (C) from the top housing (A).

 


٠A

С

Replacing the battery 2 (Continued)

- □ At the bottom of the top housing (A), remove the compartment cover.
- □ Replace the old battery with a fresh NI-MH AA 1.2V 900mAh rechargeable battery.
- □ Replace the battery compartment cover.
- □ Reassemble the light.





CAUTION: This product contains nickel-metal hydride battery. The battery must be recycled or disposed of properly.



CAUTION: Do not dispose of batteries in fire or expose to excessive heat. Recycle all used batteries at a proper recycle facility.

Maintenance

□ Clean the solar module with a damp towel to ensure optimum performance of the solar fence light. Do not use any type of solvent for cleaning and be careful not to put too much pressure on the module while cleaning.

Care and Cleaning

Winter tips


□ Keep debris and snow off the solar panel (A) to allow the batteries to recharge. If the lights have been covered by snow for a long time, allow the batteries to recharge in full, direct sunlight for 10-12 hours, so they can maintain maximum capacity.

Troubleshooting

Problem	Possible Cause	Solution
The solar light does not turn on at night or its nightly run time is shorter.	The battery is not fully charged.	Ensure the solar light is located in an area where it can receive the maximum amount of full, direct sunlight every day. If the solar light does not receive enough sunlight during a day (e.g. due to cloudy or overcast weather conditions), the battery will be recharged on the next sunny day and resume normal operation. Keeping the solar panel clean is equally important to ensure the maximum charging performance.
	The solar light is installed close to other light sources.	Relocate the fixture or eliminate other light sources.
The battery is reaching the end of its useful life.		Replace the battery.

Service Parts

RS233Mb-M53-0RB-6

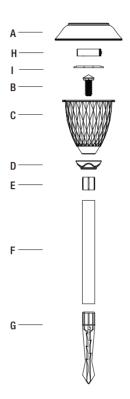

Part	Description	Quantity
Α	Top Housing (including (H) and (I))	6
В	Bolt with Reflector	6
С	Lens	6
D	Skirt	6
E	Nut	6
F	Mounting Pole	6
G	Ground Spike	6
н	Rechargeable Battery	6
I	Battery Compartment Cover	6



Questions, problems, missing parts? Before returning to the store, call Hampton Bay Customer Service 8 a.m. - 7 p.m., EST, Monday - Friday 9 a.m. - 6 p.m., EST, Saturday

1-855-HD-HAMPTON

HAMPTONBAY.COM

Retain this manual for future use.