

User Manual



Dear Customer,

Thank you for your purchase.

TOBBI is committed to providing affordable high-quality children products worldwide.

Thousands of children enjoy playing TOBBI products as a happy statement.

When you receive the product,

please make sure that all the parts are intact.

Then please browse the entire installation manual before assembly.

If problems occur unsatisfactorily as follows:

a.The outer box is damaged.

b.The product is damaged / bent / cracked while you open the box.

c.The parts / accessories / assembly tools are missing.

d.The product is hard to assemble.

e.The instructions are not clear and can not be referred to.

f.The product has functional problems.

g.Other aspects that you are not satisfied with.

Please do not hesitate to contact us through the email **service@tobbitoys.com** for help.

(Be sure to mark the SKU Number, e.g., TH17Ro366, and the TRACKING Number)

Our TOBBI team with factory direct after-sales service will reply within 24 hours and will do our best to resolve the problem for you.No matter which online platform you purchase (Amazon, Walmart, Buybuybaby, eBay, or others),our services will be available at any time.

Sincerely,
TOBBI Team

**TOBBI,
for Kids and Fun!**

PRODUCT ASSEMBLY**1. Specification:**

Motor	2 *15W
Battery	6V4AH*1
Charger	6V500MA
Speed	3km/hr

Suitable age : 37-96 months

Load Capacity: Under 30KGS

 
Size of car: 73*73*44CM

Power way: Charging type

Charge time : 8-12 hours

2.Packing list:

Number	Name	Quantity
1	Remote Control (optional)	1
2	Charger	1
3	Manual	1
4	Backrest	1
5	Screw pack	1

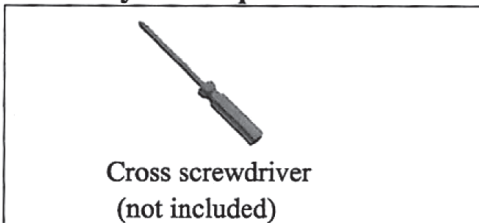Assembly tools required:

WARNING!

FOR THE SAFETY OF YOUR CHILDREN , PLEASE READ ALL WARNINGS AND ASSEMBLY/USE INSTRUCTIONS.KEEP THIS GUIDE FOR FUTURE REFERENCE.

- **ADULT ASSEMBLY REQUIRED.** The product contains small parts, which are for adult assembly only. Keep children away when assembling.
- Always remove protective material and poly bags and dispose before assembly.



WARNING!

PREVENT INJURIES AND DEATHS:

- **NEVER LEAVE CHILD UNATTENDED. DIRECT ADULT SUPERVISION IS REQUIRED.** Always keep child in view when child is in vehicle.
- This toy should be used with caution since skill is required to avoid falls or collisions causing injury to the user or third parties.
- Protective equipment should be worn.
- Never use in roadways, near cars, on or near steep inclines or steps, swimming pools or other bodies of water.
- Always wear shoes.
- Always sit on the seat.
- Not to be used in traffic.
- This toy is unsuitable for children under 37 months due to its maximum speed; Maximum user weight is 30 kgs.
- This toy has no brake.

PRODUCT ASSEMBLY

Rules for Safe Riding

- Keep Children within safe riding areas:

Never use in roadway, near motor vehicles, on lawn space , on or near steep inclines or steps swimming pools or other bodies of water;

Use the toy only on flat surfaces. Such as inside your house, garden or playground

- Never use in the dark . A child could encounter unexpected obstacles and have an accident. Operate the vehicles only in the daytime or well-lit area.
- It is prohibited to change the circuit or add other electric parts.
- Inspect wires and connections of the vehicle periodically
- Do not let any child touch the wheels or be near them when the car is moving.

NEVER pick up the battery by the wires or charger. Damage can occur to the battery and may cause a fire. Pick up the battery by the case ONLY.

- Charge the battery in a dry area ONLY.

 
- Battery posts, terminals and related accessories contain lead and lead compounds, chemicals known to the State of California to cause cancer and reproductive harm.

Wash hands after handling.

- Do not open the battery. Battery contains lead acid and other materials that are toxic and corrosive.
- Do not open the charger. Exposed wiring and circuitry inside case electric shock.. Only adults may handle or charge the batter. NEVER allow child to handle or charge the battery. Battery is heavy and contains lead acid (electrolyte).
- Do not drop the battery. Permanent damage to the battery could occur or cause serious injury.
- Before charging the battery, check for wear or damage to the battery, charger, its supply cord and the connectors. DO NOT charge the battery if any damage to parts has occurred.
- Do not allow the battery to drain completely. Recharge the battery after each use or once a month if not used regularly.

3.Operation Instruction:

A. Power Connecting & Install seat

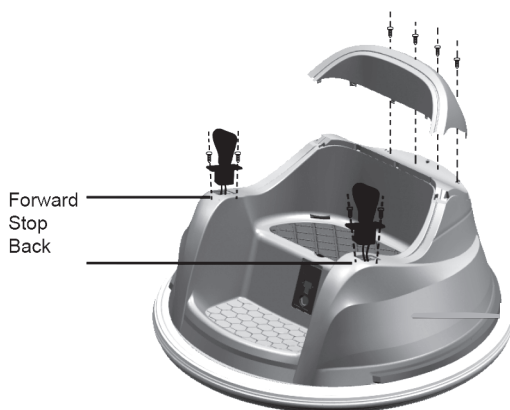

Paste the numbers or letters you like
The numbers 1 to 9 Or the letters A to G

PRODUCT ASSEMBLY AND WARNING

1. Open the battery under the seat, plug the power connector on the vehicle into the connector on the battery
2. Take out the manual and charger Remote Control
3. Cover the seat on the battery
4. Fix the seat with screw by cross screwdriver
5. Put the backrest into the hole of the big body first ,
Fix with 4x 12 tapping screws.
6. Put the control handle into the holes on both sides of
the body according to the direction of the arrow, and fix it with two 4x12 screws respectively.



WARNING:

To reduce the risk of injury, adult supervision is required. Never use in roadways, near motor vehicles, on or near steep inclines or steps, swimming pools or other bodies of water; always wear shoes, and never allow more than _1_ rider(s).



WARNING:

This toy contains lead-acid batteries that are non-replaceable.

Instructions to be given to the child in the proper use of the toy, particularly in the use of any braking system

A reminder that the toy should be used with caution since skill is required to avoid falls or collisions causing injury to the user or third parties.

 


WARNING:

- Non-rechargeable batteries are not to be recharged;
- Batteries are to be inserted with the correct polarity;
- Exhausted batteries are to be removed from the toy;
- Rechargeable batteries are only to be charged under adult supervision;
- Rechargeable batteries are to be removed from the toy before being charged.
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable batteries.
- Only use the charger specified by the manufacturer.
- Only use the battery specified by the manufacturer. ☒

VEHICLE INSTRUCTIONS

1. Forward-backward button: control the car forward or backward ,middle is stop
2. Socket : Charge

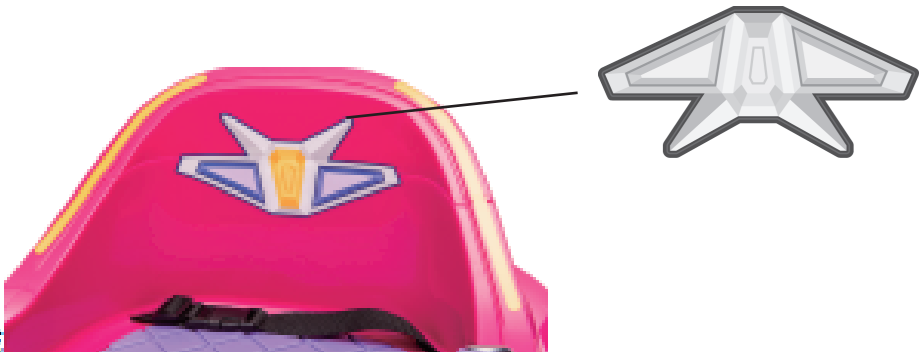 


BATTERY AND CHARGING

- Do not charge battery upside down.
- Always secure the battery with bracket, Battery can fall out and injure a child if vehicle tips over.
- The POWER SWITCH must be turned in OFF position when charging.
- Before the first use, you should charge the battery for 4-6 hours. Do not recharge the battery for more than 10 hours to avoid overheating the charger.
- When the vehicle begins to run slowly, recharge the battery.
- After each use or once a month minimum recharge times as 8 to 12 hours, less than 20 hours at most.

5. Charging

ONLY AN ADULT CAN CHARGE AND RECHARGE THE BATTERY!

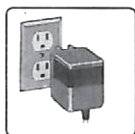

Put the charger plug into the socket as picture

6. Battery Replacement & Fuse

If the fuse is broken, there has a spare fuse in the fuse box under the seat or behind the body of the car. Replace and restart.

To avoid losing power , follow these guidelines:

- Do not overload the vehicle.
- Do not tow anything behind the vehicle.
- Do not drive up steep slopes.
- Do not drive into fixed objects, which may cause the wheels to spin, causing the motor to overheat.
- Do not drive in very hot weather, components may overheat.
- Do not allow water or other liquid to come in contact with the battery or other electric components.
- Do not tamper with the electric system. Doing so may create a short , causing the fuse to trip.

FAUIT HANDLING
7.Troubleshooting Guide

Problem	Possible Cause	Solution
Vehicle dose not run	Battery low on power	Recharge battery
	Fuse has broken	Replace,see<Fuse>
	Battery connector or wires are loose	Check that battery connectors are firmly plugged into each other. If wires are loose around the motor contact your distributor please
	Battery is dead	Replace battery , contact your distributor please
	Electrical system is damaged	Contact your distributor please
	Motor is damaged	Contact your distributor please
Vehicle dose not run very long	Batter is under charged	Check that the battery connectors are firmly plugged into each other when recharging
	Battery is old	Replace battery, contact your distributor please.
Vehicle runs sluggishly	Battery low on power	Recharge battery, contact your distributor please.
	Battery is old	Recharge battery, contact your distributor please.
	Vehicle is overload	Reduce weight on vehicle. Maximum user weight is 30 kgs.
	Vehicle is being used in harsh conditions	Avoid using vehicle in harsh conditions, see<safety>
Vehicle needs a push to go forward	Poor contact of wires or connectors	Check that the battery connectors are firmly plugged into each other. If wires are loose around the motor, contact your distributor please.
	"Dead Spot" on motor	A dead spot means the electric power is not being delivered to the terminal connection and the vehicle needs repair. Contact your distributor please.
Loud grinding or clicking noises coming from motor or gear box	Motor or gears are damaged	Contact your distributor please.
Battery with not recharge	Battery connector adapter connector is loose	Check that the battery connectors are firmly plugged into each other.
	Charger not plugged in	Check that the battery charge is plugged into a working wall outlet.

MAINTAINING

	Charger is not working	Contact your distributor please.
Charger feels warm when recharging	This is normal and not a cause for concern	

Completely read through this manual and the troubleshooting guide table before calling. If you still need help resolving the problem **Contact your distributor please.**

8.Maintaining

- It is parents' responsibility to check main parts of the toy before using, Must regularly examine for potential hazard, such as the battery, charge, cable or cord, plug, screws are fastening enclosure of other parts and that in the event of such damage, the toy must not be until that damage had been properly removed.
- Make sure the plastic parts of the vehicle are not cracked or broken.
- Occasionally use a lightweight oil to lubricate moving parts such as wheels.
- Park the vehicle indoors or cover it with a tarp to protect it from wet weather.
- Keep the vehicle away from sources of heat, such as stoves and heaters. Plastic parts may melt.
- Recharge the battery after each use. Only an adult can handle the battery. Recharge the battery at least once a month when the vehicle Raider is not being used.
- Do not wash the vehicle with a hose. Do not wash the vehicle with soap and water. Do not drive the vehicle in rainy or snowy weather. Water will damage the motor, electric system and battery.
- Clean the vehicle with a soft, dry cloth. To restore shine to plastic parts, use a non-wax furniture polish. Do not use car wax. Do not use abrasive cleaners.
- Do not drive the vehicle in loose dirt, sand or fine gravel which could damage moving parts, motors or the electric system.
- When not using, all the electrical source should be turn off. Turn off the power switch and disconnect the battery connection.



Scan ! To find more surprise!