

Log Lighter Gas Ball Valve Installation Instructions


Installation Notes

- For use with natural gas and LP gas only.
- Always follow ALL local building and plumbing codes during installation.
- Use only black gas pipe and secure piping every five feet or less.
- Remove any debris from male and female threads before connecting.
- Always use a pipe joint compound or P.T.F.E. pipe thread tape on all connections to seal threads.


Log Lighter Valve

- 1** Turn off the gas line to the firebox or, if necessary, the main gas line
- 2** Determine which side of the firebox the valve will be installed.
Drill a 1¼" hole for the flange and valve. Thread the valve into the flange from below the floor or behind the wall.
- 3** Run ½" gas pipe from the valve and extend approximately 3½" into the firebox if coming from the side, or 1½" if coming from below. Cap off firebox stub with threaded ½" cap.
- 4** Run ½" gas pipe from the gas source to a ½" lever-type ball valve.
- 5** Run ½" gas pipe from the lever-type ball valve to a ½" gas pipe union.
- 6** Run ½" gas pipe from the valve to the union and thread the union together.
Test all new connections with a liquid leak detector.

Angle Valve Installation

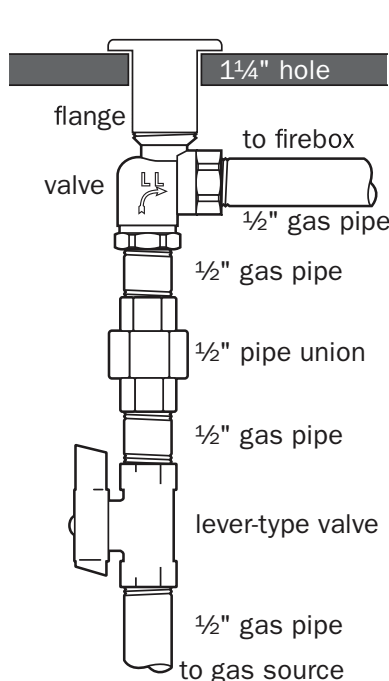

Straight Valve Installation

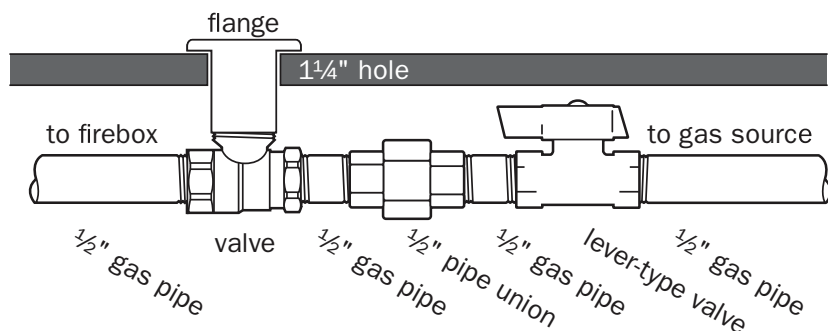

Temperature Ratings:

Minimum: 32° F / 0° C

Maximum: 125° F / 51.6° C

Canterbury Enterprises

1-800-321-6566 • www.blueflamestore.com