


USE AND CARE GUIDE

WILSHIRE HEIGHTS 7-PC DINING SET (2pc Swivel Chairs Assembly)

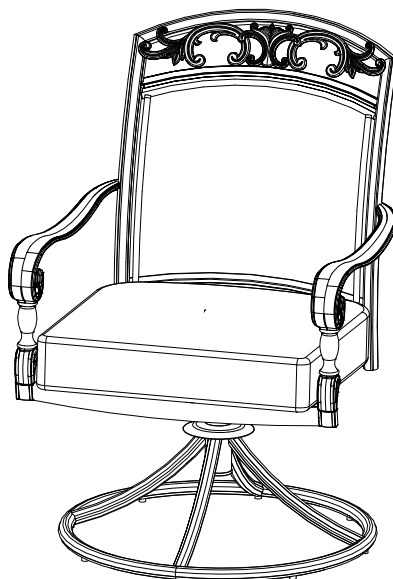

Questions, problems, missing parts? Before returning to the store,
call Home Decorators Collection Customer Service
8 a.m. - 7 p.m., EST, Monday - Friday, 9 a.m.- 6 p.m., EST, Saturday

1-800-986-3460

HOMEDEPOT.COM/HOMEDECORATORS

THANK YOU

We appreciate the trust and confidence you have placed in Home Decorators Collection through the purchase of this dining set. We strive to continually create quality products designed to enhance your home. Visit us online to see our full line of products available for your home improvement needs. Thank you for choosing Home Decorators Collection!

Table of Contents

Table of Contents	2	Pre-Assembly.....	3
Important Safety Instructions	2	Planning Assembly	3
Warranty	2	Hardware Included.....	3
5 Year Frame and Fabric Limited Warranty	2	Package Contents	3
What Is Covered	2	Assembly.....	4
What Is Not Covered	2		
Care & Cleaning	2		

Important Safety Instructions

SAVE THESE INSTRUCTIONS



WARNING:

Do not try to rock these swivel chairs.

READ ALL THE INSTRUCTIONS BEFORE USE

When using a furnishing, basic precautions should always be followed, including the following:

Read all instructions before using this furnishing. To reduce the risk of injury to persons:

- Close supervision is necessary when this furnishing is used by or near children, or disabled persons, if applicable.
- Use this furnishing only for its intended use as described in these instructions. Do not use attachments not recommended by the manufacturer.

Warranty

5 YEAR FRAME AND FABRIC LIMITED WARRANTY

WHAT IS COVERED

We warrant the frame and fabric (if included) to be free of manufacturing defects to the original purchaser for five years.

WHAT IS NOT COVERED

It remains the customer's responsibility for the freight and packaging charges to and from our service center. This warranty does not cover commercial use, hardware, acts of nature, fire, freezing and abusive use. In addition, the purchased parts are not covered under this warranty. We reserve the right to make substitutions with similar merchandise, if the model in question is no longer in production.

Care & Cleaning

Before using, wipe with a clean, dry cloth. Do not use bleach or solvents. Treat the frame with one step liquid wax for maximum protection against UV light and salty, damp air. When not in use, store the furniture in a cool, dry place.

If your set includes cushions, they may be cleaned by hand with a mild solution of soap and water.

Rinse the cushion thoroughly and allow to drip dry.

Do not machine wash or tumble dry, as the cushions may shrink. Do not use bleach or solvents on fabrics.

When cleaning the tabletop make sure to use a soft, clean cloth that doesn't bleed color as well.

You may contact the Customer Service Team at 1-800-986-3460 or visit www.HomeDepot.com/HomeDecorators.

Pre-Assembly

 
PLANNING ASSEMBLY

It will take two people about 20 minutes to complete the assembly process.

HARDWARE INCLUDED



NOTE: Hardware is not shown to actual size.



AA



BB



CC



DD



EE



 
FF



GG




HH



II

Part	Description	Quantity
AA	Bolt (M8x40)	8
BB	Washer (D8)	8
CC	Lock washer (D8)	8
DD	Nut (M8)	8
EE	Washer plate	4
FF	Bushing	2
GG	Bolt cap (M8)	8
HH	Nut cap (M8)	4
II	Wrench	2


PACKAGE CONTENTS

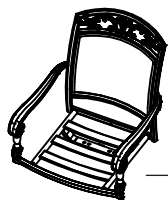


A



 B



C

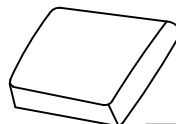


E

Part	Description	Quantity
A	Seat and back	2
B	Chair base	2
C	T-rock	2
E	Seat pad	2



1 Attaching the T-rock to the chair seat

- ☐ Place the seat and back (A) upside down on a flat ,smooth surface.
- ☐ Align the T-rock (C) to the U-bar of the seat and back.
- ☐ Attach the T-rock to the U-bar with the washers plates (EE) and the bolts (AA) below the U-bar and also with the washers (BB), the lock washers and the nuts (DD) above the triangular plate of the T-rock using the wrenches (II).
- ☐ Fully tighten all the bolts and nuts once all of them are in place.
- ☐ Cover all the bolts with the bolt caps (GG). Cover all the nuts with the nut caps (HH).

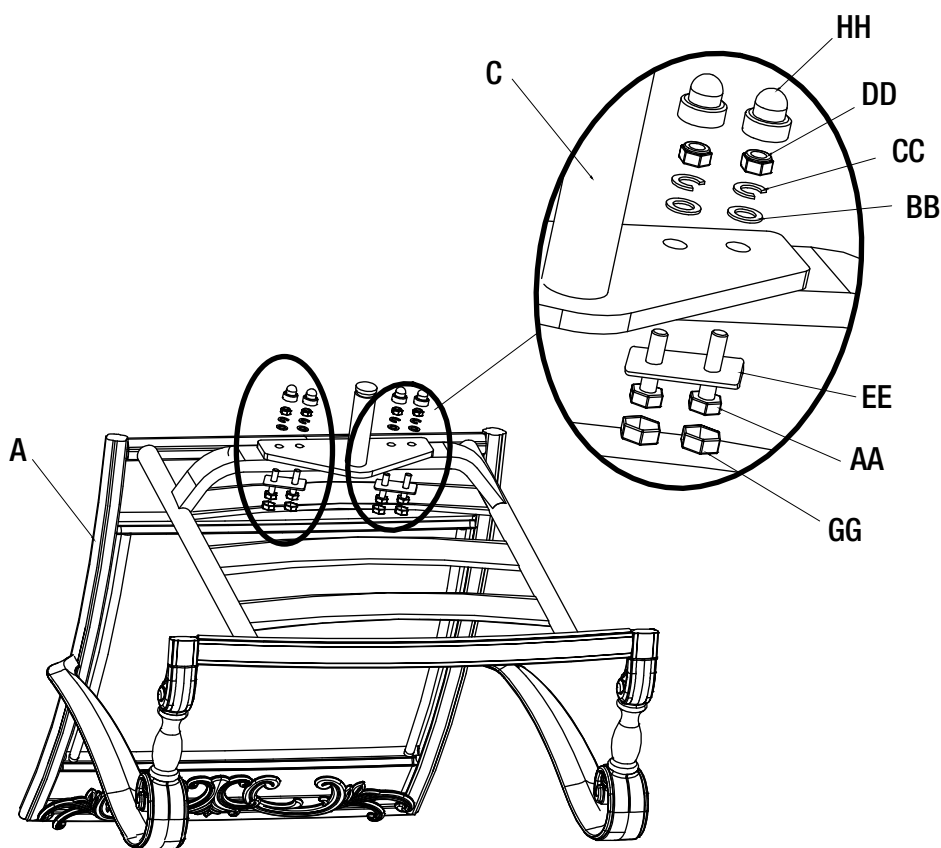


2 Attaching the chair base

- ☐ Place the chair base (B) on a flat, smooth surface.
- ☐ Insert the bushing (FF) into the center of the chair base.
- ☐ Turn the chair seat upright.
- ☐ Plug the shaft of the T-rock into the center of the chair base until an audible click is heard.

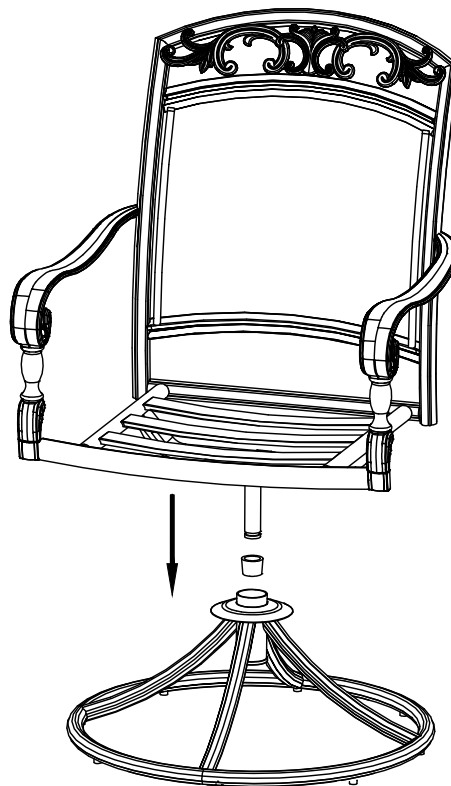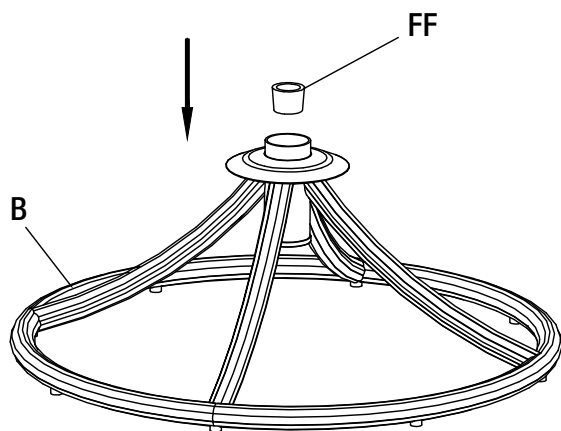

3 Placing the cushion (E) on the chair

- ☐ Repeat Step 1 to 3 for the other swivel chair.

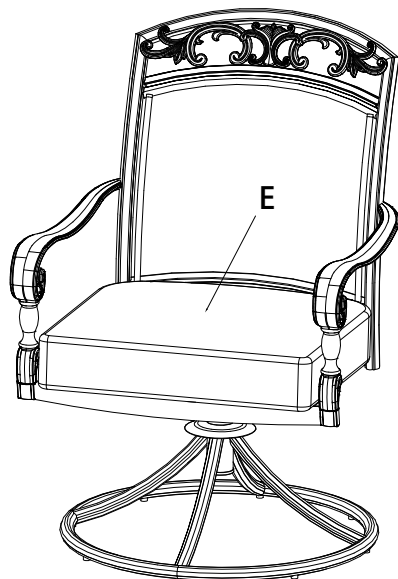

HOME DECORATORS COLLECTION®

Questions, problems, missing parts? Before returning to the store,
call Home Decorators Collection Customer Service
8 a.m. - 7 p.m., EST, Monday - Friday, 9 a.m.- 6 p.m., EST, Saturday

1-800-986-3460

HOMEDEPOT.COM/HOMEDECORATORS

Retain this manual for future use.