


Item # 1004400923/1004400898 1006743576/1006743589 Model # PT7024BK/PT7024WH PT7024BKB/PT7024WHB

## **USE AND CARE GUIDE**

BLACK OPEN FRAME WITH HAZE WOOD DESK WITH 2 DRAWERS WHITE OPEN FRAME WITH NATURAL WOOD DESK WITH 2 DRAWERS 41.7 IN. H WHITE COLOR DONNELLY METAL DESK 41.7 IN. H BLACK COLOR DONNELLY METAL DESK

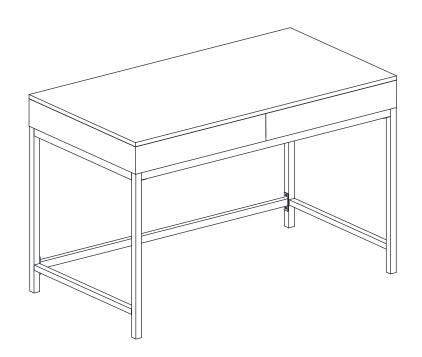

Questions, problems, missing parts?

Before returning to the store, call Customer Service.

8 a.m. – 7 p.m., EST, Monday – Friday, 9 a.m. – 6 p.m., EST, Saturday

1-877-527-0313

**HOMEDEPOT.COM** 

#### THANK YOU

## **Table of Contents**

Fable of Contents	
Safety Information	2
Warranty	
1 Year Warranty	
What is Covered	2
What is Not Covered	2
Pre-assembly	3
Planning Assembly	
Tools Required	3
Hardware Included	3

Pre-assembly (continued)	4
Package Contents	
Assembly	5
Maintenance	6
Care and Cleaning	6
Troubleshooting	6

## **Safety Information**



#### **DANGER**

- Keep small parts away from children during assembly.
- Read and follow instructions carefully.



#### **WARNING**

- ☐ Read these instructions carefully and keep in a safe place. ☐ TO GUARANTEE THE SAFE USE OF THIS PRODUCT, FOLLOW THE WARNINGS, GUIDELINES AND RECOMMENDATIONS IN THIS MANUAL.
- Adult assembly required.
- Small parts may present choking hazard prior to assembly.



## **CAUTION**

- ☐ Do not use power tools to assemble your furniture. Power tools may strip or damage parts/product.
- Do not overtighten connectors (screws, bolts, etc.). Overtightening can lead to product damage.
- Be sure to check all packing materials carefully for small parts that may have come loose inside the carton during shipment. If parts are missing, contact THE HOME DEPOT to obtain any missing parts.
- DO NOT USE SUBSTITUTE PARTS.
- This product should only be used on a flat, level surface. Product is designed to hold 100lbs for the table and 30 lbs for drawers. Exceeding this limit may damage the product or cause injury to the user.
- Assembly requires two people; assembly alone may cause

## Warranty

#### 1 YEAR WARRANTY

#### WHAT IS COVERED

We guarantee this product to be free of manufacturing defects to the original purchaser for one year.

#### WHAT IS NOT COVERED

This warranty does not cover commercial use, acts of nature, and abusive use.

# **Pre-assembly**

#### **PLANNING ASSEMBLY**

Ensure all parts and components are present before beginning assembly. Assemble on a soft, smooth surface to prevent damage to product finish. Do not overtighten screws and bolts to avoid stripping.



NOTE: DO NOT use power tools.



Phillips screwdriver

#### HARDWARE INCLUDED



NOTE: Hardware not shown to actual size.










Part	Hardware list	Quantity
AA	Bolt 1/4x12mm	12
BB	Screw 15mm	8
CC	Allen wrench	1

# Pre-assembly (continued)

## PACKAGE CONTENTS

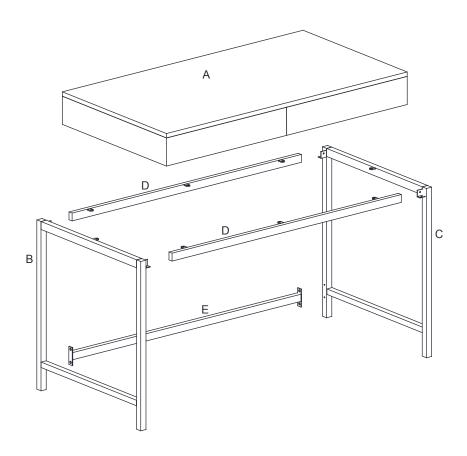


Part	Part Description	Quantity
Α	Top case	1
В	Left side frame	1
С	Right side frame	1
D	Top stretcher	2
Е	Bottom stretcher	1

## **Assembly**


# Attaching the legs

☐ Attach the top stretcher (D) to the side frame (C) and (D) with bolts (AA). Tighten with Allen wrench (CC) after all bolts are completely lined up and inserted into the holes.

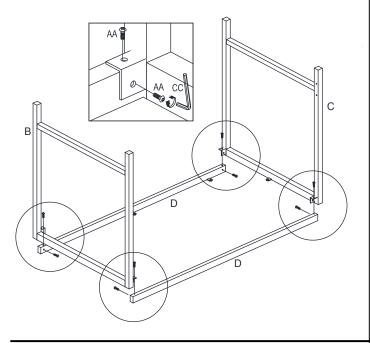

# **2** Attaching the stretcher


☐ Attach the bottom stretcher (E) to the side frames, with bolts (AA) and tighten with Allen wrench (CC).

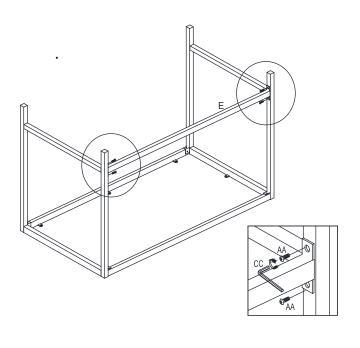

# 3 Attaching the stool legs

☐ Put the top case (A) on a soft, smooth surface and attach the metal frame to the back of top case (A) with screws (BB).

Use a Phillips screwdriver (not included) to tighten the screws.

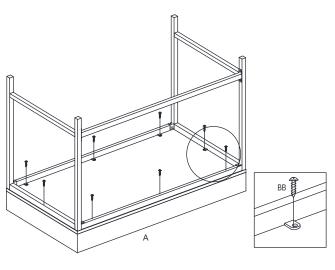

# 4 Tightening all the bolts

☐ Put the table on the level surface and fully tighten all bolts previously installed with allen wrench. Tighten all the bolts on a level surface.



NOTE: If the table legs are not on the floor.
You can adjust levelers properly (on the bottom of legs)
You may need to loosen the bolts. Apply some weight on
the table to get all legs on the floor and then tighten the
bolts at that positon.



## **Maintenance**

Check bolts/screws periodically and tighten them if necessary.

## **Care and Cleaning**

- Dust this item regularly with a soft, lint-free cloth to prevent soil buildup.
- □ Wipe away spills immediately to prevent staining using a clean cloth dampened with water.
- Do not use liquid or abrasive cleaners on the metal frame, as this may damage the finish.

# **Troubleshooting**

Problem	Solution
Not all of the product's legs touch the floor.	Make sure adjustable center feet levelers are adjusted properly. The levelers are pre-assembled on the bottom of the legs.
the noof.	The product is KD construction. You may need to loosen the bolts and place the product on a flat surface. Ensure that the legs all touch the flat surface and then re-tighten the bolts.
	Loosen all the bolts and apply some weight to the product to get all the feet to touch the floor. Then re-tighten the bolts in that position.
One or more of the bolts do not fit in the holes correctly.	The product is KD construction. Do not fully tighten the bolts before all the bolts are completely lined up and inserted into holes. Loosen the bolts and make sure all bolts are lined up and inserted into the holes.

# **StyleWell.**

Questions, problems, missing parts?

Before returning to the store, call Customer Service
8 a.m. – 7 p.m., EST, Monday – Friday, 9 a.m. – 6 p.m., EST, Saturday

1-877-527-0313 HOMEDEPOT.COM

Retain this manual for future use.