



RYOBI

LAWN MOWER **BEST PRACTICES**

BAG REPLACEMENT

- Replace your bag if you notice any physical damage, like holes or tearing

BLADE REPLACEMENT

- Replace your blade at least once a year
- Replace your blade if your grass length is uneven after cutting

TOOL STORAGE

- Summer Storage: Avoid leaving out in exposed sunlight
- Winter Storage: Avoid leaving out in freezing weather
- Store your mower in a garage or insulated outdoor shed
- Do not store in areas that have potential water damage

CLEANING & CARE

- Use a blower to clear debris and grass clippings
- Use a damp cloth to remove mud or harder substances
- Do not spray the top cover/battery with water

BATTERY STORAGE

- Charge batteries after using the tool, so they are ready to use the next time you need them
- Once the batteries are fully charged, remove them from the charger
- Store batteries in a cool, dry place

BATTERY CARE

- Remove batteries after each use
- Ensure there is no debris in the battery box or on the battery before storing

ALWAYS READ AND FOLLOW THE WARNING AND INSTRUCTIONS IN THE OPERATOR'S MANUAL