


Lawn Aerator



 



installation manual

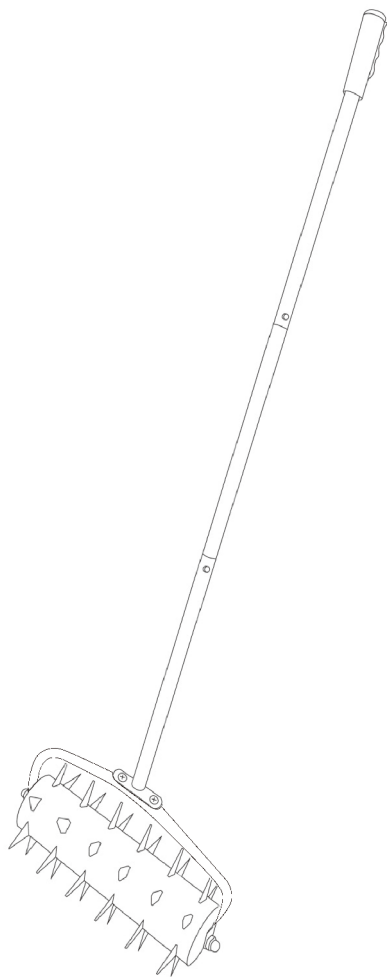

Please follow the installation steps below and contact us if you have any other questions.

01


PART LIST

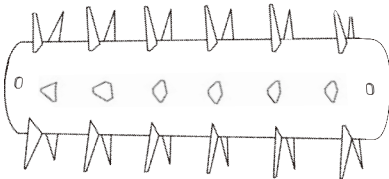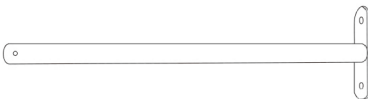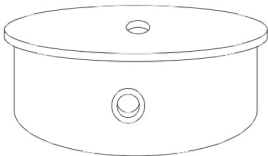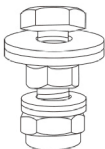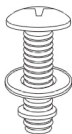(A) Roller  1pc	(B) U-shaped support  1pc		
(C) T handle  1pc	(D) Connect handle  1pc		
(E) Handle with cover  1pc	(F) Round plate  2pcs		
(a) M10  2pcs	(b) M6  2pcs	(c) M6  8pcs	(d) M8  2pcs


02

INSTALLATION STEPS


- 1 Open a, put one washer inside of F, insert bolt; Put another washer, tighten the nut. Like picture shows. Repeat this step at another side.

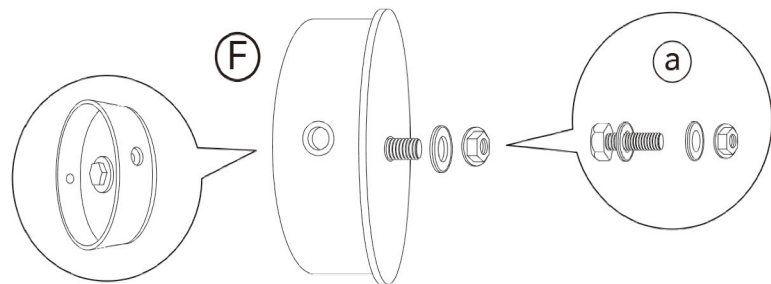

- 2 Install F into A. (PLEASE : ALIGN THE SEAM ON F. WITH THE SEAM ON A.) Then install and tighten c. (The nut have already welded on round plate)

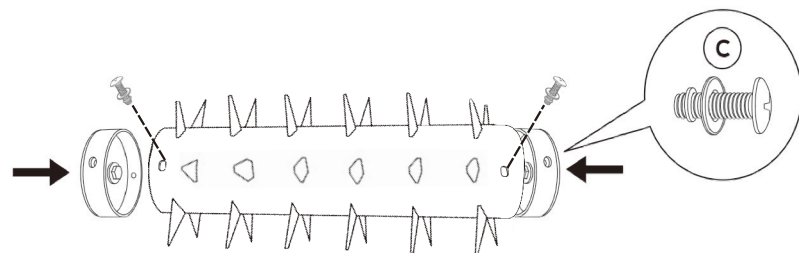


- 3 Install B like picture shows. Put washer and tighten the nut (DON'T TIGHTEN IT TOO TIGHTLY, otherwise the roller couldn't works.)

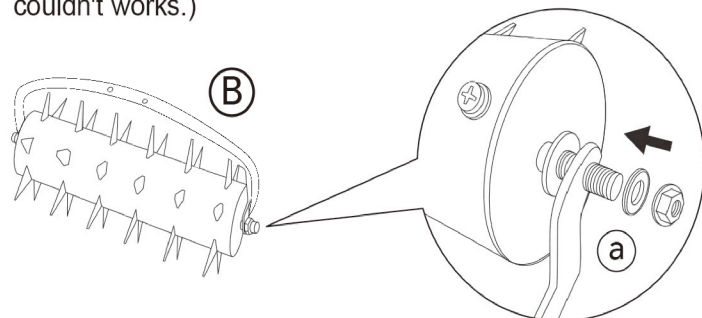


03

INSTALLATION STEPS

- 4 Use b screws install C onto B.

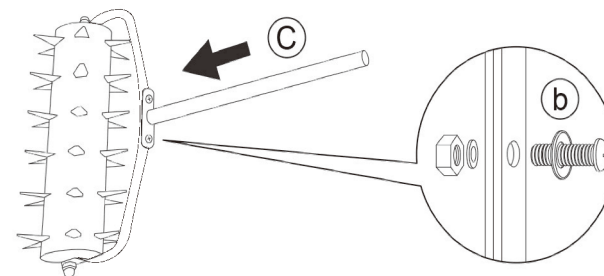

- 5 Use D to connect C and E.

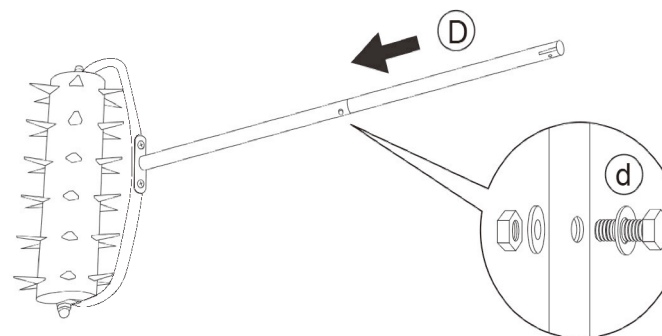

- 6 Installation complete.

