

VIVOHOME

THANK YOU!

NOTE:

To continuously improve its products, VIVOHOME reserves the right to modify this information without prior notification.

For any questions regarding assembly, please watch the video on the product page or contact our customer service. Our customer service will gladly assist you with any additional questions, comments, or concerns.

Thank you for using VIVOHOME products in your home!


Thank You for Purchasing from

VIVOHOME
Made in China

VIVOHOME

HOW-TO

USER MANUAL

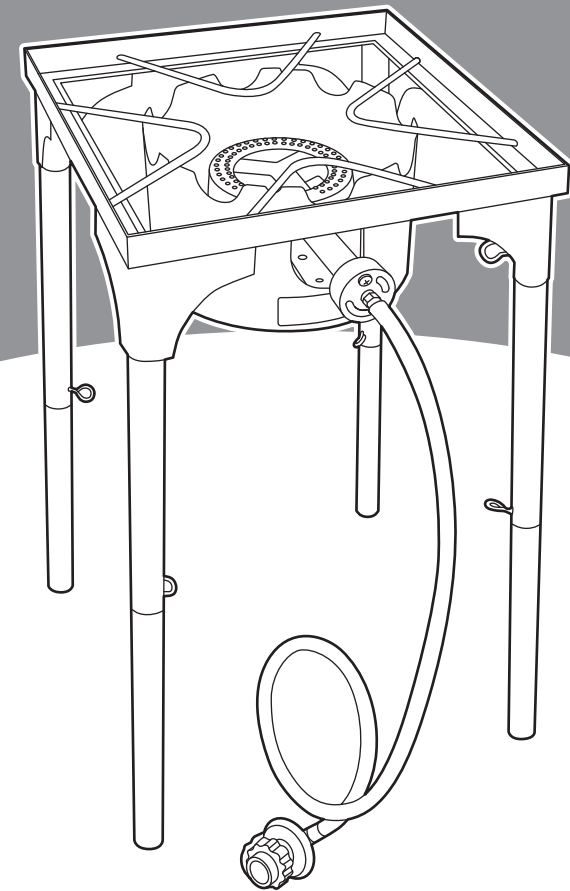

Single Burner Camp Stove

Assembly is EASY!

**WE WANT
YOU TO
ENJOY LIFE
AT HOME**

GO TO THE PRODUCT LISTING PAGE
FOR AN INSTRUCTIONAL VIDEO!

CONTENTS

Safety Instructions	1
Preparation	2
Lighting Instructions	2
Cleaning	3
Storage	3
Assembly	4
Expanded View&(Part List)	4
Assembly Instructions	5
Warranty	7

SECTION A

Safety Instructions



1. Propane gas is highly flammable and under pressure in the cylinder or tank. Do Not store or use gasoline or other flammable liquids or vapors in the vicinity of this stove. If you detect the odor of gas, immediately evacuate the enclosed area and contact the appropriate authorities/professionals.
2. Do not store or use gasoline or other liquids with flammable vapors in the vicinity of this or any other appliances.
3. IF YOU SMELL GAS:
Do Not attempt to light appliance.
Extinguish any open flame.
Disconnect from the fuel supply.
4. Read and follow all instructions.
5. When used in an enclosed area, allow for ample ventilation.
6. Do not expose the propane source to excessive heat.
7. Always inspect the stove, propane source and connectors for damage, debris or dirt before attaching the cylinder to the stove.
8. Always attach/detach the propane source away from any open flame or pilot light and only after the stove has cooled.
9. Always inspect the burner holes for obstructions prior to operation. Do not operate if any blockage is found.
10. Do not use or operate if either the stove or propane source is found to be damaged.
11. Always disconnect the propane source when not in use or transporting. Store in an upright position and in a cool, well-ventilated area.
12. Be sure to tightly secure all connections to the propane cylinder prior to usage.
13. Absolutely never operate the stove near any flammable liquids or vapors and keep all flammable or combustible materials.
14. Discontinue operation and close valve if:
Ambient temperature drops below -10°F (-23°C).
There is no fuel remaining in the propane cylinder.
Lighting cannot be performed quickly or easily.
Combustion becomes unstable or there are repeated flame-outs.
15. Absolutely do not use it as a space heater, for illumination, or in a tent.
16. Keep out of the reach of children.
17. Supply plenty of fresh air when using the camp stove. Do not obstruct the flow of combustion air or ventilation air.
18. Stove produces heat. Keep stove away from burnable materials. Do not place the stove any closer than 24" to the combustibles.

19. Use a flat, level support surface where the stove is safe from accidental tipping.
20. Use only with propane fuel tanks.
21. Use only the regulator included with your stove. Do not attempt to alter.
22. DO NOT attempt to connect your camp stove to a natural gas supply. Use only with propane hose and regulator supplied with the stove and an approved bulk propane tank.

SECTION B

Preparation



1. Place stove on a level, stable surface.
2. Attach propane hose to the brass stove inlet fitting.
3. Make sure propane bulk tank valve is closed.
4. Attach propane hose to the outlet of propane tank.
5. Slowly open propane tank valve and check for leaks by applying a small amount of liquid soap and looking for bubbles to appear.

SECTION C

Lighting Instructions



1. Hold an extended lighter flame near the burner. Slowly open the regulator valve on the stove.
2. Adjust the flame to the desired height. Flame should be compact and blue with a slight yellow tip. If the flame is too "yellow", adjust the air mixture valve under the throat of the cast burner (Fig. 1) until the flame color is achieved.
3. The burner outlets will change to a light gray/white after heating and use. This is normal.
4. After use, let the stove cool for 15 minutes before storage or transport.

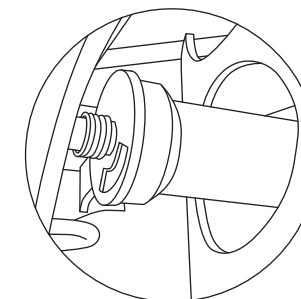


Fig. 1

SECTION D Cleaning



1. Turn valve on propane tank to the OFF position.
2. Allow burners and steel grate to cool completely.
3. Remove propane hose from tank and stove.
4. Stove may be wiped down with warm soapy water.
5. Allow stove to dry thoroughly before storage.
6. Never store stove with propane hose.

SECTION E Storage



1. DO NOT leave propane tank attached to stove during storage or transport.
2. Wipe the burners, steel cooking grate, and propane hose before storing.
3. It is suggested to store stove and hose in a nylon storage bag to keep them clean.


CAUTION: DO NOT attempt to connect your camp stove to a natural gas supply. Use only with propane hose and regulator supplied with the stove and an approved bulk propane tank.

SECTION F Assembly



WARNING: Whilst every effort has been made in the manufacture of your barbecue to remove any sharp edge, you should handle all components with care to avoid accidental injury.

NOTICE: Make sure all the plastic protections rip off before assembling!

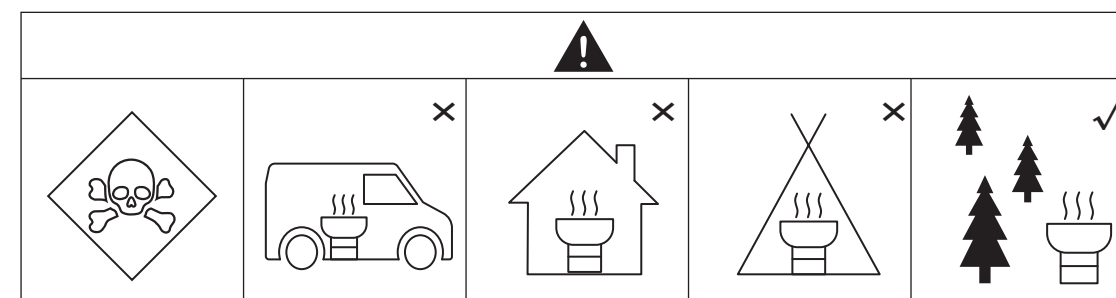

SECTION G Expanded View&(Part List)




A	B	C	D	E
Stove X 1	Upper Leg X 4	Bottom Leg X 4	Fastener X 8	Propane Hose X 1




Connect the 4 upper legs to the stove and connect the 4 bottom legs to the upper legs.


Use the fasteners to secure the connection.

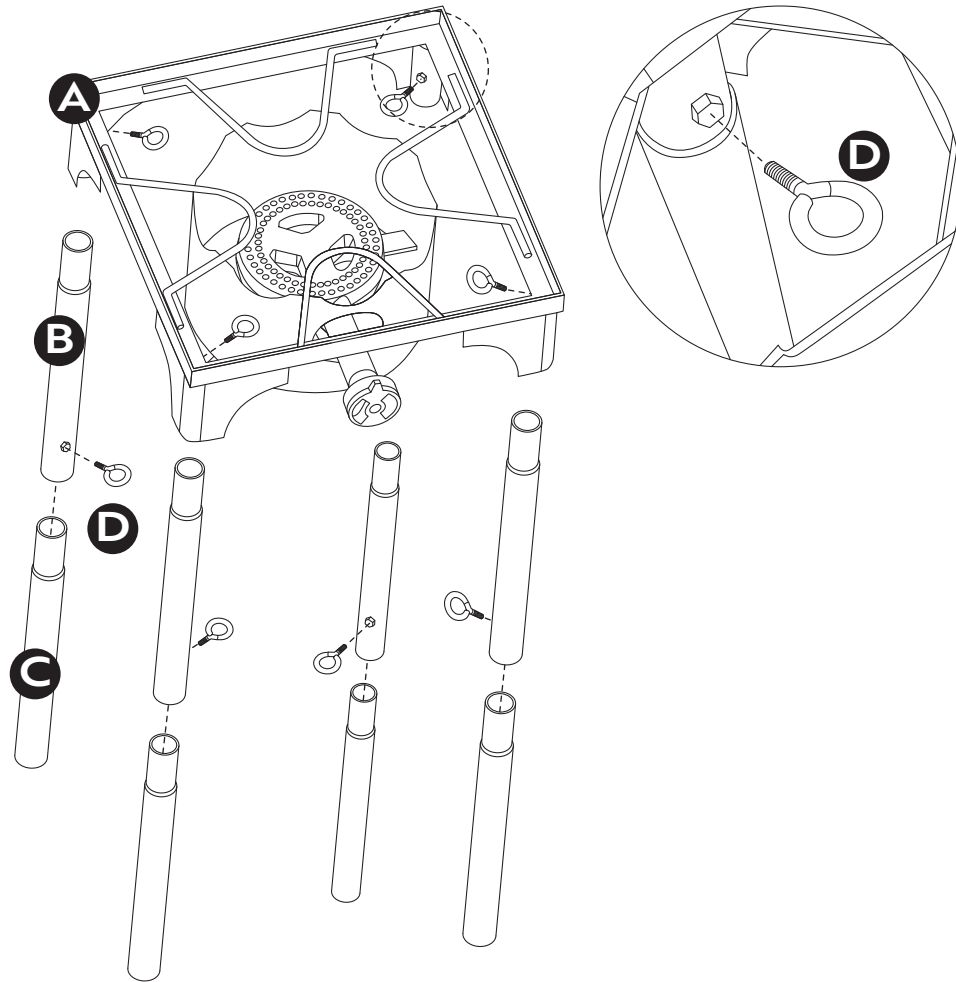

Connect the propane hose to the stove as shown.

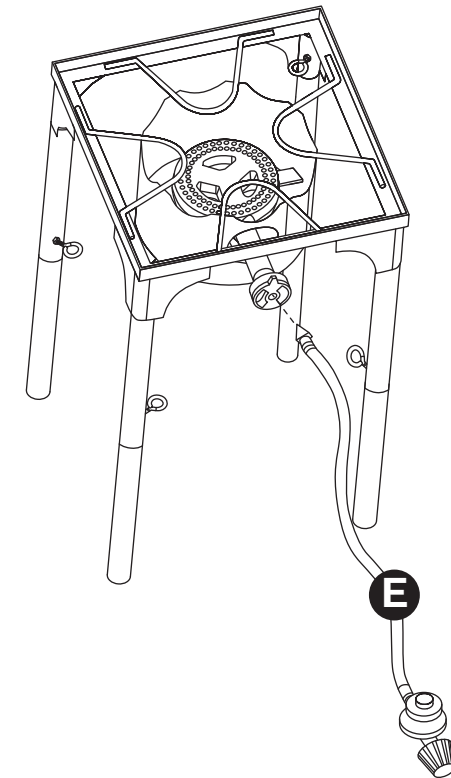

Installation completed.

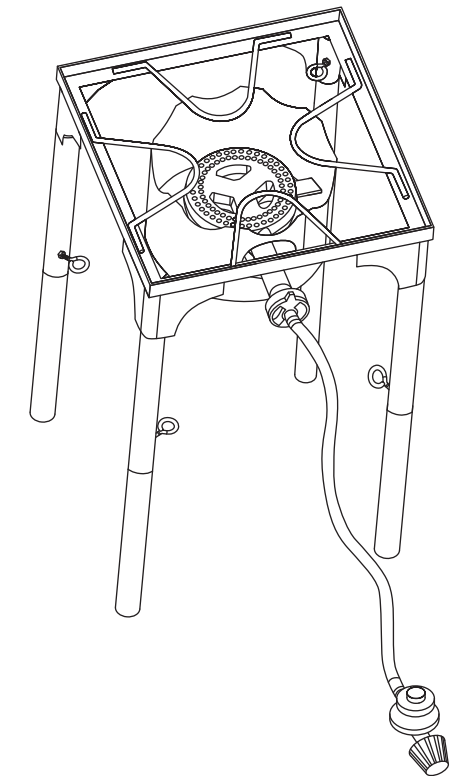



The VIVOHOMES warranty program is our commitment to you. We are committed to providing you with a high-quality product that meets your needs and expectations. To demonstrate our confidence in the durability and performance of our products, we offer the following warranty.

Warranty Coverage

This warranty program applies to any orders, purchases, receipts, or use of any products sold by VIVOHOMES and is valid for a period of 1 year from the date of purchase. However, please note that this warranty period is only valid for the original order. If you receive a replacement order during the warranty period, it will not include a separate warranty period.

Warranty Exclusions

This warranty does not cover damage resulting from misuse, accident, unauthorized modification, or any other circumstances not directly related to the manufacturing and design of the product, including but not limited to:

- Parts lost during use.
- Normal wear and tear of products or parts.
- Incorrect installation (such as using the wrong voltage) or assembly.
- Exceeding the bearing capacity of the product.
- Use under extremely harsh conditions.
- Improper cleaning or maintenance.
- Damage caused by any reason other than the intended use of the product.
- Indirect loss or damage caused by the product.

How to Make a Warranty Claim

If you find any defects that affect the use of the product or if the product stops working and cannot be repaired during the warranty period, please contact our customer service team at our email or via Amazon & app's direct messaging service as soon as possible. Provide the following information to expedite the process:

- Order number
- Images and/or videos illustrating the issue
- A detailed description of the problem

VIVOHOMES will provide technical support, replacement, refund, or other solutions based on the nature of the issue. If you wish to return the original package for any reason, please contact us for confirmation before proceeding. You can expect to receive a response within 48 hours.

Thank you for choosing VIVOHOMES. We are committed to ensuring the quality and satisfaction of your purchase. If you have any questions or need assistance, please do not hesitate to contact our customer service team.