



# 12V ELECTRIC CHAINSAW SHARPENER



## WARNING

This product contains or, when used, produces a chemical known to the State of California to cause cancer and birth defects or other reproductive harm.  
(California Health & Safety Code § 25249.5, et seq.)

*\*Actual product may vary slightly*

Please carefully read and save these instructions before attempting to assemble, maintain, install, or operate this product. Observe all safety information to protect yourself and others. Failure to observe the instructions may result in property damage and/or personal injury. Please keep instructions for future reference.

For warranty purchases, please keep your dated proof of purchase. File or attach to the manual for safe keeping.

This electrical powered chain saw sharpener is designed to sharpen most type of chainsaw chains

## IMPORTANT SAFETY INFORMATION

Wear eye protection and dust mask. Grinding will cause dust and sparks Chain Saw Cutters must be sharpened equally and evenly. Uneven sharpening can cause the saw to kickback resulting in potential personal injury.

## WARNING

Chainsaw sharpener operates at high speeds. Incorrect assembly or misuse can result in personal injury or property damage. Read and follow ALL safety precautions listed below. Failure to follow all instructions may result in electric shock, fire, serious personal injury and or property damage.

- Grinding produces sparks during operation. Always use this tool in a well ventilated area. Do not use in areas containing explosive fumes or flammable materials.
- Grinding produces a fine dust-like debris while in operation. Always wear a standard dust mask during operation. This tool should always be used in a well ventilated area.
- Keep work area clean and well lit.
- Always wear adequate eye protection to withstand flying sparks and metal shavings/debris.
- Always make sure that the power switch is in the OFF position before plugging into a power source.
- Double check the locknut for correct, secure grinding-stone installation before each use.
- Do not use on any object other than saw chain.
- NEVER sharpen saw chain while the chainsaw's engine is running.
- Keep bystanders, children and visitors away while operating power tools. Distractions can cause you to loose control and lead to personal injury and or property damage.
- Never use this power tool in wet or rainy conditions. Water increases the risk of electric shock.
- Never use the cord to carry the tool or pull plug from the outlet. This can result in cord damage and potential risk of electric shock. When operating a power tool outside, use an out door extension cord marked "W-A" or "W". These cords are rated for outdoor use and reduce the risk of electric shock.

## Personal Safety

- Stay alert, watch what you are doing and use common sense when operating a power tool. Do not use tool while tired or under the influence of drugs, alcohol, or medication. A moment of inattention while operating power tools may result in serious personal injury.
- Dress properly. Do not wear loose clothing or jewelry. Contain long hair. Keep your hair, clothing, and gloves away from moving parts. Loose clothes, jewelry, or long hair can be caught in moving parts.
- Avoid accidental starting. Be sure switch is off before plugging in, Carrying tools with you finger on the switch or plugging in tools that have the switch on invites accidents.
- Remove adjusting keys or switches before turning the tool on. A switch or a key that is left attached to a rotating part of this tool may result in personal injury.