

SPORTS AFIELD®

Established 1887

GUN SAFE | INSTRUCTION MANUAL

IMPORTANT :

Please read this information and follow all safety rules carefully before operating your gun safe. Failure to do so will void your warranty.

**INSTRUCTION
MANUAL**

IMPORTANT INFORMATION

ATTENTION

PLEASE READ THIS INFORMATION CAREFULLY BEFORE OPERATING YOUR SPORTS AFIELD GUN SAFE.

DO NOT LOCK THIS MANUAL OR THE OVERRIDE ACCESS KEYS IN YOUR SAFE.

Thank you for choosing a Sports Afield Gun Safe to protect your valuables. We are committed to securing, organizing and protecting your most important documents, valuables and keepsakes.

Your gun safe is built to last a lifetime. However, please understand that the locking mechanism has precision parts. If you experience ANY difficulty opening or closing your gun safe, DO NOT FORCE THE GUN SAFE OPEN. Doing so may jam the components in the lock, which will require a safe technician to unlock your safe. This causes an inconvenience for both you the owner, and may lead to a claim denial.

If you experience problems or challenges with your gun safe, please contact us. Many issues can be quickly resolved without the product being returned.

Customer Service - (888) 792-4264

1 REGISTRATION

Please ensure you register your new gun safe by visiting our website. Locate the “contact” button located on the top right of the home page. Select registration from the drop down menu.

www.sportsafieldsafes.com

By registering your Sports Afield Gun Safe we will be able to expedite and address any problems or challenges you may have which would otherwise require a notary letter and proof of payment.

REGISTRATION INFORMATION

The information you record onto this page will be required in the event you cannot access the contents of your Sports Afield Gun Safe. Please fill out all the required information below and retain for your records and safe keeping.

PLEASE HAVE THIS INFORMATION READY PRIOR TO CALLING FOR TECHNICAL ASSISTANCE AT:

Customer Service - (888) 792-4264

PURCHASE DATE:

PURCHASE PRICE (BEFORE TAX):

MODEL NUMBER:

SERIAL NUMBER:

PURCHASE LOCATION:

KEY NUMBER (IF APPLICABLE):

SAFETY & SECURITY

WARNING

Always follow proper weapon and local laws when storing a weapon. SA Consumer Products strongly recommends that you do not store **LOADED** guns in this unit.

WARNING

Always follow the firearm safety rules set out by the firearm's manufacturer.

WARNING

The Sports Afield Gun Safe or any other firearm storage device cannot take the place of other safety procedures including advising children of the dangers of firearms.

WARNING

YOUR GUN SAFE IS ONLY PART OF YOUR TOTAL SECURITY PROTECTION.

SA Consumer Products recommends that you store your Gun Safe in a closet, office, basement, bedroom or any other location that is convenient for you but out of direct line of sight from prying eyes. The location of the Gun Safe is very important and the outmost care should be taken during this consideration.

WARNING

SA Consumer Products and its distributors of the Sports Afield Gun Safes do not recommend, suggest, advise, promote, or otherwise condone the ownership or use of firearms. We believe the decision to own or use a firearm is a serious decision that should only be made by an adult who has carefully considered the risks and benefits of such a decision.

WARNING

Keep your combination number and keys in a secure place, away from children. Keep a record of your combination number in a secure place separate from your Gun Safe. You will need this information along with your proof of purchase to obtain technical assistance and replacement keys.

WARNING

The gun safe and safe door is heavy. Always ensure proper installation and do not open the door with the safe on an uneven or unstable floor. Ignoring this could result in serious injury or death.


TABLE OF CONTENTS

2 SECTIONS


1	REGISTRATION	1
3	UNDERSTANDING YOUR SAFE	5
4	INSPECTING YOUR SAFE	6
5	UNBOXING	7
6	UNDERSTANDING YOUR MODEL NUMBER	7
7	SPORTS AFIELD STANDARD OPENING INSTRUCTIONS	8
8	STANDARD E-LOCK BATTERY INSTALLATION	9
9	STANDARD E-LOCK SECURITY CODE SETUP	10
10	STANDARD E-LOCK QUIET MODE	11
11	STANDARD E-LOCK THEFT ALERT ALARM SYSTEM	11
12	SECURAM EC-0601A UL E-LOCK BATTERY INSTALLATION	11
13	SECURAM EC-0601A UL E-LOCK OPENING INSTRUCTIONS	12
14	SECURAM EC-0601A UL E-LOCK SECURITY CODE SETUP	12
15	ESL5 UL E-LOCK BATTERY INSTALLATION	13
16	ESL5 UL E-LOCK OPENING INSTRUCTIONS.....	13
17	ESL5 UL E-LOCK SECURITY CODE SETUP	14
18	STANDARD E-LOCK QUIET MODE	15
19	SHIPPING SKID REMOVAL	15
20	MOVING YOUR SAFE	16
21	SECURING YOUR SAFE	17
22	LOADING YOUR SAFE.....	18
23	KEEPING SAFE DRY	18
24	HINGES AND INTERNAL MECHANISM	18
25	LOCKING BOLTS	18
26	CLEANING	19
27	HOW TO OBTAIN LOST KEYS.....	19
28	NOTES.....	19
29	WARRANTY	20

GETTING STARTED

3 UNDERSTANDING YOUR SAFE

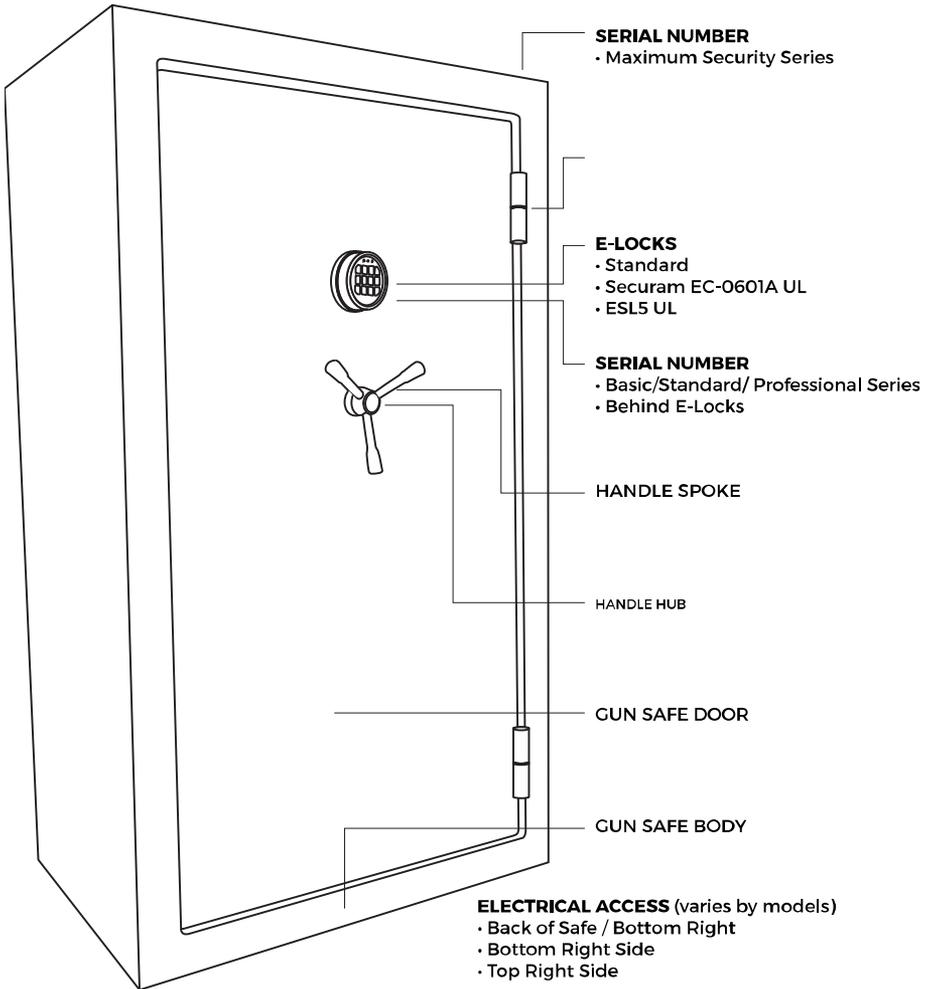

REFERENCE IMAGE. ACTUAL MODEL AND DESIGN MAY VARY

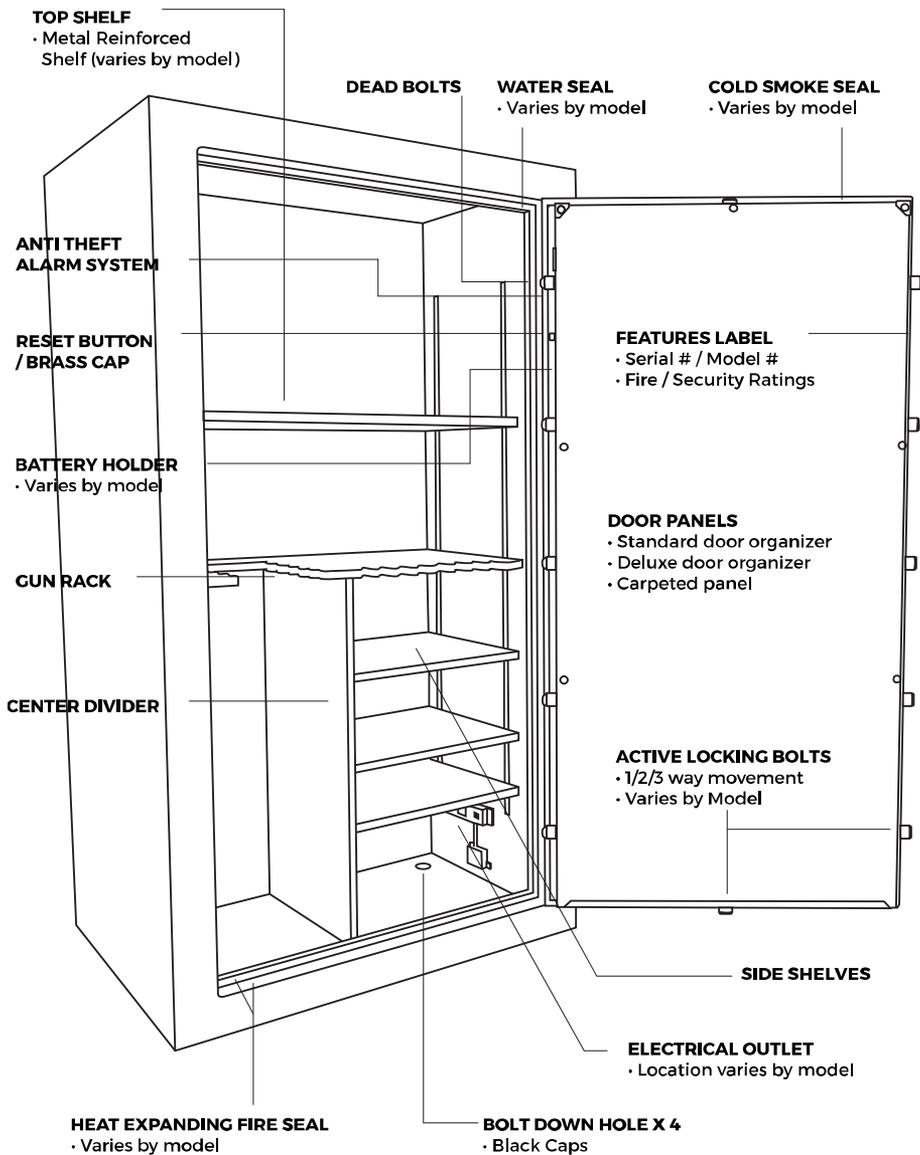

REFERENCE IMAGE. ACTUAL MODEL AND DESIGN MAY VARY

4 INSPECTING YOUR SAFE

Make sure to inspect your safe for shipping damage as soon as you receive it. If you find any damage, please contact the delivery company (or carrier) immediately. Any damage not noted upon delivery must be reported within fifteen (15) days or there will be no recourse. Any noted damage at the time of delivery must be resolved with the delivery company and/or your retailer. Shipping damage is not warrantable by SA Products.

5 UNBOXING

WARNING. GUN SAFES ARE HEAVY AND CAN BE UNSTABLE ON UNEVEN GROUND. PLEASE ENSURE EXTRA CAUTION WHEN DEALING WITH OR MOVING UNSECURED SAFES.

1. Remove the packaging. If your safe is on shipping feet you can simply lift the box up and off the safe once the strapping has been removed. If your safe does not have shipping feet you will need to carefully remove the box ensure not to damage the safe and injury yourself. You will want to have someone stabilize the safe when removing the cardboard and other packing material from underneath the safe.
2. Locate and remove the bag hanging from the handle on the front of the safe. Inside you will find the necessary items required to open your safe. Remove all items and prepare to access your safe for the first time. Congrats.

6 UNDERSTANDING YOUR MODEL NUMBER

FOR SPORTS AFIELD STANDARD SERIES, BASIC SERIES & STANDARD GLOSS SERIES SAFES, please refer to section 7-11 for safe and E-Lock opening and operating instructions.

SA5516	SA6040	SA5516BASIC	SA24
SA5516AR	SA6046	SA5520BASIC	SA36
SA5520	SA7240	SA5526BASIC	SA48
SA5926	SA6033GLOSS	SA5533BASIC	SA48GLOSS
SA5928	SA6040GLOSS	SA5540BASIC	SA64
SA6033	SA6046GLOSS	SA5546BASIC	SA80
SA5940	SA7240GLOSS	SA20	SA6040WP

FOR SPORTS AFIELD PROFESSIONAL SERIES SAFES please refer to section 12-14 for Securam EC-0601A UL E-Lock opening and operating instructions.

SA6033PRO
SA6033PROGLOSS
SA6040PRO
SA6040PROGLOSS


FOR SPORTS AFIELD MAXIMUM SECURITY SAFES please refer to section 15-18 for the ESL5 UL E-Lock opening and operating instructions.

SA6028USA
SA6028USAGLOSS
SA6043USA
SA6034USAGLOSS
SA6239USA
SAS6239USAGLOSS

OPERATING YOUR SAFE

7 SPORTS AFIELD STANDARD OPENING INSTRUCTIONS

WARNING: Never leave the override keys inside your safe. You will need to the override key to open your gun safe up until you have successfully programmed the electronic lock.

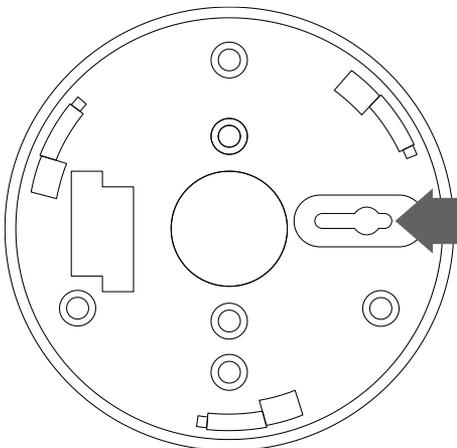

1. Locate the override keys. These are located inside the plastic bag hanging on the front of the gun safe.
2. Gently remove the electronic keypad from the safe by rotating counter clockwise. At this point, the keypad will detach from the locking ring. It is okay to allow the keypad to gently hang below the locking ring.
3. Locate the keyhole in the locking ring. Insert and turn the key (from 9 to 1 o'clock) to unlock.

4. To open the safe door, with a firm hold on the spindle hub, turn clockwise. If you are having trouble, gently insert a flat tip screwdriver into one of the three spindle holes, making sure not to damage the internal threads, and gently turn clockwise until the safe door opens.
5. Located inside your safe is a small box containing the spokes for safe handle.
6. Remove the spokes from the packaging and thread into the respective holes on the spindle hub.

NOTE: FOR DROP HANDLE LEVERS: Your handle is installed from the factory and requires no action on your part for assembly.

8 STANDARD E-LOCK BATTERY INSTALLATION

IMPORTANT. Depending on the model number of your safe the first-time opening instructions and battery installation process may be slightly different. Please refer to your specific set of instructions.

IMPORTANT. The first time you open your safe with a Standard E-Lock, you will need to use the override key. Once the safe is opened, the batteries can be inserted. The included batteries are located in a plastic bag with this manual.

1. The E-Lock on the Sports Afield Standard, Basic and Standard Gloss Series safes require 4 x AA alkaline batteries.
2. Locate the battery compartment on the interior of the door toward the upper hinge and open.
3. Insert the batteries in the proper orientation and order.
4. Close the battery compartment door. Always ensure you are using new, brand name batteries with full charge.

NOTE: This E-Lock is equipped to alert you to low batteries by illuminating the red and green light on the keypad when any button is pressed. Always test the batteries when installing or replacing. If a red and green light on the lock face turns on when a button is pressed, you know the batteries are not fully charged.

NOTE: The batteries are to be inserted with the correct polarity. Exhausted batteries are to be removed from the product and discarded safely. Do not mix old and new batteries. Do not mix alkaline or standard (carbon – zinc). Do not use rechargeable (nickel – cadmium) batteries.

9 STANDARD E-LOCK SECURITY CODE SETUP

IMPORTANT. It is necessary to re-program your gun safe with a new security code you have personally selected to provide maximum household security. **IMPORTANT. DO NOT** shut the safe door until you have confirmed your new security code has been entered correctly.

A security code is a series of entries on the keypad. An “entry” is a single press of one button at the same time. You can use a minimum of 3 entries or a maximum of 8 for your unique security code. Choose a security code which is easy to use, but difficult to guess. A poor example for a secure code would be something 1-1-1-1 or 4-3-2-1-1-2-3-4.

Be careful in choosing your security code. You’ll want to be sure that you can operate the unit quickly without making an entry error.

1. All Sports Afield Standard, Basic and Standard Gloss Series come with a preset factory code of [**1 5 9 #**].
2. Enter the code [**1 5 9 #**]. You will hear a beep with each button push. If the code was successfully entered you will hear two beeps and the green light will illuminate. Open the door by rotating the handle clockwise.
3. With the door open, now rotate the handle counter clockwise locking out and extending the active bolts.
4. Next, on the inside of the safe, near the battery compartment, locate the small copper cap. Unscrew and remove the cap.
5. Press and release the reset button. You will hear a beep. The yellow light on the faceplate will be illuminated and will stay on for a period of time that should allow you to enter your code. You can only enter a new code while the yellow light is on.
6. Ensure your bolts are in the extended position, enter your new personal security code. Enter a 3-8 digit long code.
7. Confirm your new security code by pressing the [*] symbol. Please note when you open your safe in the future, always follow this security code with the [#] symbol.

Before you close the door, try your new security code at least 3 times to make sure the code has been secured and you can lock and unlock the door successfully.

8. If the code fails, repeat the steps above until your code is accepted. If the incorrect security code is entered 3 times you will have an automatic lockout for 20 seconds before you can try your code again. If 3 more failed attempts are entered the keypad will lockout for 10 minutes.
9. Reinstall the copper cap over the reset button and close the door.

NOTE: After you have entered the correct security code you have 5 seconds to turn the handle and unlock the door before the locking mechanism is reactivated.

10 STANDARD E-LOCK QUIET MODE

1. To mute the E-Lock, enter the code [* 6 3 3].
2. To turn the sound back on, enter code [* 6 6].

11 STANDARD E-LOCK THEFT ALERT ALARM SYSTEM

FOR SPORTS AFIELD STANDARD SERIES & STANDARD GLOSS SERIES MODELS.

SA5516	SA6033	SA6033GLOSS	SA20
SA5516AR	SA5940	SA6040GLOSS	SA24
SA5520	SA6040	SA6046GLOSS	SA36
SA5926	SA6046	SA7240GLOSS	SA48
SA5928	SA7240	SA6040WP	SA48GLOSS SA80

By activating the theft alert alarm system, if the safe is tampered with, the alarm will sound for 20 seconds. To stop the alarm from sounding, enter your security code or use the override key to open the safe and remove the batteries.

1. To activate, Press [* 0 0] to active the theft alert alarm system.
2. Every time a correct security code is entered the alarm is de-activated. To re-active press [* 0 0].

12 SECURAM EC-0601A UL E-LOCK BATTERY INSTALLATION

FOR SPORTS AFIELD PROFESSIONAL SERIES MODELS

SA6033PRO	SA6040PRO
SA6033PRO GLOSS	SA6040PRO GLOSS

NOTE. The Sports Afield Professional Series gun safes do not come with override keys and must be opened using the E-Lock.

1. The E-Lock on the Sports Afield Professional Series safes require a 9V alkaline battery.
2. The battery compartment is located under the key pad. To access, slide the key pad up to release the E-lock from the gun safe door.

3. Snap the 9V battery to the connector in the proper orientation.
4. Reinstall the key pad by sliding the keypad down onto the mounting screws until you feel it click in place.
5. The E-Lock is ready to be programmed.

NOTE: This Securam EC-0601A UL E-Lock is equipped to alert you to a low battery by producing a series of beeps (8 times). If you hear this, the battery needs replacing.

NOTE: The battery is to be inserted with the correct polarity. Exhausted batteries are to be removed from the product and discarded safely.

13 SECURAM EC-0601A UL E-LOCK OPENING INSTRUCTIONS

1. All Sports Afield Professional Series come with a preset factory code of [**1 2 3 4 5 6**].
2. Enter the code [**1 2 3 4 5 6**]. You will hear a beep with each button push. If the code was successfully entered, you will hear two beeps and the green light will have illuminated.
3. With a firm hold on the spindle hub, open the door by rotating the handle clockwise.
4. Inside the safe, locate the spindle handles and thread into the respective holes on the spindle hub.

14 SECURAM EC-0601A UL E-LOCK SECURITY CODE SETUP

IMPORTANT. It is necessary to re-program your gun safe with a new security code you have personally selected to provide maximum household security.

A security code is a series of entries on the keypad. An “entry” is a single press of one button at the same time. You must use a 6- unique security code. Choose a security code which is easy to use, but difficult to guess. A poor example for a secure code would be something 1-1-1-1-1-1 or 3-2-1-1-2-3.

ENSURE YOU DOOR IS OPENED AND THE LOCKING BOLTS EXTENDED.

1. Press the [0] button six times. Two beeps indicate that the entry is valid and the system is ready to program the new unique security code.
2. Key in the last known 6-digit code. If this is the first time setting up your gun safe enter the preset factory code [**1 2 3 4 5 6**].
3. Next, enter your new 6-digit security code. One beep indicates that the entry is valid.
4. Re-enter your new 6-digit security code to confirm.

5. If the code fails, you will hear three beeps. Repeat the steps above until successful.

IMPORTANT. DO NOT shut the safe door until you have confirmed you're your new security code has been entered correctly. Try your new security code at least 3 times to make sure the code has been secured and you can lock and unlock the door successfully.

15 ESL5 UL E-LOCK BATTERY INSTALLATION

FOR SPORTS AFIELD MAXIMUM SECURITY SERIES MODELS

SA6028USA	SA6034USA	SA6239USA
SA6028USAGLOSS	SA6034USAGLOSS	SA6239USA GLOSS

NOTE. The Sports Afield Professional Series gun safes do not come with override keys and must be opened using the E-Lock.

1. The ESL5 UL E-Lock on the Sports Afield Maximum Security Series safes require a 9V alkaline battery.
2. The battery compartment is located under the keypad. To access, rotate the keypad up to the left to release the E-lock from the locking ring.
3. Snap the 9V battery to the connector in the proper orientation.
4. Reinstall the keypad back onto the locking ring.
5. The E-Lock is ready to be programmed.

NOTE: This ESL5 UL E-Lock is equipped to alert you to a low battery by producing a series of beeps (8 times). If you hear this, the battery needs replacing.

NOTE: The battery is to be inserted with the correct polarity. Exhausted batteries are to be removed from the product and discarded safely.

16 ESL5 UL E-LOCK OPENING INSTRUCTIONS

1. All Sports Afield Maximum Security Series gun safes come with a preset factory code of [**1 2 3 4 5 6 #**].
2. Press the [**C**] key followed by preset factory code [**1 2 3 4 5 6 #**]. You will hear a beep with each button push. If the code was successfully entered, you will hear two beeps and the green light will have illuminated.
3. With a firm hold on the spindle hub, open the door by rotating the handle clockwise.

4. Inside the safe, locate the spindle handles and thread into the respective holes on the spindle hub.

17 ESL5 UL E-LOCK SECURITY CODE SETUP

IMPORTANT. It is necessary to re-program your gun safe with a new security code you have personally selected to provide maximum household security.

A security code is a series of entries on the keypad. An “entry” is a single press of one button at the same time. You must use a 6- unique security code. Choose a security code which is easy to use, but difficult to guess. A poor example for a secure code would be something 1-1-1-1-1-1 or 3-2-1-1-2-3.

ENSURE YOU DOOR IS OPENED.

1. Locate and press the detent rod, positioned on the door frame near the hinges.
2. With the detent rod pushed, extend the locking bolts by turning the gun safe and handle.
3. Press the [C] key and then the [#] key. The ESL5 E-Lock will produce a short warbling tone (called the “good combo tone”) and the key pad lights strobe with the tone.
6. Key in the last known 6-digit code. If this is the first time setting up your gun safe enter the preset factory code [1 2 3 4 5 6 #]. The [C] key can be used at any time to clear an error in keying.
7. Next, enter your new 6-digit security code followed by the [#] key. The warbling tone can be heard with valid entry.
4. Re-enter your new 6-digit security code followed by the [#] key to confirm. The warbling tone can be heard confirming the new security code has been successfully programmed.
5. If the code fails, you will hear four short beeps. The keypad returns to rest and the process starts over. Repeat the steps above until successful.

IMPORTANT. DO NOT shut the safe door until you have confirmed you’re your new security code has been entered correctly. Try your new security code at least 3 times to make sure the code has been secured and you can lock and unlock the door successfully.

NOTE. To wake up system, press the [C] key before entering any codes.

18 ESL5 UL E-LOCK QUIET MODE

3. To mute the E-Lock, press [C #] and listen for a short warbling sound. Next, press [8 0 #] and listen for a short warbling sound. Lastly, press [1 #] and listen for a long warbling sound.
4. To un-mute the E-Lock, press [C #] and listen for a short warbling sound. Next, press [8 0 #] and listen for a short warbling sound. Lastly, press [0 #] and listen for a long warbling sound.

MOVING AND SECURING

19 SHIPPING SKID REMOVAL

WARNING: WHILE REMOVING THE BOLTS FROM THE SKIDS, BE SURE TO HAVE A PERSON HOLD AND STABILIZE THE SAFE TO KEEP IT FROM TIPPING, CAUSING INJURY, OR DAMAGE TO THE SAFE AND SURROUNDING STRUCTURES.

1. Upon receiving your safe, you may find it attached to a shipping skid. The skid is secured from the underside of the safe by four bolts. Remove the four bolts that secure the safe to the skids using a wrench or 11/16" (17mm) socket.

WARNING: BEFORE REMOVING THE SHIPPING SKIDS, MAKE SURE THE DOOR IS CLOSED AND LOCKED. THE DOOR OF YOUR SAFE IS HEAVY AND PRESENTS A SAFETY HAZARD UNTIL BOLTED DOWN OR SECURED PROPERLY.

2. With a person stabilizing the safe, carefully tilt the safe to the left, and pull the free shipping skid away from bottom of the safe.
3. With the shipping skid removed from one side of the safe, carefully lower the safe to the floor.
4. Follow the same procedure to remove the remaining shipping skid.

FOR SPORTS AFIELD MAXIMUM SECURITY SAFES (see page 8 for specific model numbers).

1. Upon receiving your safe, you may find it attached to a shipping skid. The skid is secured from the inside of the safe by four lag bolts.
2. Open your gun safe door and locate and remove the four black caps on the safe floor. Remove the four bolts that secure the safe to the skids using a wrench or 9/16" (14mm) socket. Replace the four black caps.
3. Next, close the door and extend the locking bolts by rotating the handle counter clockwise. Ensure the door is properly locked before proceeding.
4. With assistance, slide the safe to one side of the pallet so the safe over hangs the far edge of the pallet. Carefully, tilt the safe over until the bottom side of

the safe touches the floor. Then tilt the safe a little more to allow the pallet to be removed from underneath the safe.

5. Gently lower the safe back in place.

20 MOVING YOUR SAFE

WARNING: SAFES ARE VERY HEAVY AND AWKWARD TO HANDLE. PLEASE USE THE UTMOST CARE IN MOVING THE SAFE. UTILIZING A TRAINED PROFESSIONAL WITH PROPER MOVING EQUIPMENT IS HIGHLY RECOMMENDED.

The location of the gun safe is very important and the utmost care should be taken during this consideration.

1. To maximize the fire protection of your safe, we recommend you place the safe in lower levels in your home where fire temperatures are lower and away from highly combustible materials.
2. To maximize burglary protection and stability, securing the safe to the floor is recommended.
3. To maximize household safety, we recommend placing your safe in an isolated area out of the reach and sight of children.

Using a dolly capable of supporting the size and weight of your safe, move the safe to your desired location. Please take all necessary precautions to protect and prevent any damage to your flooring.

HELPFUL: TO DETERMINE WHETHER YOUR SAFE WILL MAKE IT THROUGH DOORWAYS, STAIRS OR CORNERS TAKE THE EMPTY SAFE BOX AND SEE IF IT WILL FIT ALL THE WAY THROUGH TO ITS FINAL LOCATION.

1. The safe should be installed adjacent to a side wall with minimal space on either side of the safe. Wherever possible, the safe should be flat against the wall and floor. Remove the baseboard and/or wall trim if necessary.
2. Proximity and location of electrical outlets should be considered when installing powered gun safes.
3. Always ensure the safe is in an isolated and dry area. Never place the safe in direct contact with a wet floor. When installing your safe on a concrete floor, use of a moisture/protective barrier is highly recommended. Failure to do so or exposing the safe to chemicals or other adverse environments may void the warranty.
4. If your safe seems unlevel you may need to shim the bottom of the safe to prevent the door from swinging open too quickly, or closing on itself.

21 SECURING YOUR SAFE

WARNING: YOUR SAFE IS DESIGNED TO SUPPORT ITSELF WHEN THE DOOR IS OPENED. HOWEVER, CAUTION SHOULD BE USED TO AVOID TIPPING AND SAFETY HAZARDS. THE SAFE MUST BE SECURED TO THE FLOOR. FAILURE TO DO SO WILL COMPROMISE THE SAFETY AND SECURITY OF THE SAFE.

FOR SPORTS AFIELD STANDARD SERIES, BASIC SERIES, STANDARD GLOSS SERIES & PROFESSIONAL SERIES SAFES (see pages 7 & 8 for specific model numbers)

TOOLS NEEDED TO BOLT SAFE TO A CONCRETE SURFACE

- DRILL / HAMMER DRILL
 - DRILL BIT – 1/2" (for installing into concrete with provided hardware)
 - WRENCH / 11/16" (17MM) SOCKET
 - HAMMER
1. Use the hardware provided or consult your hardware retailer for fastening hardware for your particular mounting surface.
 2. Open your gun safe door and locate and remove the four black caps on the safe floor. This will provide access to the factory drilled bolt down holes.
 3. To secure your safe to the floor it will first be necessary to drill pilot holes in the floor surface.
 4. Drill the appropriate diameter and depth of pilot holes based on the type of hardware being used and the type of floor surface. For the hardware provided (concrete floor installation) we recommend using a hammer drill and 1/2" concrete drill bit to drill holes the four corresponding holes in the concrete floor.
 5. Insert and drive the plastic anchoring plugs into the pilot holes. You may need to use a hammer to fully insert the plugs into the pilot holes.
 6. Secure the safe, by threading all 4 anchor bolts through the factory drilled bolt down holes in the bottom of the safe and ratcheting down tight.
 - For SA6040WP, make sure the metal washer sits on top of the rubber washer. Tighten the bolt to compress the rubber washer between the safe and metal washer. Failure to do so, will allow water to enter the safe in the event of a flood.
 7. Replace the four black caps onto the floor of the safe.

The SPORTS AFIELD MAXIMUM SECURITY SAFES (see page 8 for specific model numbers) do not come with hardware. Consult your local hardware retailer for fastening hardware specific to your mounting surface and location. Follow the same steps above adjusting the drill diameter and depth of pilot hole based on the selected fastening hardware.

USING AND MAINTAINING

22 LOADING YOUR SAFE

1. When loading guns into your safe, make sure they rest securely against the cutouts provided in the gun racks to prevent accidental tipping when the door is closed.
2. Store documents or heat sensitive items in the bottom of the safe for greatest protection against fire damage.
3. Store ammunition separately from valuables.
4. Do not put anything in your safe that will put pressure against the door when it is closed.
5. Select safe models have reinforced shelving but as a good safety precaution store heavier items either on the floor of the safe or away from the middle of the shelves.

23 KEEPING SAFE DRY

We recommend placing a moisture/protective barrier between your safe and a concrete floor to prevent any moisture, mildew and rust damage the safe. Installing your safe in a place with natural climate control (heat in the winter and cooling in the summer) is highly recommended. In areas of high humidity or frequent temperature fluctuations (garages) it is recommend to take appropriate precautions to ward against moisture damage. We strongly encourage the use an internal dehumidifier and/or desiccants to protect your contents from rust or mildew. Internal dehumidifiers should not be in direct contact with the side or back walls.

24 HINGES AND INTERNAL MECHANISM

The hinges and internal locking mechanism are permanently lubricated, thus needing no maintenance. Opening the door panel of your safe may void your warranty. Always consult our customer service experts prior to doing so.

25 LOCKING BOLTS

Occasionally it may be necessary to lubricate the active locking bolts. To do so, with the door open, extend the locking bolts completely. Wipe a small amount of oil/lubricant around each locking bolt.

26 CLEANING

To clean the surface of your safe, use a soft, non-abrasive cloth (we recommend lint free polishing cloths). DO NOT use paper towels as you may scratch, mar or damage the finish of your safe.

Often water is sufficient to cleaning the surface of your safe, however, an ammonia free window cleaner can be used. DO NOT use metal polishes or solvents when cleaning.

27 HOW TO OBTAIN LOST KEYS

Please contact our customer service team using the number. Please have all registration information available prior to calling.

Customer Service - (888) 792-4264

28 NOTES

29 WARRANTY

SA Consumer Products, Inc. will repair or replace at the sole discretion of SA Consumer Products, Inc., any Sports Afield Gun Safe damaged by fire, forced entry, forced attack or natural flood for the lifetime of the original owner.

SA Consumer Products, Inc. will also repair or replace, at the sole discretion of SA Consumer Products, Inc. any Sports Afield Gun Safe with defective parts, paint or lock for the lifetime of the original owner.

SA Consumer Products, Inc. will also pay the freight costs to ship the new replacement safe to our customer.

This lifetime warranty is limited to the safe and expressly excludes any loss associated with the contents of the safe.

SA Consumer Products, Inc. reserves the right to receive full evidence of your misfortune, such as a police report and/or homeowner's statement of coverage. This warranty is not valid outside of the United States and Canada.

Proof of registration and copy of sales receipt must be on file at the time of claim. Visit our website at www.sportsafieldsafes.com to register your safe.

Lifetime warranty only applies to the original owner of the safe.

SA Consumer Products, Inc. shall only be responsible and liable when the safe is used in compliance with the directions specified with your new Sports Afield Safe.

SA Consumer Products, Inc. requires that specific guidelines be followed for repair. The safe will be repaired in-home if possible (to include parts and labor); however, if factory replacement is necessary (at SA Consumer Products, Inc.'s sole discretion), the replacement will be shipped freight prepaid, curbside delivery.

This warranty is inclusive and is in lieu of any and all other warranties, express or implied. Specifically excluded are the warranties of merchantability and fitness for a particular purpose. This warranty is limited to the safe itself and/or its value and does not include consequential damages of any kind including, but not limited to, the contents in and of the safe.

SPORTS AFIELD®

Established 1887



1-888-792-4264

If you have a question about your Sports Afield Gun Safe, call the SA Customer Service team with your registration information.

For any additional information please visit our website
www.sportsafieldsafes.com

Thank you for choosing a Sports Afield Gun Safe.

Your gun safe is built to protect your for a lifetime. However, please understand that your gun safe has precision parts. If you experience ANY difficulty opening or closing your gun safe, contact the SA Customer Service team first. **DO NOT FORCE THE GUN SAFE OPEN.** Doing so may jam the components in the lock, which will require a safe technician to unlock your safe. This will cause an inconvenience to you and may lead to a claim denial.

SA Consumer Products - Customer Service Team

4602 20th St. East

Fife, WA 98424

1-888-792-4264 | Monday- Friday 8am-4:30pm (PST)

saconsumerservice@sportsafieldsafes.com

SA Consumer Products, Inc.

3305 W. 132nd ST

Leawood, KS 66209

www.sportsafieldsafes.com