


USE AND CARE GUIDE

7FT ANIMATED LED DARTH VADER

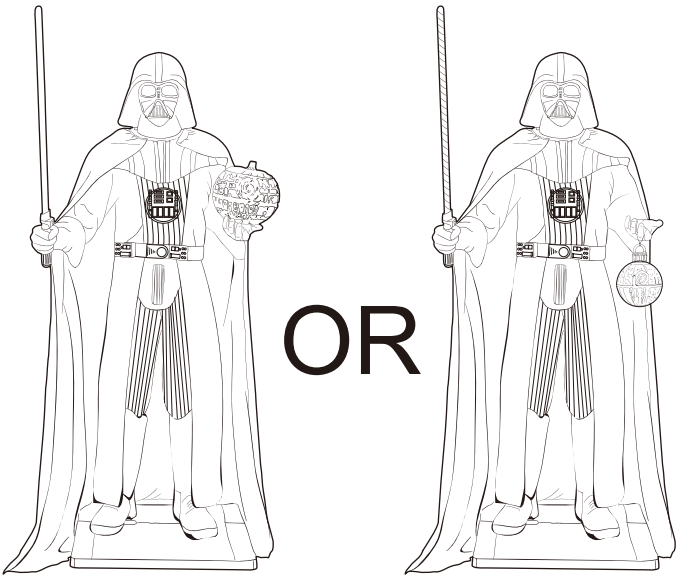

OR

Questions, problems, missing parts? Before returning to the store, please have a copy of your receipt ready and email the SVI customer experience team (customerservice@svius.com) within 90 days of the date of purchase or call Home Accents Holiday Customer Service 8 a.m. - 7 p.m., EST, Monday - Friday, 9 a.m. - 6 p.m., EST, Saturday

1-855-HD-HOLIDAY (1-855-434-6543)
HOMEDPOT.COM

IMPORTANT TIPS:


- Ensure that item's adapter is plugged in at the Function Control Box and plugged in the wall.
- Ensure that the switch on the function control box is on the desired setting.
- If not functioning properly (ex: lightsaber or chest panel doesn't light up, head or light saber doesn't move), ensure that cables are connected to their corresponding cable as shown in the instruction sheet.
- Be sure nothing is blocking movement or caught in moving parts.
- Ensure that the floor or surface that the item sits on is flat and level.
- Ensure that the volume is not all the way down.
- Be sure nothing is blocking the sensor. See Operations Instructions page 4 for complete details.

PARTS LIST


- A. Base x 1
 - B. Rear Platform x 1
 - C. Front Platform x 1
 - D. Lower Poles x 2
 - E. Left Boot x 1
 - F. Right Boot x 1
 - G. Upper Poles x 2
 - H. Foam Tubes x 2
 - I. Costume x 1
 - J. Lower Body Frame x 1
 - K. Upper Body Frame x 1
 - L. Chest Form x 1
 - M. Shoulder Form x 1
 - N. Back Frame x 1
 - O. Left Arm x 1
 - P. Right Arm x 1
 - Q. Cuffs x 2
 - R. Right Hand x 1
 - S. Belt x 1
 - T. Shoulder Armor x 1
 - U. Head x 1
 - V. Cape x 1
 - W. Left Hand x 1
 - X. Ornament x 1
 - Y. Left Hand with Jack O' Lantern x 1
 - Z. Lightsaber x 1
 - Z1. Festive Lightsaber x 1
 - Z2. Adapter * x 1
- Power Adapter * Spec
Input: 120V~60Hz
Output: 5.9V 3.0A
Wattage: 17.7W




NOTE: Throughout the instructions, Right and Left are from the character's point of view.

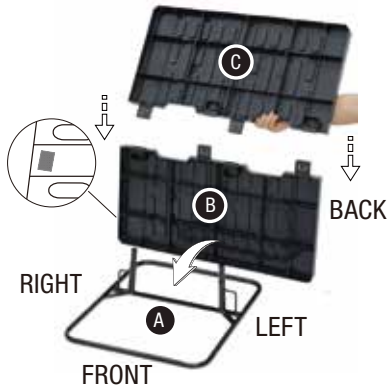


1.1

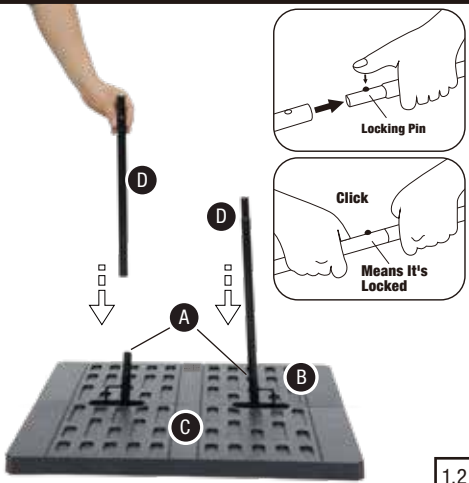

1.2

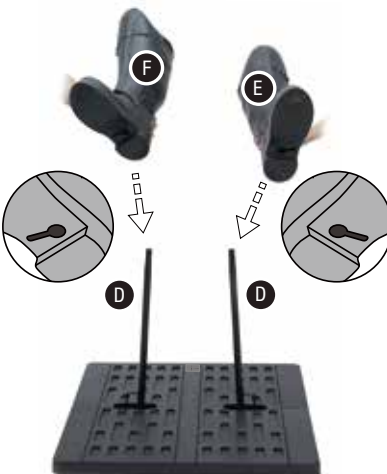

1.3

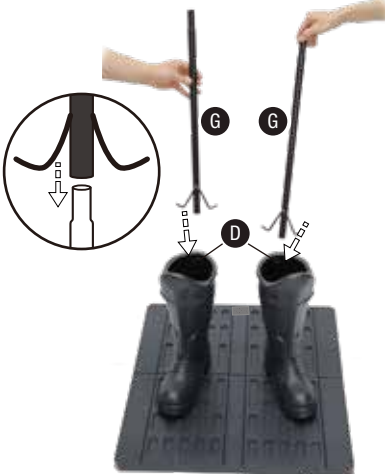



1.4




2.1




2.2

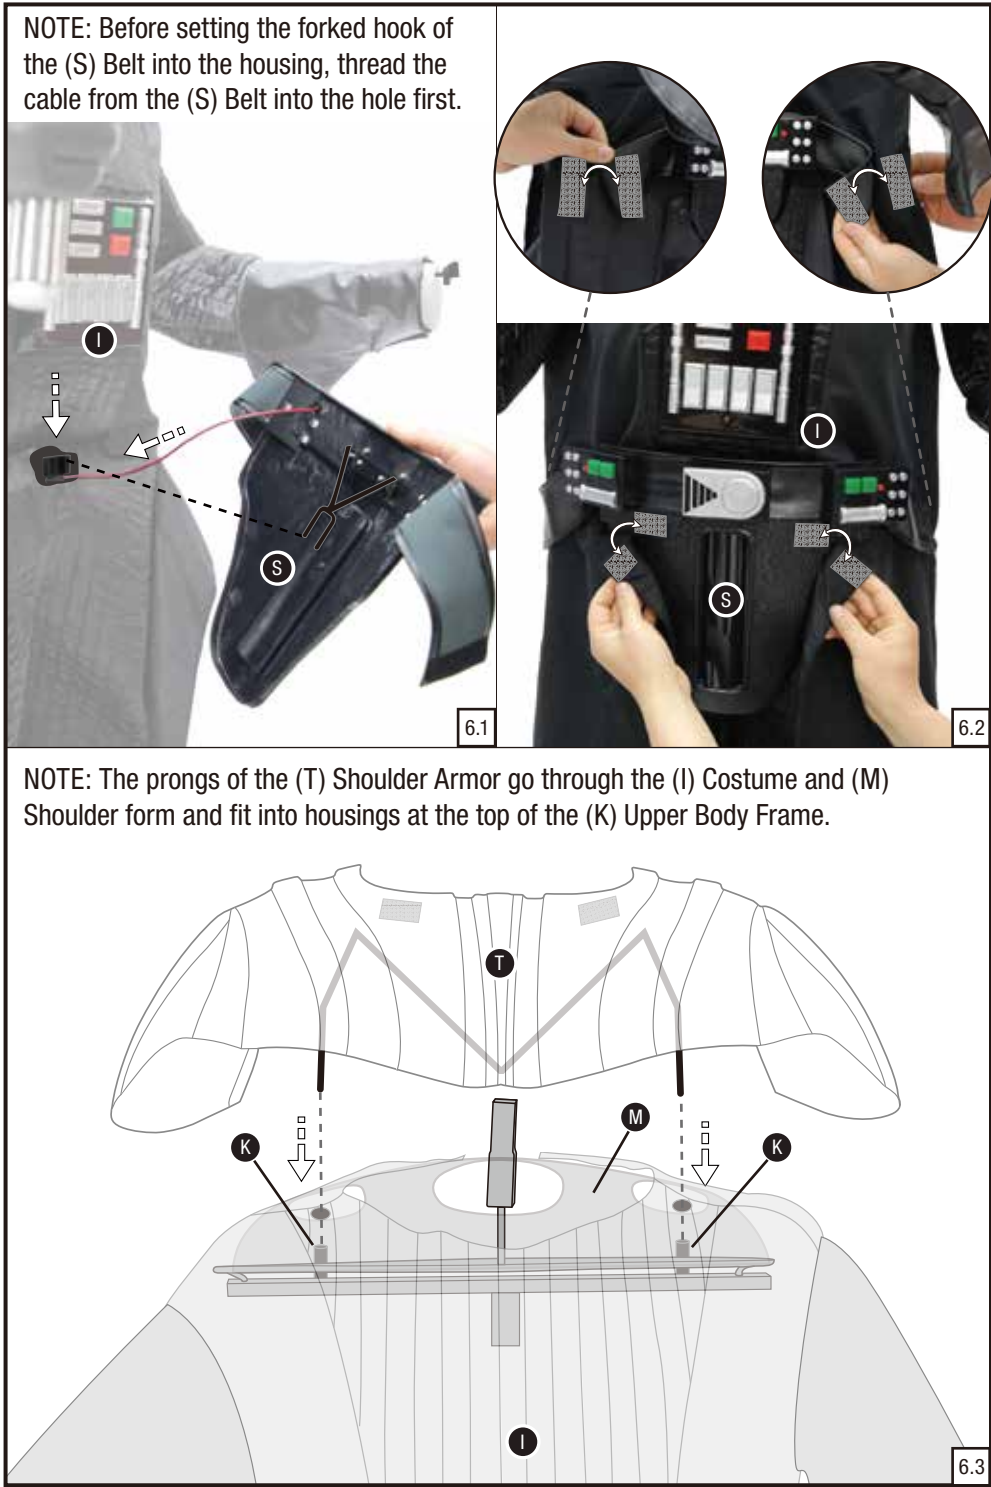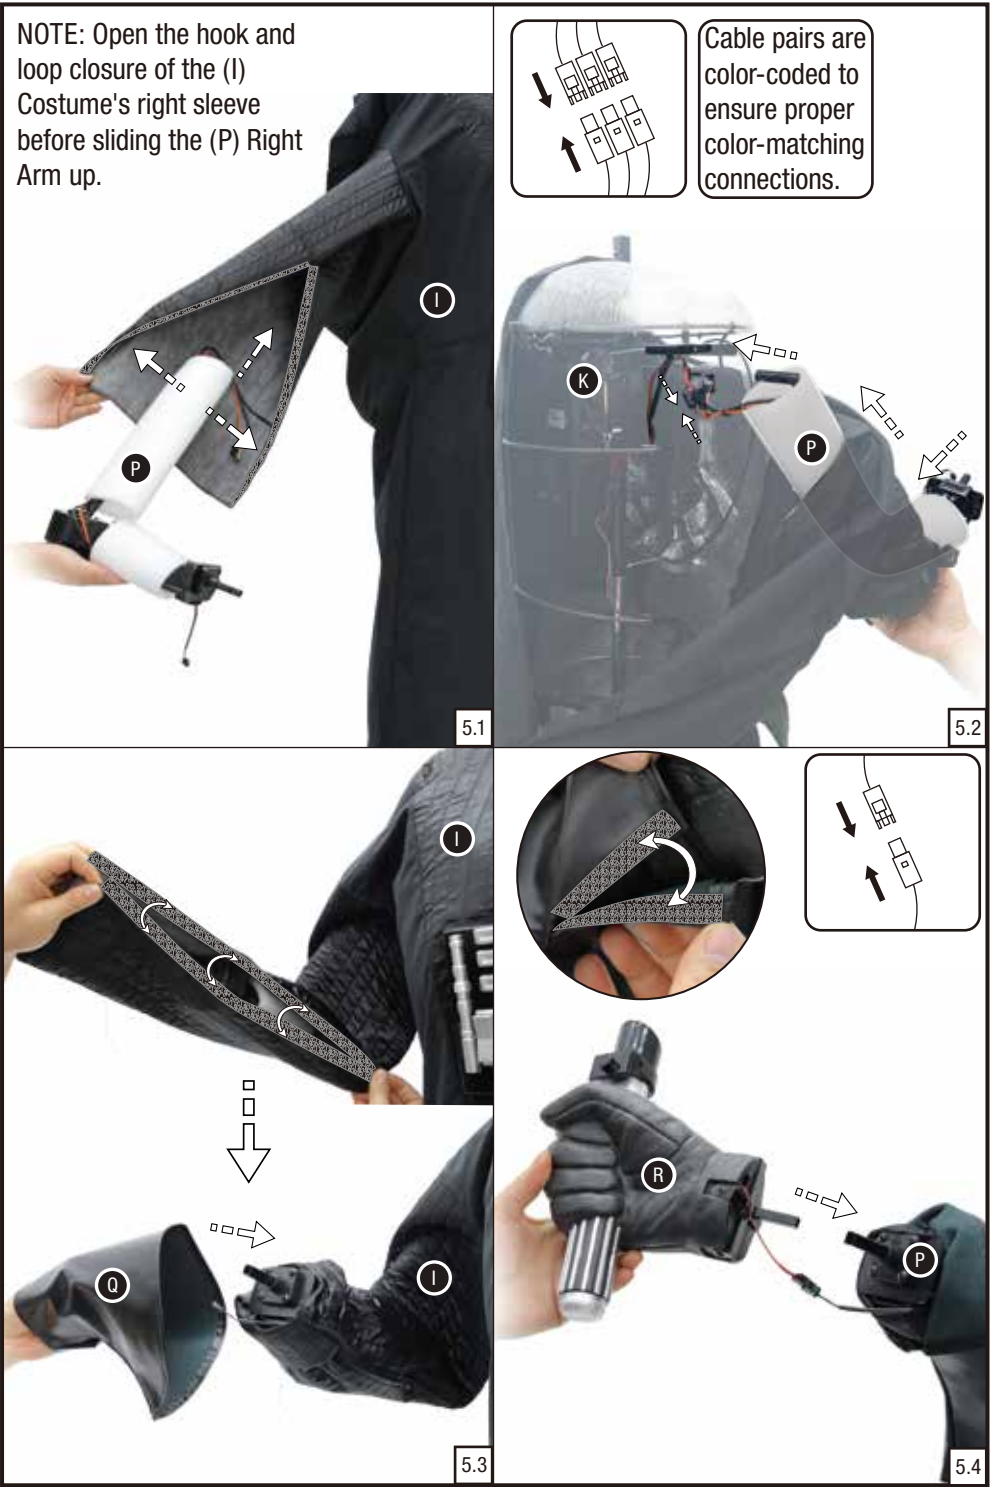

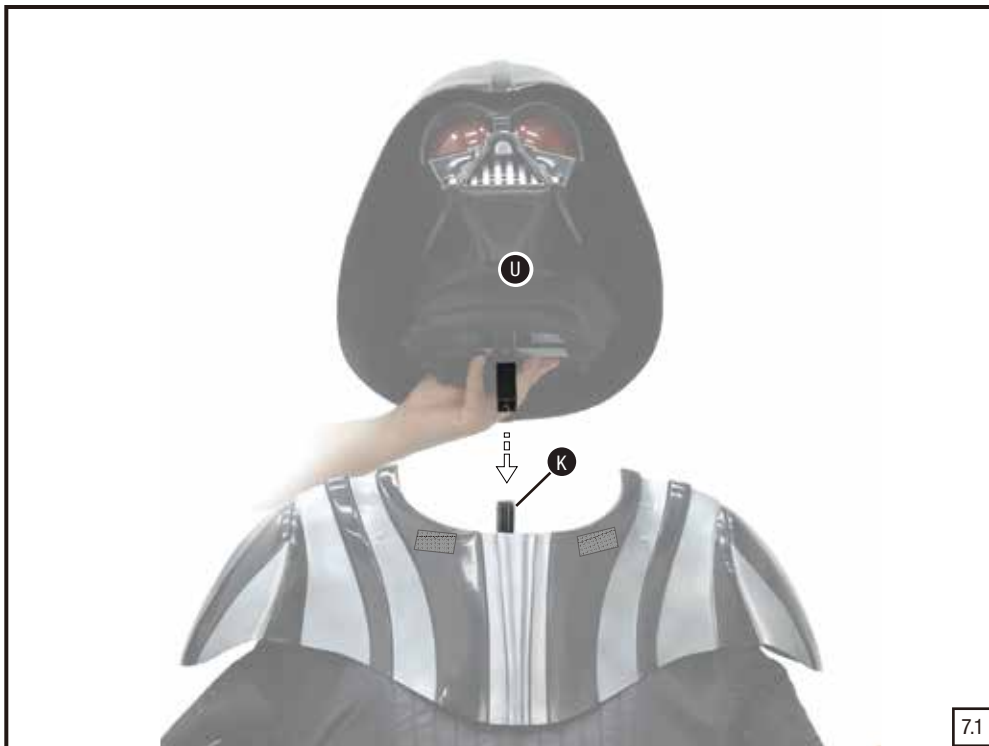

7.1

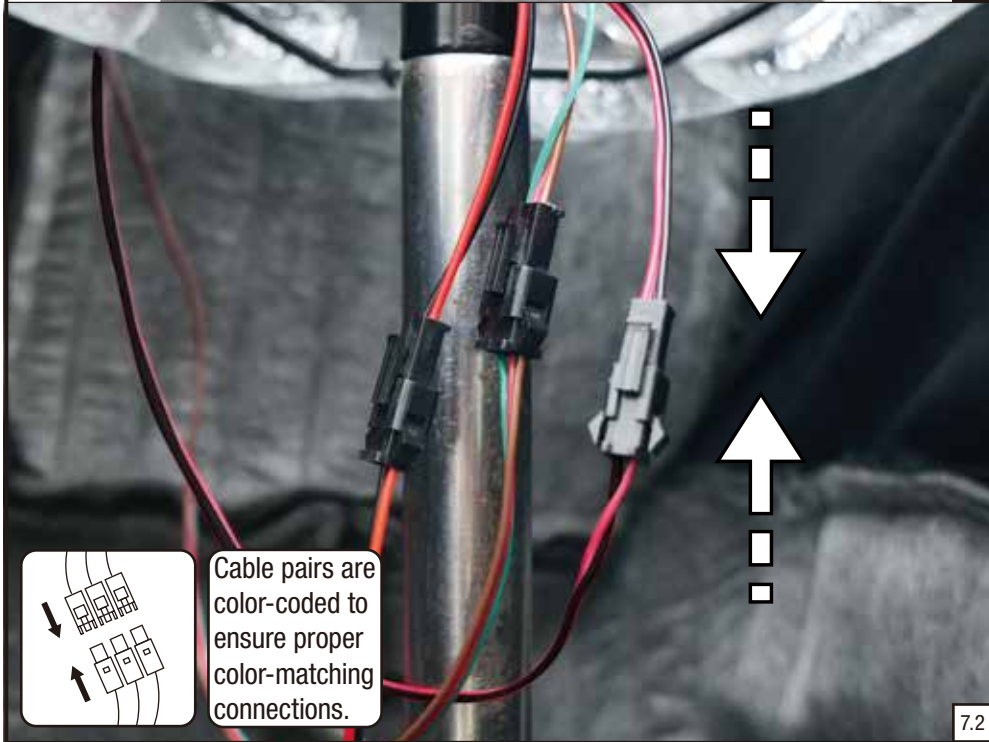

7.2






8.1




8.2

NOTE: Darth Vader can be equipped with the interchangeable Halloween or Christmas accessories.

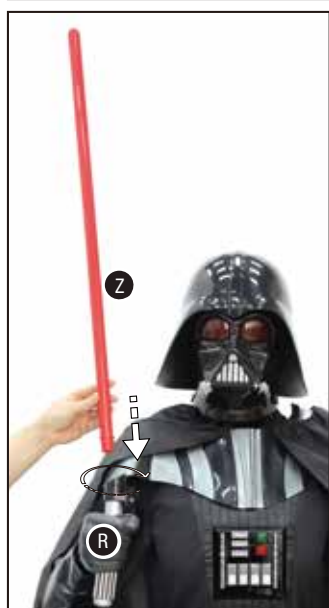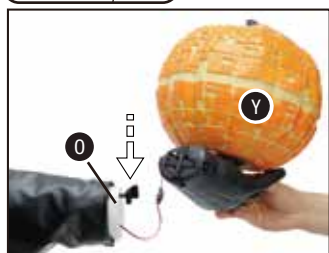
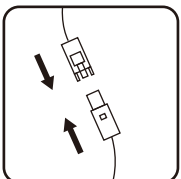


IR SENSOR
Be sure nothing is blocking the sensor.

OR

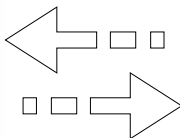

7FT ANIMATED LED DARTH VADER IS NOW FULLY ASSEMBLED. PLUG IN AND TURN ON TO LET THE FUN BEGIN!

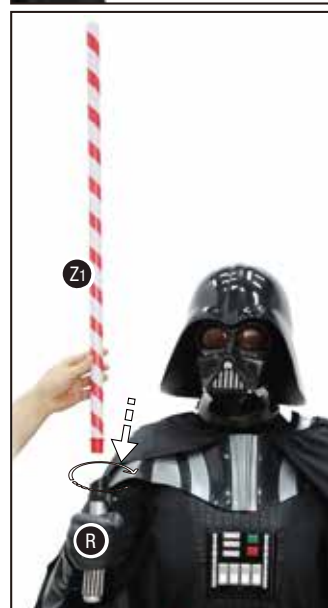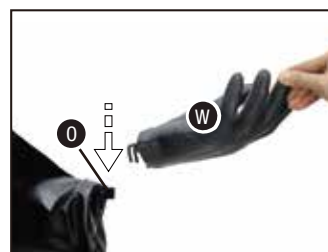


9.1

OPERATION INSTRUCTIONS:

1. Plug the power adapter into a standard power outlet and adjust the settings on the Function Control Box, located on the (K) Upper Body Frame with Control Box, as desired.

2. Settings:

| | |
|---|---|
| SENSOR / DÉTECTEUR / SENSOR | This switch mode will activate lights, sound, and animation when the Infra red (IR) sensor is activated and will operate for 1 activity cycle with each activation. The Infra red (IR) sensor has a range of up to 4 m/13 ft. and will activate when someone comes within an 80 degree angle from left to right, as well as from above and below. |
| OFF • STEP PAD / ARRÊT • TAPIS ÉLECTRONIQUE / APAGAR • ALMOHADILLA DE PASO | This switch mode allows the item to be activated only if triggered by using a Step Pad or Try Me Button (Not Included). The item will operate for one activity cycle with each Step Pad or Try Me activation. Otherwise, the item will stay off. |
| LIGHTS ONLY / ÉCLAIRAGE UNIQUEMENT / SÓLO LUCES | This switch mode will activate only the lights of the item indefinitely until the switch mode is changed from the lights only setting. |
|  | Raise or lower the volume using the volume control turn dial, turn all the way down to turn the volume off . |



WARNING

This item is not a toy and should be used for decoration only. This item contains small parts that can be a choking hazard. Keep all plastic and wire parts away from children.

- 1. Please use the adapter supplied by manufacturer.
- 2. Please assemble item according to instructions. Connect all wires according to matching color.
- 3. Children should be supervised by adults. Item should not be grabbed, as it becomes a tipping hazard. Keep flammables away from the adapter, as it heats up during operation.

Please view all instructions carefully before assembling. Save this instruction sheet for future reference.

CARE AND STORAGE INSTRUCTIONS

For best performance operate your item indoors. When not in use, store this product in its original packing. Keep away from heat and moisture.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user’s authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna, Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or experienced radio/TV technician for help.
CAN ICES-003(B)/NMB-003(B)



Questions, problems, missing parts? Before returning to the store, please have a copy of your receipt ready and email the SVI customer experience team (customerservice@svious.com) within 90 days of the date of purchase or call Home Accents Holiday Customer Service 8 a.m. - 7 p.m., EST, Monday - Friday, 9 a.m. - 6 p.m., EST, Saturday

1-855-HD-HOLIDAY (1-855-434-6543)
HOMEDEPOT.COM