INSTALLATION AND CARE GUIDE

WOODBRIDGE®

Toilet + Bidet Seat



Compliance with the following Plumbing Codes & Standards:

- 2015 Uniform Plumbing Code® (UPC)
- 2018 International Plumbing Code® (IPC)
- WaterSense® Certified Toilet
- CSA B45.5 / IAPMO Z124-2017- Plastic Plumbing Fixtures









Customer Service Phone: 562-229-0088. (Monday - Friday 9 AM - 5 PM Pacific Time)

Or Email: help@woodbridgebath.com



READ ALL INSTRUCTIONS BEFORE UNPACKING THE PRODUCT

INSTRUCTIONS THAT, IF IGNORED COULD RESULT IN DEATH OR SERIOUS INJURY CAUSED BY INCORRECT HANDLING OR INSTALLATION OF THE PRODUCT. THESE INSTRUCTIONS MUST BE OBSERVED FOR SAFE INSTALLATION.



2 PEOPLE ARE REQUIRED TO LIFT AND DURING **ENTIRE INSTALLATION OF THIS PRODUCT**



INSTALLATION OF THIS PRODUCTS BY AN **INEXPERIENCED INSTALLER MAY RESULT** PERSONAL INJURY OR DEATH!



We reserves the right to change, update, modify, alter, redesign this manual/product or its policies without prior notice!

We shall not be liable for any injuries or property damages in connection with this product during installation or use of this product!

This products must be installed by a fully insured and licensed plumber only. Installation of any our product by anyone other than fully insured and licensed plumber shall void limited warranty. We recommends that such licensed plumber have experience in the installation of products.

Limited warranty is void on any commercial installation

We are not responsible for local code compliance for this product. Building and plumbing codes may vary from state-to-state in accordance to your location. We are not resonsible for providing any compliance certifications.

Under no circumstances will we be liable for any and all incidental damages sustained in connection with this product

Neither manufacture, nor distributor, nor retailer is responsible for water damage or flood caused due to use of this product.

Under no circumstances will we be liable for any and all fees, cost of installation/reinstallation/removal, subsequent damage or transportation in case of the product defect

TOILET COMPONENTS

During unpacking the product and prior to installation inspect your new product for any damages or missing parts. Do not attempt to install or operate the product if the product is damaged.



Bowl with lid



Bidet Seat



Wax Ring



 
Mounting T-Bolt



The plastic piece



Plastic washer






Mounting Screw




T-Bolt Nuts and Washers


TOOLS REQUIRED FOR INSTALLATION

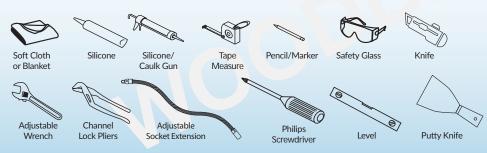

OTHER TOOLS MAY BE REQUIRED

DIMENSIONS/TECHNICAL DATA

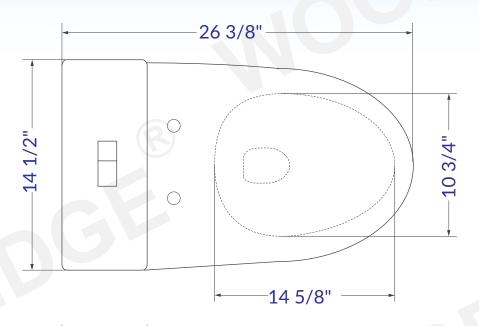


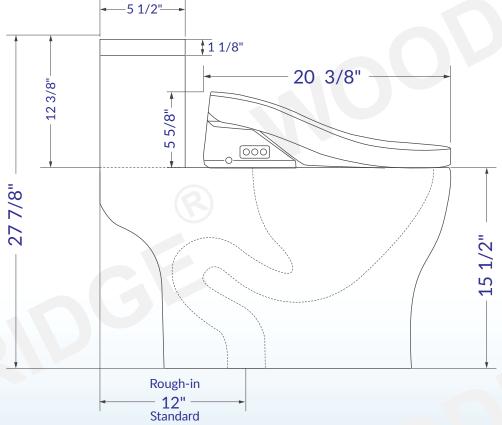



IMPORTANT INFORMATION

- \bullet Measurements are \pm 3/8" and subject to change without notice
- Specifications & Configurations are subject to change without notice Measurements herein supersede all others published prior to
- Please measure toilet on-site before installation
- Please note that installer(s) must be certified or warranty will be voided.
- Measurements herein supersede all others published prior to publication date shown below

WATER SUPPLY LOCATION & TECHNICAL INFORMATION

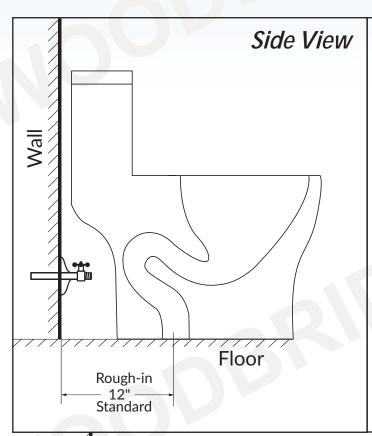


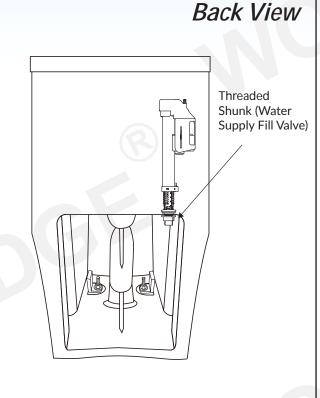

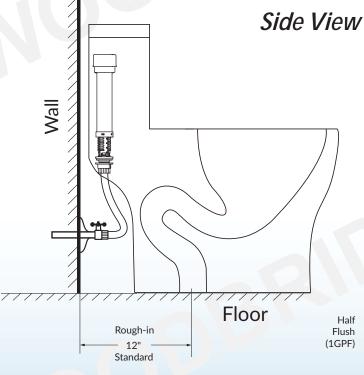

Full Half Flush (1.6GPF)



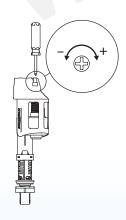

Adjust the water level in the toilet's tank if necessary by rotating the adjustment screw to increase (+) or decrease (-) a level of water in the toilet's tank.

IMPORTANT INFORMATION

- Measurements are ± 3/8" and subject to change without notice
- Specifications & Configurations are subject to change without notice
- Please measure toilet on-site before installation
- Please note that installer(s) must be certified or warranty will be voided.
- Measurements herein supersede all others published prior to publication date shown below



IMPORTANT!

Shut off main water supply prior to installation!

REMOVE OLD TOILET

- 1. Shut off water supply line. If you do not have shut-off valve near the toilet shut off main water supply line.
- 2. Flush the old toilet and make sure that tank is empty.
- 3. Disconnect and remove water supply line connected to the toilet's tank.
- 4. Remove old toilet, bolts, nuts from the closet flange.
- 5. Clean closet flange area from old wax ring and putty sealant using putty knife from the base area.
- 6. Clean any remaining debris and wipe any water at the installation area
- 7. Temporarily plug flange on a floor with a flange plug or towel to prevent gasses from escaping

IMPORTANT! The mounting surface area must be clean, dry, and leveled prior to installation of the new toilet!

NOTE! Inspect the existing closet flange for damages. If damaged, replace it to new flange before proceeding to the installation

Step 1. Insert 2 floor bolts inside of the toilet flange

Step 2. Slide the closet bolts through the holes and

PREPARE CLOSET FLANGE


Make sure that rough-in is 12" by measuring the distance from the wall to the center of the closet flange.


See Figure 1


Bathroom Wall Bathroon Floor

Figure 1

Closet Flange

 

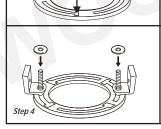

 

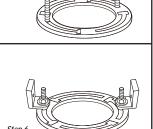


Figure 2

INSTALL WAX RING


Important: safety glasses must be worn by the installer and all bystanders.

Cover the floor with a soft-close blanket. Carefully turn the toilet on it's side or upside-down on the blanket with assistance of a second person. Install wax ring over the horn discharge located on the bottom of the toilet's bowl.

Note: Ceramic is a fragile material. You must always cover the floor with a soft-cloth blanket if you want to put the toilet on the floor on any side other than the bottom of the toilet. If you do not cover the floor with a soft-close blanket contact of the toilet with the floor may and will cause minor or moderate scratches on the toilet's surface.



Always Use Soft-Cloth Blanket

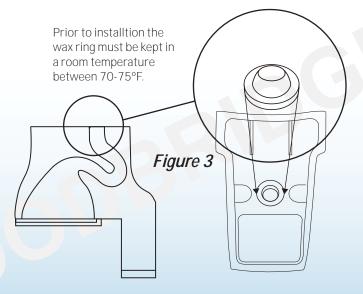

CAUTION!



2 PEOPLE ARE REQUIRED TO LIFT AND DURING ENTIRE INSTALLATION OF THIS PRODUCT

INSTALL NEW TOILET

Step 1. Lift and carefully put the toilet over the closet flange so the closet bolts can go through the mounting holes in the toilet's base. Once the bowl is in the position press the bowl down with slight twisting motion in level position towards the floor. Apply your body weight to evenly compress the wax ring to create watertight seal. Make sure that the bowl is as leveled as possible to have a nice seal tight.

Do not rock the toilet back and forth and side to side as it may and will break a seal and you will need to replace the wax ring again and start the installation process over. See Figure 4

Step 2. Once the toilet is set and leveled install washers and nuts over the closet bolts. Tighten nuts. Do not overtighten the nuts. It may and will cause damage to the toilet's ceramic base.

See Figure 5

Floor Note: It may be required to use shims under the edge of the toilet's bowl. Due to manufacturing process of vitreous china ceramic products, every toilet may have slight level variations. It does not mean that the toilet is defective. In addition your floor might be uneven or not leveled as well.

CONNECT TOILET'S TANK TO WATER SUPPLY LINE

Connect the water supply line between the tank and water shut-off valve using a toilet hose (not supplied). When connecting toilet hose tighten coupling nut to the tank by 1/4 turn beyond the hand tight.



Do not overtighten nut on the tank connection. It may and will cause water leakage.

Turn on valve on water supply line and allow tank to fill. Check all connections for leakages and tighten as needed.

Once tank is filled with water flush it 4-5 times to perform a test of the flushing system. At the same time check the bottom of the toilet for leaks to make sure that the wax ring is properly installed and sealed.

If there are no leaks you are ready finalize the installion. If any shims are installed at the bottom of the toilet's bowl you may trim them. Apply silicone around base of the toilet's. Allow 24 hours for silicone to dry before start using the toilet. *See Figure 6*


Important: Leaks may not occur during or right after the installation. Make sure to check for leaks every couple hours first day installed and occasionally check it everyday for the next week to ensure that toilet is properly installed and no leaks occur. If any leaks occur immediately shut off the water supply line valve and contact your local plumber to fix all leaks.

Important:

Under no circumstances We shall not be liable for any and all incidental damages sustained in connection with this product

Neither manufacture, nor distributor, nor retailer is responsible for water damage or flood caused due to use of this product.


Under no circumstances We shall not be liable for any and all fees, cost of installation/reinstallation/removal, subsequent damage or transportation in case of the product defect

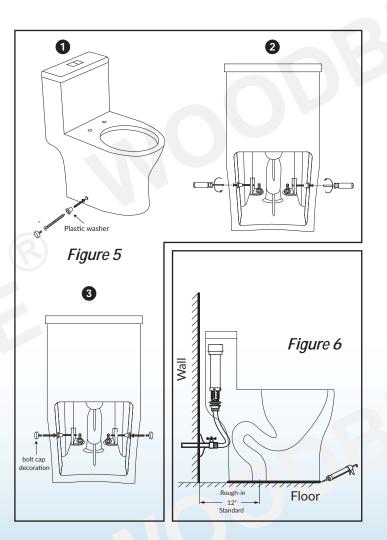


ADJUSTMENT & MAINTENANCE (DUAL FLUSH VALVE)

Important Note: Flush GPF amount is factory set. No additional adjustment is required. This page is for reference only. All adjustments are already made by manufacturer.


1. BASE INSTALLATION

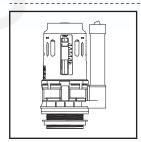


Check the dual flush valve and make sure that rubber gasket in the it does not have any damaged or missing parts

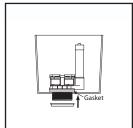


Install the base with the tank, turn the screw as illustrated to make sure there is no water leakage and no looseness

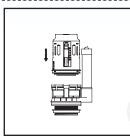

Install a body of the flush Rotate the valve into the base and make sure they can be totated clockwise arbitrarily.

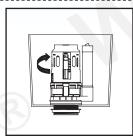



clockwise to adjust its position inside of the toilet's tank

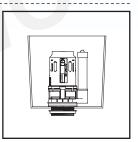

Install the sealing gasket

2. FLUSH VOLUME ADJUSTMENT

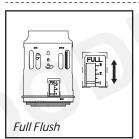

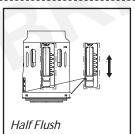

Full flush and half Flush range will decline when the button is moved upward from the bottom

3. PUSH BUTTON ADJUSTMENT




Check the completeness of the product before adjustment



Take out the lock nut and insert the push button into the tank cover




Adjust the push button and lock the nut to make it well-fixed in the tank

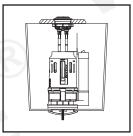


The distance between the rod tail and valve push button must be 1-2mm

4. REFILL TUBE ASSEMBLY

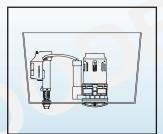


Put the refill tube into the white cap hole firmly

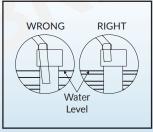


The refill tube can't be lower than the watersealing level

TROUBLESHOOTING

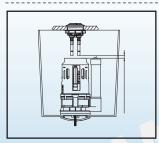

If the rod is too short, please re-adjust it (outward rotation).

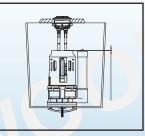


If the rod is too long please cut-off the extra length and re-adjust it.



ADJUSTMENT & MAINTENACE (FILL VALVE)

Important Note: Flush GPF amount is factory set. No additional adjustment is required. This page is for reference only.

All adjustments are already made by manufacturer.

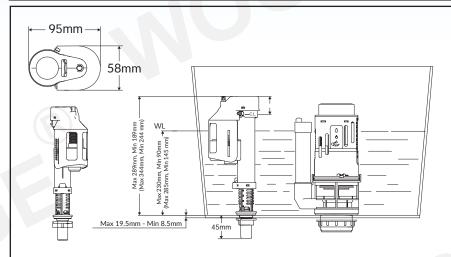

Instructions:

When valve installed, the critical level mark on fill valve (identified by C.L. mark on valve body) shoud be at least 1" above top of the over flow pipe.

Required:

• Water temperature: 36-112°F

Important:

Under no circumstances seller shall not be liable for any and all incidental damages sustained in connection with this product

Neither manufacture, nor distributor, nor retailer is responsible for water damage or flood caused due to use of this product.


Under no circumstances seller shall not be liable for any and all fees, cost of installation/reinstallation/removal, subsequent damage or transportation in case of the product defect

IMPORTANT: Do not use or drop any chlorine or any other chemicals. Use of chemical products will result in damage to the fill valve and flush valve components and may cause flood and property damage. Do not overtighten bolts/nuts as it may and will cause damage to the toilet parts and componets.


1. PREPARATION

Remove the worn-out fittings and clean your tank prior to the installation of the new ones. There might be a lot of impurities in your tank that may cause damage to the new parts if you do not clean them out. The tank must be absolutely clean prior to installation.


2. WATER LEVEL ADJUSTMENT

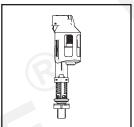

Check the fill valve and make sure that it does not have any damaged or missing parts

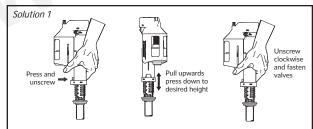


- 1. Press buckle and unscrew.
- 2. Pull the valve upwards or press down to desired height.
- not have any damaged or 3. Unscrew the valve body and fasten the buckle

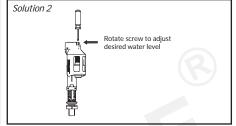


Rotating screw, rise or lower the water level to adjust water level to suitable position (water volume will gradually increase when the adjuster is moved upward from the bottom.)


3. FILL VALVE INSTALLATION

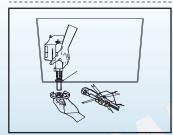


Install the valve into tank. Do not use any wrench tools. Fasten with hand only.

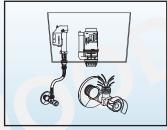

Connect water supply to the fill Turn off water supply valve valve. Turn on water. Turn off water supply valve before height adjustment of

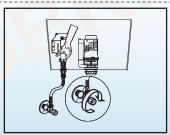


Turn off water supply valve Put the refill tu before height adjustment of the cap hole firmly. toilet's fill valve.

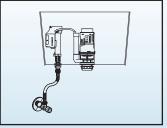


Put the refill tube into the white cap hole firmly.

CLEANING & TROUBLESHOOTING (FILL VALVE)


FILL VALVE CLEANING

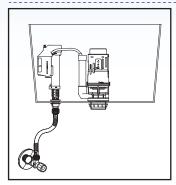


Shut off water supply line before filter cleaning.

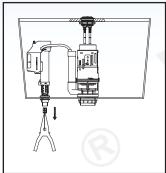

Carefully, take out the filter from inlet by using pliers.

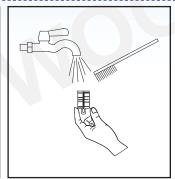


Use water to wash and clean the filter and adapter from any debris.

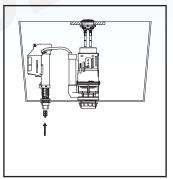

Re-install the filter and re-connect the water supply line.

TROUBLESHOOTING

Issue	Cause	Solution	
Water level is too high or too low	Improper water level adjustment	Adjust the water level	
Fill valve fails to shut off or fails to fill the water into the toilet's tank	1. Inlet valve switch is turned on. 2. Inlet valve float crashed against ceramic wall 3. Filter screen is clogged due to dirty water 4. Improper refill hose installation	1. Turn on inlet valve switch 2. Adjust inlet valve position 3. Clean the filter screen 4. Install refill hose correctly (see diagram on the right)	

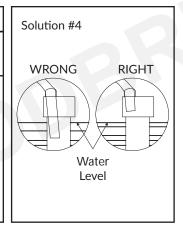

Bidet Seat Installation Instructions

When using electrical products, especially when children are present, basic safety precautions shouldalways be followed, including the following:

- 1. The appliance is not to be used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction.
- 2. Children being supervised not to play with the appliance.
- 3. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- 4. Children shall not play with the appliance.
- 5. Cleaning and user maintenance shall not be made by children without supervision.

READ ALL INSTRUCTIONS BEFORE USING



DANGER–To reduce the risk of electrocution:

- 1. Do not use while bathing.
- 2. Do not place or store product where it can fall or be pulled into a tub or sink.
- 3. Do not place in or drop into water or other liquid.
- 4. Do not reach for a product that has fallen into water. Unplug immediately.
- 5. Do not wash the main unit or electrical plug with water or detergent.
- 6. Do not handle the electrical plug with wet hands.
- 7. Do not put a hand or other staff over the outlet of air dryer or block the outlet of air dryer.
- 8. Never disassemble, repair or modify this product.
- 9. During installation, disassembly, repaire and maintenance of the product, the power plug must be switched off and water supply be shut off.



WARNING—To reduce the risk of burns, electrocution, fire, or injury to persons.

- 1. Close supervision is necessary when this product is used by, on, or near children or invalids.
- 2. Use this product only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.
- 3. Never operate this product if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water. Return the product to a service center for examination and repair.
- 4. Keep the cord away from heated surfaces.
- 5. Never use while sleeping or drowsy.
- 6. Never drop or insert any object into any opening or hose.
- 7. Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
- 8. Connect this product to a properly grounded outlet only. See Grounding Instructions.
- 9. Do not throw cigarettes and other burning stuff into toilet, otherwise it might cause fire.
- 10. This product is electric appliance, so it must be placed far away from water. Please don't drench urine and other liquid to it.
- 11.Do not lay on side or upside the product during the electrical circuit.
- 12.It is prohibited to use other electric appliances in the same socket.
- 13. It is forbidden to use the power extension or unstable loose outlet.
- 14. The old aging water supply hose can not be used, otherwise it might cause leakage, fire or electrical shock. Installation of the bidet seat should include specified components and new water supply hose.

WOODBRIDGE IMPORTANT SAFETY INSTRUCTIONS



CAUTION-Indicates that failure to follow the instruction may cause body injury or property damage.

- 1. Do not install or use the product in wet places as steam room etc. This product must be connected to properly grounded power outlet socket.
- 2. It is recommended to use water-proof electrical outlet which should be installed in the place where is not easily got wet.
- 3. This product should be used with AC 110V-120V,50/60Hz electrical current only,load current is at least 15A. P ower plug must be equipped with ground fault circuit interrupter or ground fault electrical leakage protector or similar high sensitive, rapid type leakage switch (Rated sensitive current under 6mA).
- 4. When it thunders, it is strongly recommended to pull out the power plug.
- 5. Do not stand on ceramic toilet.
- 6. Ceramic toilet must install floor fixing bolt.
- 7. Do not stand on product unit, seat and cover.
- 8. Do not lean against the seat cover when using the product, to avoid damage.
- 9. This product is equipped with soft-closing seal cover. Heavy pressing or pushing may damage the soft-closing damper.
- 10. Do not use lacquer thinner,petrol,liquid medicine,detergent,insecticide,toilet cleanser and scrubbing brush to clean the product.
- 11.Exposure to direct sunlight is prohibited.
- 12. Only use tap water or potable water; otherwise it may cause chafing.
- 13.Do not connect water supply to heater outlet. Make sure inlet water temperature at 3~35°C
- 14. When the room temperature is under zero degree, please dry up the water tank, to avoid freezing.
- 15. Raise rest room temperature to prevent the toilet from damage due to freezing.
- 16.When move the product from cold or wet environment into normal room temperature, wait for 2 hours until the condensation water is fully volatilized. Doing so can prevent the product from electrical short-circuit.
- 17. When not using the product over three(3) days, drain the water out of the container and pull the elelctrical plug from the wall outlet.
- 18.Stop using the product and shut off the power when product malfunctions, please contact the service people for professional service.

GROUNDING INSTRUCTIONS

This product should be grounded. In the event of an electrical short circuit, grounding reduces the risk of electric shock by providing an escape wire for the electric current. This product is equipped with a cord having a grounding wire with a grounding plug. The plug must be plugged into an outlet that is properly installed and grounded.



DANGER – Improper use of the grounding plug can result in a risk of electric shock.

If repair or replacement of the cord or plug is necessary, do not connect the grounding wire to either flat blade terminal. The wire with insulation having an outer surface that is green with or without yellow stripes is the grounding wire.

This product is factory equipped with a specific electric cord and plug to permit connection to a proper electric circuit. Make sure that the product is connected to an outlet having the same configuration as the plug. No adapter should be used with this product. Do not modify the plug provided — if it will not fit the outlet, have the proper outlet installed by a qualified electrician. If the product must be reconnected for use on a different type of electric circuit, the reconnection should be made by qualified service personnel.


SAVE THESE INSTRUCTIONS



	Rating pressure	AC 110-120V,50/60Hz
M-1 - 11 -26	Rating power	1050-1250W
Main Unit	Water pressure range	Minimum water pressure 0.07MPa (20L/min. flowing pressure). Maximum water pressure 0.8MPa (Hydrostatic pressure)
	Electrical wire	length is about 1.8m
	Container capacity	600ml
	Heating power	1000W
	Water temperature	6 different level adjustment
Cleaning	Water volume	5 different level adjustment
Cleaning device	Cleansing mode	Rear cleaning/Rear massage,Front cleaning for ladies
acvice	Spray cleansing location	5 different level adjustment
	Water pressure protector	Pressure stabilize,Automatic pressure discharging
	Anti-fouling device	Speedy water discharge device, Automatic nozzle cleaning, Anti-syphon device, Anti-backflow device, Filter device
	Safety device	Temperature controller, Thermal fuse, Ground protection, Leakage protection device, Air burning preventer
	Warm wind speed	Over 4 M/S
Drying	Warm wind temperature	6 different level adjustment
device	Heating power	250W
	Safety device	Temperature sensor, Temperature controller, Thermal fuse
	Surface temperature	6 different level adjustment
	Heating power	50W
Heated seat	Open and close device	Quiet soft-closing device
	Heated burning protection	The seat temperature will automatically lower to level 1 in 10 minutes after using
	Safety device	Seat sensor, Temperature sensor, Temperature controller, Thermal fuse
	Night light assembly	Intellignt,often in the off state
Intelligent	Mute setting	Buzzeroff during night
	User ID setting	To avoid disturbance from remote controls by multi-user

Remote Control Panel Parts		
Base Plate Parts	 Base plate Bolt (2pcs) Flat Washer (2pcs) Plastic Plate (2pcs) Expansion Nut (2pcs) 	
Water Supply Assembly	① Water Supply Pipe (1pcs) ② 3-way Connector (1pcs)	
Installtion Manual Warranty Card Installation paperboard	Installtion Manual Warranty Card Installation paperboard	Installtion Manual Warranty Card Installation paperboard
Main Unit		


MAIN UNIT IDENTIFICATION

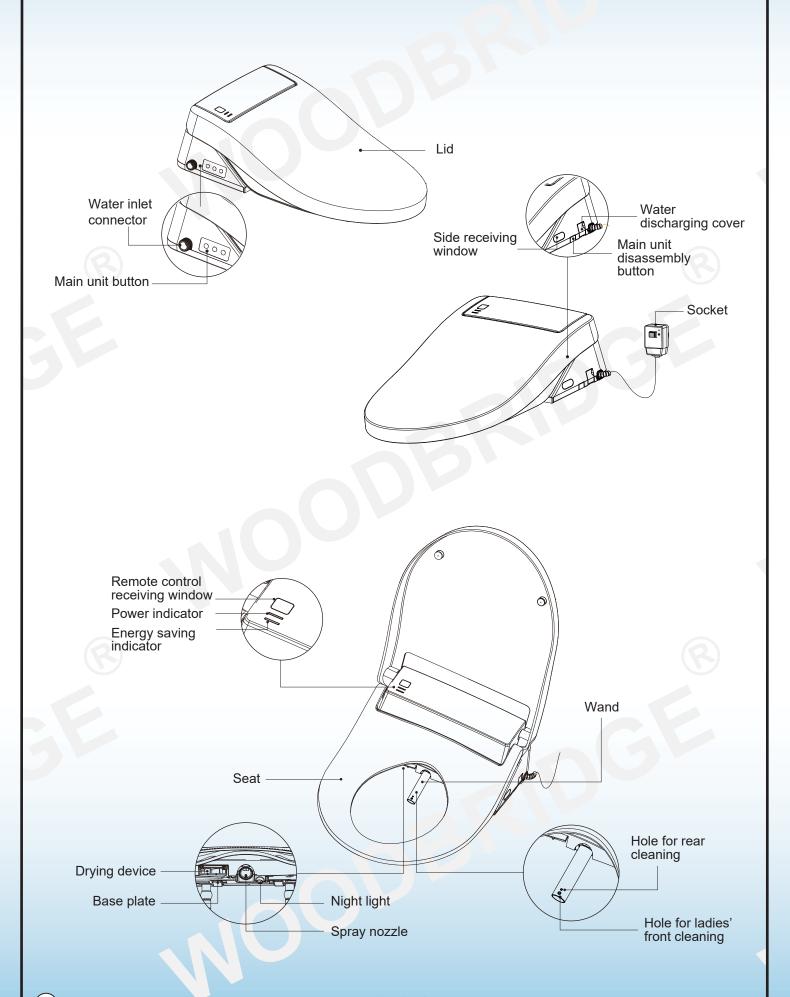




Installation dimension

Note:please check if the installation dimension matching the user's toilet.

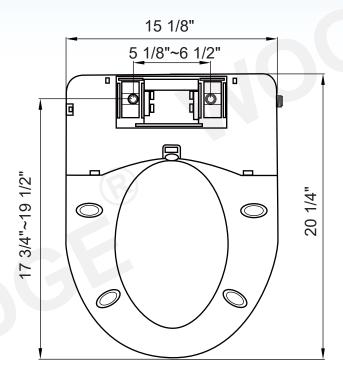

Installation of mounting plate

Press the expansion nuts into the installation holes in the toilet, then install the base plate, plastic plates, flat washers and bolt as per the drawing and tighten the bolts.

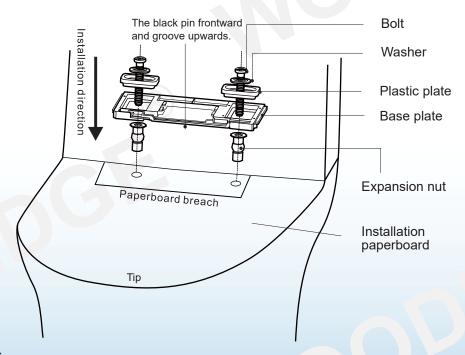


Note:


Unfold the installation paperboard, align the paperboard well fit ceramic bowl from the tip, and then insert base plate to the paperboard breach to make sure base plate allign with paperboard breach.

Installation and disassembly of main unit

Installation
Push the washlet back onto the base plate until a "click" is heard.

Disassembly
Press the "removal button" on washlet,
until a "click" is heard,and pull it out.

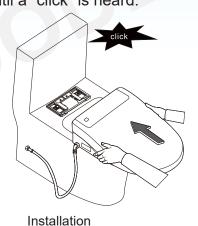

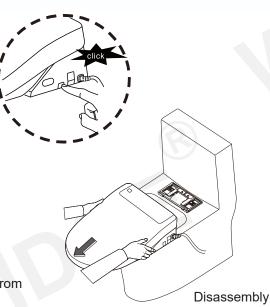


Note:

Before pulling out the washlet, release hand from "removal button".

Connecting the water supply pipe

- 1.Side inlet: Install the 3-way valve onto angle valve, then attach the water supply hose and the washlet inlet hose into 3-way valve. Connect L-shaped end of water supply hose to the washlet inlet connector. [(a) and (b) parts not included in the water supply assembly.]
- 2.Bottom inlet:Connect water supply on the inlet connector,then put supply hose and power line through the relevant holes, finally install seat cover.

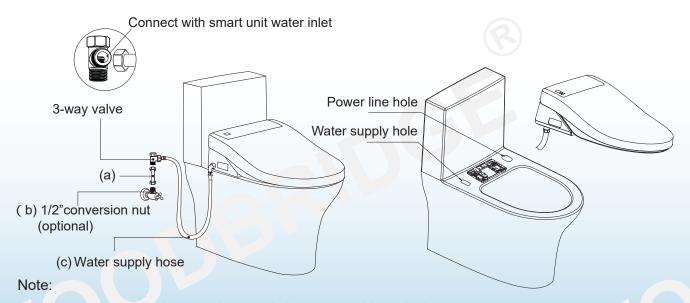

Do not distort or damage the supply hose to avoid any leakage.


Do not use water supply hose and other accessories of other brands, which may cause danger.

 
Do not recommend to use our old water supply hose and accessories, which may cause danger.

Checking the power and water supply

Connect the water supply hose and turn on the angle valve. Check if any leakage.

Insert power plug into power socket.

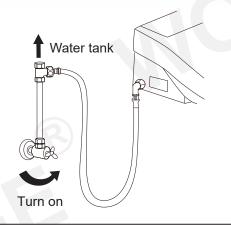



N


If it's an electric leakage protection plug,press protection switch, indicator light is on which means there is electricity. Press electric leakage test button prior to usage,protection switch bounces to show that protection function works normally.


NOTE:

NOTE:


If it's not an electric leakage protection plug, insert power plug into power socket directly.

The main unit buzzer rings first "click", the power light and energy saver light will flash. Power light on and energy saver light off means self-inspection. The buzzer rings second "click" to show that self-inspection is finished.

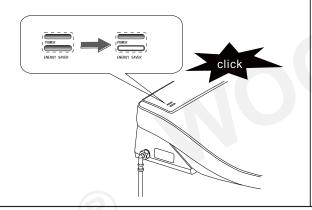

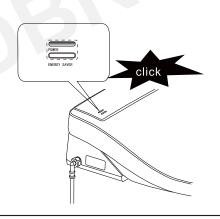

The water starts to flow into tank and heating will take 3 minutes.

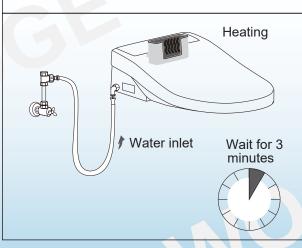

Function illustration of keys in main unit and actuator				
	Power	 Long press "Power" button to enter standby mode; and then quick press "Power" button to restore functional mode. When people sit, press "Power" button to stop the function of rear, front cleaning or drying. When no one sits, press "Power" button to switch between function mode and power save mode. 		
	Front cleaning button	When people sit, press "Front cleaning" button, it will clean the front portion of body; repress "Front cleaning" button or "Power" button, the function will be finished. After a cycle, this function will be finished automatically, if people keep sit, it will switch to drying function, and will stop after a cycle.		
	Rear cleaning button	1.When people sit, press "Rear cleaning" button, it will clean the rear portion of body; repress "Front cleaning" button or "Power" button, the function will be finished. After a cycle, this function will be finished automatically, if people keep sit, it will switch to drying function, and will stop after a cycle. 2.When no one sits, press "Rear cleaning" button, then the wand will stretch out to clean the nozzle and spray wand.		

Remark:

- 1. When main unit is in functional mode, the light of power goes on and energy saver light is off; When in energy save function, the light of power goes off, and energy saver light is on; When in standby mode, both lights are off.
- 2. The default setting of all function is on middle level, after using remote-controller, shift to the level showing on remote-controller.
- 3.If the product is not used for continual 72 hours, the water in the tank will automatically discharge for 90 seconds and replaced by fresh water, to avoid bacteria.


Function illustration of keys in remote-control and LCD display instruction

• The operating method of remote control shows in instruction manual.



Main unit maintenance

- 1. Shut off power supply at maintenance.
- 2.Turn the seat upward open, press down the button located on the right side of main unit and pull out the seat. Wipe the stain with a soft damp cloth.
- 3.After cleaning,re-install the seat back to main unit.

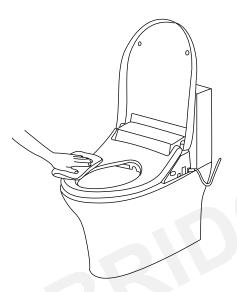


Note:


Do not pour the water on the product at maintenance.

Spray nozzle maintenance

Do the following to clean the wand.

- 1.Press "nozzle cleaning" or "rear cleaning" button for a while and wand will come out.Wipe the wand clean with a soft damp cloth.
- 2.Hold "nozzle cleaning" button and the wand doesn't come out. The nozzle will automatically spray to self-clean.
- 3.Press again "nozzle cleaning" or "stop" or "rear cleaning" button,it will stop the cleaning.

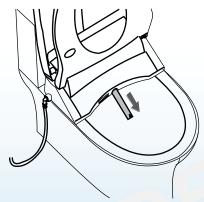

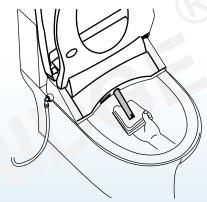


Note:

Do not apply force when pushing or pulling the wand, as this may damage the mechanism.

Inlet filter cleaning

 - 1.Pull out electrical plug, then shut off water supply valve and remove water supply hose.
- 2.Remove the filter. Use the brush to clean the filter.
- 3.Put the filter back into inlet after cleaning. Then connect the water supply pipe.






Use the brush to clean the filter.

Tank anti-freezing and anti-bacterial maintenance

When room temperature is under zero and electricity is disconnected, or user is away for a long time. The water inside the tank should be discharged.

- 1) Open the tank cover, press the discharge button, turn on valve to discharge the water.
- 2) Slightly press the discharge button protruding part to turn off discharging valve and cover.

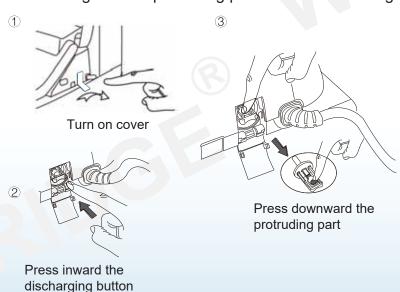



Note: Before water discharging, the power must be cut off!

TROUBLESHOOTING GUIDE

Problem	Cause	Solution
	Water supply hose buckling causes block	Solve the buckling
No flushing	Fill valve is off	Turn on the fill valve
	Water supply is cut off	Connect water supply and wait for the water
	Water supply hose buckling causes partial block	Solve the buckling
Poor flushing	Fill valve is not fully turned on	Turn on the fill valve fully
	Filter is dirty and causes block	Clean the filter
The water is not hot	The water temperature is setted on normal temperature level	Reset the water temperature
The water is not not	In standby mode or power save mode	Switch to function mode, and then wash after 3 minutes
Seat temperature	The seat temperature is setted on normal temperature level	Reset the seat temperature
is not hot	In standby mode	Shift to function mode for 3 minutes
Wind temperature is not hot	The wind temperature is setted on normal temperature level	Reset the wind temperature
No wind out	In standby mode or power save mode	Shift to function mode to use dry function
Spray wand	Power off	Push back the wand lightly and wait for the power
cannot retracted	Get stuck by impurities	Clear away the impurities
Spray wand	Power off	Push back the wand lightly and wait for the power
cannot stretch out	Do not sit in sensing area	Sit right in the sensing area
Controller cannot display	Reverse the polarity of battery	Reload the battery
	If the problems cannot be solved as per above methods, please shut-off the power, and contact service providers for maintenance.	
Caution	If the leakage circuit breacker often trips off, it means the products has electricity leakage, so please shut-off the power, and contact service provider for maintenance.	

Retain these installation instructions for future reference!

Thank you for using WoodBridge products!

Customer Service Phone: 562-229-0088. (Monday - Friday 9 AM - 5 PM Pacific Time)

Or Email: help@woodbridgebath.com

