

# CONTROL PANEL



## SENSOR COOK

Use to set the automatic sensor cook programs (See Page 14).

## SENSOR REHEAT

Use to set the automatic sensor reheat programs (See Page 15).

## TIME / WEIGHT DEFORST

Press once to set defrost program based on time (See Page 13).

Press twice to set defrost program based on weight (See Page 12).

## POPCORN

Use to set popcorn program (See Page 16).

## BEVERAGE

Used to make hot drinks (See Page 16).

## POTATO

Used to make potatoes (See Page 17).

## FROZEN VEGETABLE

Used to heat up frozen vegetables (See Page 17).

## DINNER PLATE

Used to heat up a dinner plate (See Page 18).

## SOUP

Used to make soup (See Page 18).

## CLOCK /TIMER

Press and hold to set the clock time (See Page 9).  
Press to set the timer function (See Page 10).

## MICRO

Use to microwave food with selected power level (See Page 11).

## LOCK

Press and hold to set child lock (See Page 19).

## +30 SEC

Press to add time during the cooking program (See Page 19).

## STOP/CANCEL

Press to clear all previous settings before cooking starts.

Press once to pause current cooking program or press twice to cancel the program.

## Menu / Time / Weight / Level Selector Knob

Turn to select cooking menus, time, food weight, portion or power level.

# FIRST TIME USE

If you are using your ExpressWave microwave oven for the first time, please be sure to:

- Clean the glass turntable with hot water, a small amount of dishwashing liquid and a nonabrasive cleaning pad.
- Do not immerse the body of the unit in water.
- When you plug in the unit, the display will show "12:00".
- While you are in the process of any setting, the oven will return to standby mode after 30 seconds without any operation.
- During cooking, if press **STOP/CANCEL** once or open the door, the program will be paused. Press the dial to resume cooking, but if you press **STOP/CANCEL** twice, the program will be canceled.
- When the cooking completes, the screen will display "End" with sound every two minutes until you press **STOP/CANCEL** or open the door.

## Product Specifications

Power Supply	120V/60Hz
Power Consumption (Microwave)	1350W
Rated Microwave Power Output	1100W
Operating Frequency	2450MHz
Outside Dimensions (W x H x D)	21 ¼ x 11 <sup>13</sup> / <sub>16</sub> x 18 ⅙ inch
Oven Capacity	1.3 Cu.Ft.