



## USE AND CARE GUIDE

### FLORENCE 3 PC BISTRO SET

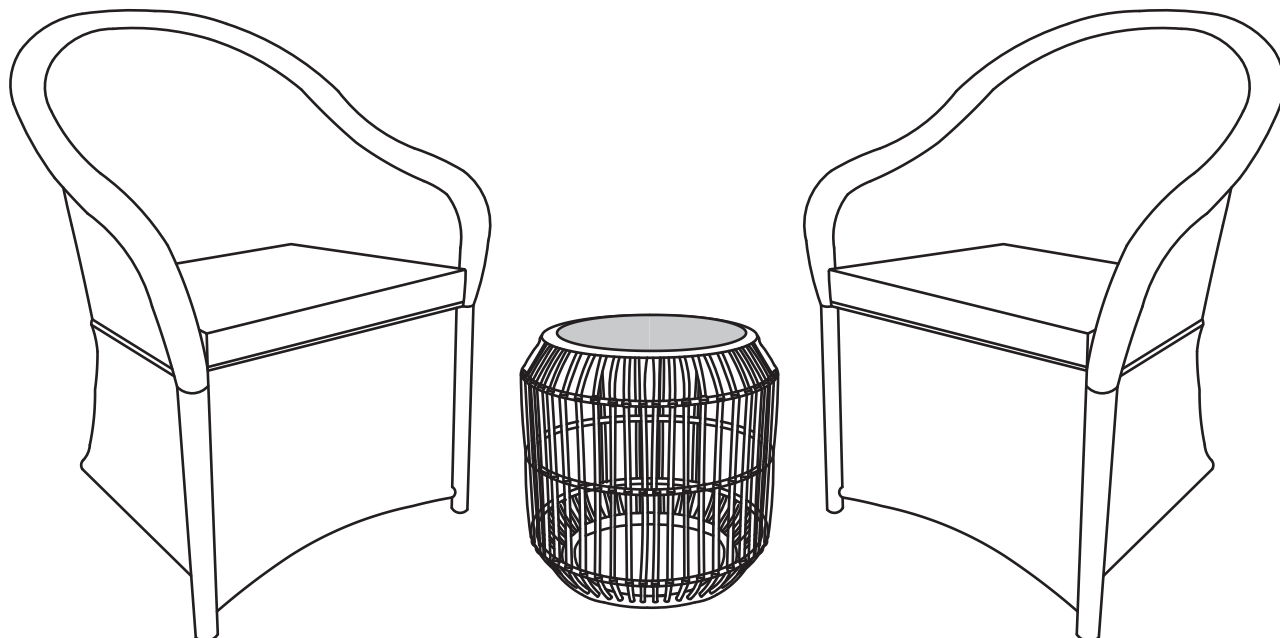

Before you begin

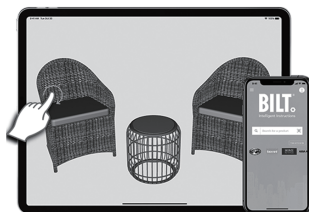

3D-GUIDED INTERACTIVE ASSEMBLY  
INSTRUCTIONS CAN BE FOUND IN BILT®  
DOWNLOAD THE **FREE APP**



Questions, problems, missing parts?

Before returning to the store, call StyleWell Customer Service  
8 a.m. – 7 p.m., EST, Monday-Friday, 9 a.m. – 6 p.m., EST, Saturday

**1-877-527-0313**

**HOMEDEPOT.COM**

THANK YOU

*We appreciate the trust and confidence you have placed in StyleWell through the purchase of this bistro set. We strive to continually create quality products designed to enhance your home. Visit us online to see our full line of products available for your home improvement needs. Thank you for choosing StyleWell!*

# Table of Contents

Table of Contents .....	2	Assembly .....	7,8
Safety Information.....	2	Maintenance .....	9
Warranty.....	3	Care and Cleaning.....	9
Pre-Assembly .....	4		
Planning Assembly .....	4		
Hardware Included .....	4		
Package Contents .....	5,6		

## Safety Information

### SAVE THESE INSTRUCTIONS



**WARNING:** THIS SET WAS MADE FOR THE EXPLICIT PURPOSE OF PROVIDING OUTDOOR FUNCTIONS AND IS NOT TO BE USED AS A TOY. THIS PRODUCT IS INTENDED FOR NORMAL OUTDOOR USE; HOWEVER, THE MANUFACTURER RECOMMENDS STORING AND/OR COVERING THIS PRODUCT WHEN ANY FORMIDABLE/SEVERE WEATHER IS APPROACHING.



**WARNING:** DO NOT LOCATE THIS PRODUCT NEAR OPEN FLAMES. DO NOT USE THIS PRODUCT AS A SUPPORT. DO NOT SHAKE, LEAN OR CLIMB ON THE PRODUCT. CHILDREN UNDER THE AGE OF 10, NEAR THE PRODUCT, SHOULD BE SUPERVISED BY A COMPETENT ADULT AT ALL TIMES. THIS PRODUCT IS NOT INTENDED FOR COMMERCIAL USE, WHICH WILL VOID THE WARRANTY.

### READ ALL INSTRUCTIONS BEFORE USE

To reduce the risk of injury to persons:

1. Close supervision is necessary when this furnishing is used by or near children, or disabled persons, if applicable.
2. Use this furnishing only for its intended use as described in these instructions. Do not use attachments not recommended by the manufacturer.
3. Do not move the chair while it is occupied. Failure to obey this caution could result in injury.
4. This table is not intended to support an umbrella. Umbrellas must have a suitable base or stand.

# Warranty

---

## WHAT IS COVERED

This Outdoor Patio product has a limited residential domestic warranty from the date of the original retail purchase, that the product will be free from defects in material and workmanship and is valid for the original retail purchaser only, with the original sales receipt including purchase date, and is not transferable. In certain warranty claim cases, photographs and or visual inspection reports may be required. Should replacement of the warranted item(s) be unavailable, the manufacturer reserves the right to substitute items of our choice that are of similar style and quality. Warranty coverage period depends on the purchased item. This Warranty does not apply to any damage caused to the product as a result of the product being used in a commercial or industrial setting. The terms of this warranty are subject to change without notice.

**Steel Frame – 1 Year:** We warrant the frame to be free of manufacturing and workmanship defects to the original purchaser for one year. If the steel frame fails structurally within one year from the original date of purchase, the manufacturer will replace the frame in the original finish and style whenever possible at no charge to the original purchaser.

**Fabric – 1 Year:** If fabric on a cushion or sling on the product separates within one year from the original date of purchase, the manufacturer will replace the fabric in the original color and pattern whenever possible at no charge to the original purchaser with proof of purchase. The replacement shall be on the individual item or items not on the complete collection or setting. Any installation charges are the sole responsibility of the original purchaser. Fading, and/or discolorations due to exposure to elements, chemicals, and spills are not covered. Foam and padding are excluded from this warranty.

**Wicker Weave & Vinyl Strap – 1 Year:** If the wicker weave or vinyl strap fails structurally within one year from the original date of purchase, the manufacturer will replace the frame in the original finish and style whenever possible at no charge to the original purchaser. The replacement shall be on the individual item or items not on the complete collection or setting. Fading or discolorations resulting from exposure to the elements, chemicals or from spills are not covered.

**Alternative Tops – 1 Year: Residential Use:** Alternative Table Tops (non-metal) are warranted for one year for defects. Glass and tile tops are not covered in this warranty.

**Warranty Exclusions:** Failure to follow general care and maintenance guidelines will void all warranty. Excluded from the warranty are any products used for commercial, industrial, contract or any other non-residential purposes, display models, clearance items, or items purchased “as is”, freight damage, products damaged by acts of nature such as, but not limited to, freezing or high winds, extreme climate conditions, vandalism, fire, abuse, or improper assembly. Fading and discolorations from exposure to the elements, chemicals, oils, spills or fluids; hardware against corrosion or rusting; splitting or buckling of tubing resulting from exposure to water and freezing temperatures are not covered. After 90 days from date of purchase, shipping and handling charges are the original purchasers responsibility. Also excluded are purchased or replacement parts; plastics, normal fading, scratching, or chipping of the finish, staining or discoloration of furniture, accidental damages, repairs, or modifications by consumer, normal wear and tear. Exclusion also includes loss of time, inconvenience, travel, packaging, and/ or any other incidental damages. Lack of original receipt will void warranty. At no time shall the manufacturer’s responsibility exceed the value of the replacement product. The manufacturer reserves the right to substitute similar product of same quality if model in question is no longer in production or available.

# Pre-Assembly

## PLANNING ASSEMBLY

Compare all parts with the Hardware Included and Package Contents sections. If any part appears missing or damaged, do not assemble and use this product. Contact Customer Service.


## HARDWARE INCLUDED



AA



BB

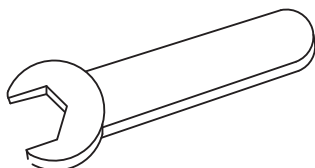

CC



DD




EE

For 1 Chair    For 2 Chairs

Part	Description	Quantity	Quantity
AA	Hex nut (Ø6mm)	4	8
BB	Washer (Ø6mm)	6	12
CC	Hex wrench (Ø6mm)	1	1
DD	Bolt (Ø6×20mm)	2	4
EE	Allen wrench (Ø4mm)	1	1

Pre-Assembly (continued) 65-MH313Chr


PACKAGE CONTENTS

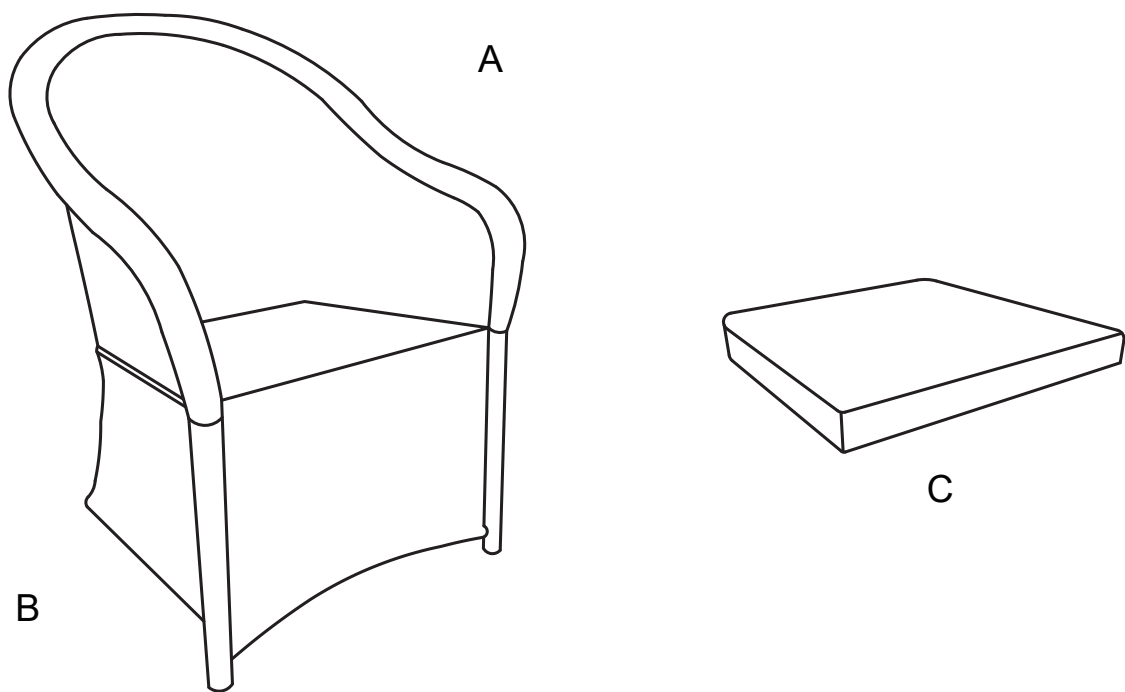

Part	Description	Quantity
A	Top	1
B	Base	1
C	Seat Cushion	1

Pre-Assembly (continued) 65-MH313Tbl

PACKAGE CONTENTS

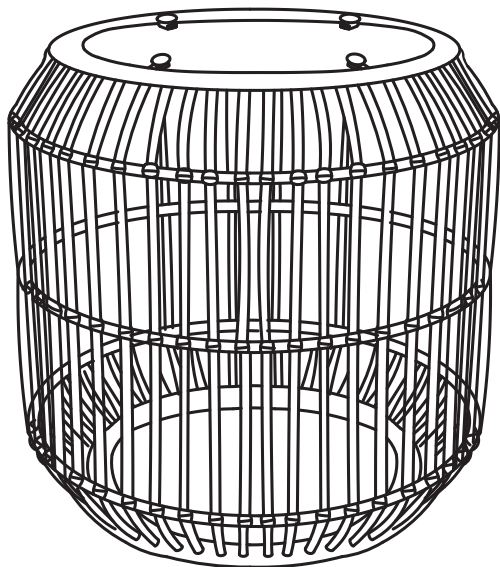

D




E

Part	Description	Quantity
D	End Table	1
E	Glass Top	1

# Assembly


## 1 Preparing the chair

- Place the seat (A) upside down on a soft surface.

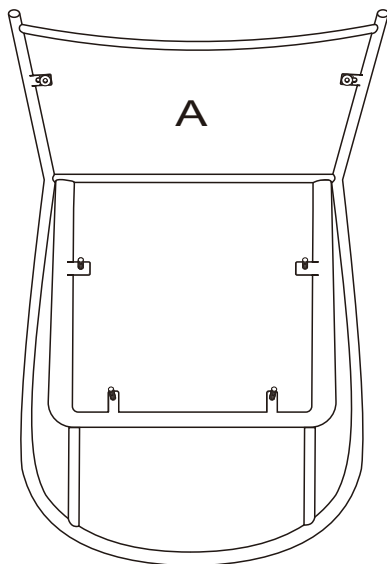

## 2 Attaching the base


- Mount the seat (A) onto the base (B) by inserting the pre-attached seat bolts into the holes on the base (B).
- Secure the seat (A) and base (B) together using washers (BB) and nuts (AA). Tighten using the hex wrench (CC) but do not tighten fully.

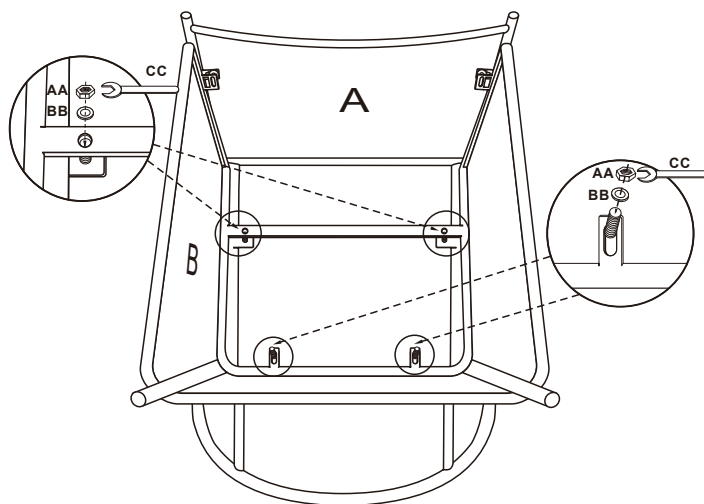

## Assembly (continued)


### 3 Securing the front skirt

- Secure the front skirt of the seat (A) to the base (B) using bolts (DD) and washers (BB).
- Tighten with Allen wrench (EE), but do not tighten completely at this step.

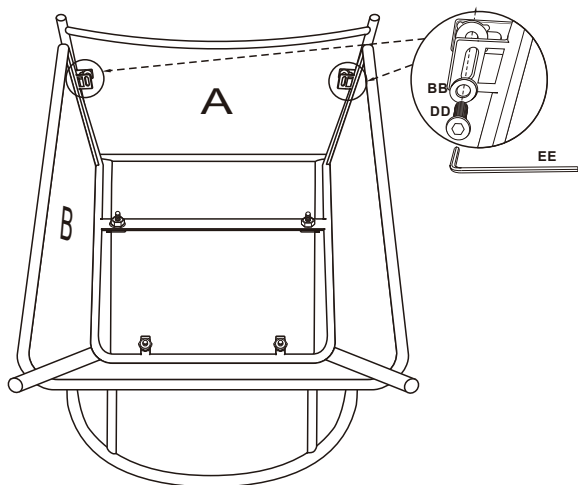


### 4 Completing the assembly

- Make any needed adjustments and then fully tighten all bolts.
- Place the seat cushion (C) on the chair.
- The chair is now ready for your enjoyment.

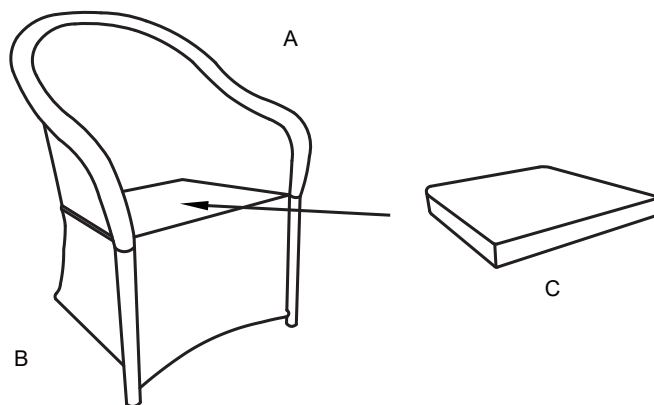

### 5 Attaching the glass top

- Place the table on a soft surface.
- Attach the glass top (E) as shown.
- Press gently over each of the suction cups to make it firmly fixed.
- The table is now ready for your enjoyment.

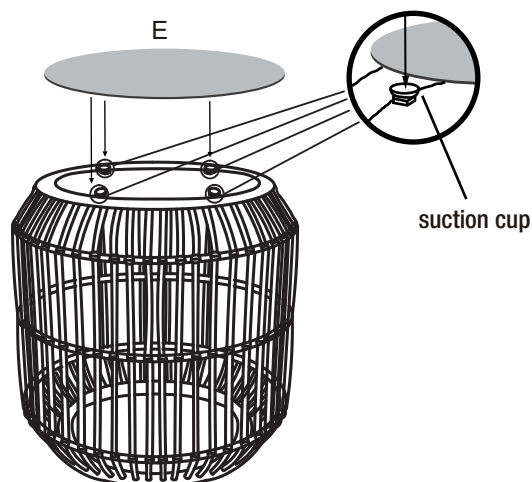



## Maintenance

---

- Wash the frame with a mild solution of soap and water, rinse with clean water, and dry thoroughly.
- Cushions may also be cleaned by hand with a mild solution of soap and water. Rinse the cushion cover thoroughly and allow to drip dry. The back cushion and pillow should be spot cleaned with a soft cloth. Do not machine wash or tumble dry, as cushions may shrink. Do not use bleach or solvents on fabrics. Never use cleaners that contain acid or abrasive materials.
- Use and operation: To improve the lifespan of this furniture, cover when not use and store in a dry place in the off season.

## Care and Cleaning

---

- Before using, wipe with a clean, dry cloth. Do not use bleach or solvents. When not in use, store furniture in a cool, dry place. If your set includes cushions or mesh fabric, they may be cleaned by hand with a mild solution of soap and water.
- Rinse cushion thoroughly and allow to drip dry. Do not machine wash or tumble dry, as cushions may shrink.
- Do not use bleach or solvents on fabrics. When cleaning the table top make sure to use a soft, clean cloth that does not bleed color as well.

# StyleWell.™

Questions, problems, missing parts?  
Before returning to the store, call StyleWell Customer Service  
8 a.m. – 7 p.m., EST, Monday-Friday, 9 a.m. – 6 p.m., EST, Saturday

**1-877-527-0313**

**HOMEDEPOT.COM**

Retain this manual for future use.