

INSTRUCTION MANUAL

SET-UP INSTRUCTIONS FOR THE 8 FT GIANT-SIZED LED GIFT BOXES




STACKED AND UNSTACKED DISPLAY OPTIONS



Before you begin

3D-GUIDED INTERACTIVE ASSEMBLY
INSTRUCTIONS CAN BE FOUND ON **BILT**[®]
DOWNLOAD THE **FREE** APP

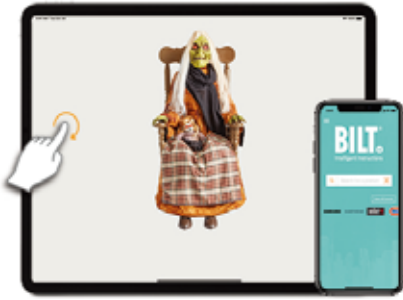

Questions, problems, missing parts? Before returning to your retailer, call our customer service department at 1-855-HDHOLIDAY (1-855-434-6543), Mon-Fri 8am-7pm and Sat from 9am-6pm EST or email at info@pan-asian.com.hk.



WARNING: This is not a toy and is for decorative purposes only. For indoor/outdoor use. This item is not intended for use by children under the age of 14. Do not place product near an open fire or heat source such as a radiator, stove, etc.



**KEEP OFF, DO NOT SIT OR CLIMB ON THE GIFT BOXES
THIS IS NOT A TOY. THIS ITEM IS FOR DECORATION ONLY.**

PREPARATION: Before beginning assembly of the product, make sure that all parts are present. Compare parts with package contents list. If any part is missing or damaged, do not attempt to assemble, install or operate the product. Contact customer service for replacement parts.

IMPORTANT: This product can be powered by a UL Listed, 4.5 V, 670mA adapter (included). The adapter should be plugged into a standard 100V-240V household power outlet.

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or experienced radio/TV technician for help.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: "(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation."

Responsible party for FCC: Pan Asian Creations Limited.
Address: 2560 King Arthur Blvd, Suite 124-26, Lewisville, TX 75056.
For FCC assistance email: info@pan-asian.com.hk

SAFETY INSTRUCTIONS:

1. All cautions in these operating instructions should be followed completely.
2. Do not use near water; such as a bathtub, laundry tub, kitchen sink, wet basement or swimming pool, etc.
3. Do not display the product near any heat source such as radiators, stoves, fireplaces, etc.
4. Display should be serviced by a qualified service person only. Do not attempt to service this unit beyond what is described in the operating instructions.
5. Take extra care when displaying any figure that may contain small parts around small children.
6. Use of this decoration should always be supervised by an adult.
7. Remove AC/DC adapter when not in use.

TO ACTIVATE:

1. Place the product on a water-resistant, level surface.
2. A UL Listed, 4.5Volt 670mA adapter is included with the product. The power adapter needs to be plugged into a standard 100V-240V household power outlet.
3. The ON/OFF switch is located on the cable. Press switch to the "ON" position to activate LED lights. Press switch into the "OFF" position and unplug the adapter when not in use.
4. Unplug the power adapter when not in use.















TROUBLESHOOTING:

Problem	Solution
The product does not work	1. Check all wire connections and make sure all parts are securely attached.
	2. Check and make sure the ON/OFF switch is in the "ON" position.
	3. Check to make sure the adapter is connected to a working power source. Make sure the adapter is plugged into a standard 100V-240V household outlet.
If you are still experiencing problems with the product, please call 1-855-HDHOLIDAY (1-855-434-6543) or email info@pan-asian.com.hk for further assistance.	



DISTRIBUTED BY:
 HOME DEPOT
 2455 PACES FERRY ROAD
 ATLANTA, GA 30339

05202021_2009015
 Printed in China

PART LIST


<p>A. Left metal connecting support for gift box 1</p>  <p style="text-align: right;">X 1</p>	<p>B. Middle metal connecting support for gift box 1</p>  <p style="text-align: right;">X 1</p>	<p>C. Right metal connection support for gift box 1</p>  <p style="text-align: right;">X 1</p>
<p>D. Base</p>  <p style="text-align: right;">X 1</p>	<p>E. Gift box 1 (with ON/OFF Switch Cable)</p>  <p style="text-align: right;">X 1</p>	<p>F. Metal connecting support for gift box 2</p>  <p style="text-align: right;">X 1</p>
<p>G. Gift box 2</p>  <p style="text-align: right;">X 1</p>	<p>H. Metal connecting support for gift box 3</p>  <p style="text-align: right;">X 1</p>	<p>I. Gift box 3</p>  <p style="text-align: right;">X 1</p>
<p>J. Free spinning washer nut (for gift box 3)</p>  <p style="text-align: right;">X 1</p>	<p>K. Gift boxes 4 (set of 2)</p>  <p style="text-align: right;">X 1</p>	<p>L. AC/DC adapter</p> 
<p>M. Cable (for unstacked display)</p>  <p style="text-align: right;">X 1</p>	<p>N. Ground Stakes</p>  <p style="text-align: right;">X 4</p>	<p style="text-align: right;">X 1</p>

ASSEMBLY:

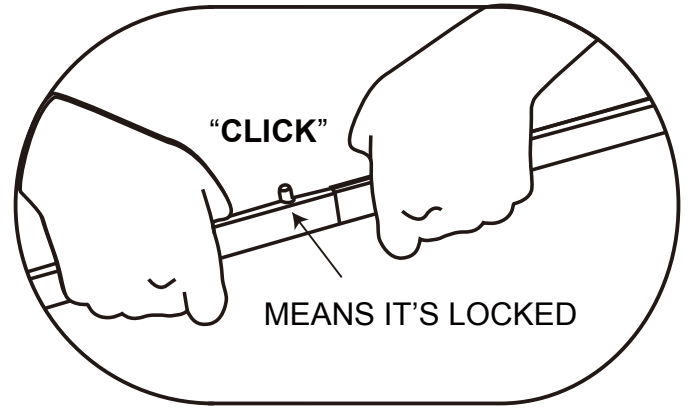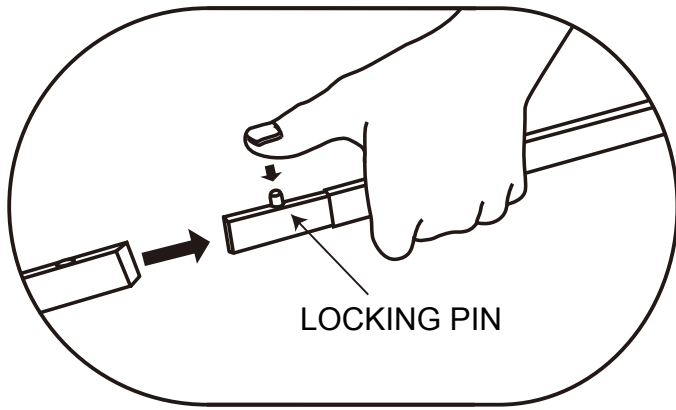




Step 1

NOTE: For outdoor yard display it is recommended that you start the assembly process by first determining the intended display location, making sure that the surface is flat and/or level for the placement of the base, and then securing the base firmly into the ground with the included ground stakes.

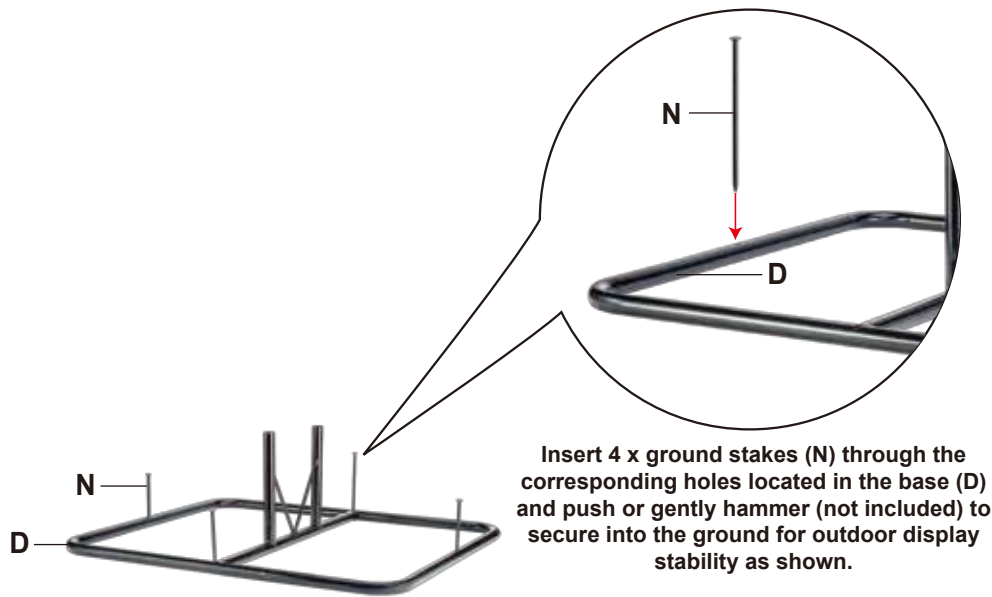


Step 3

Step 2

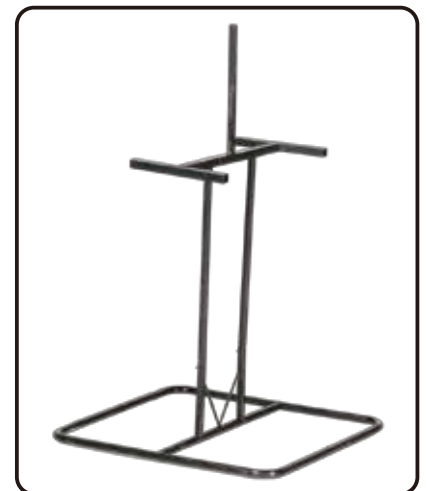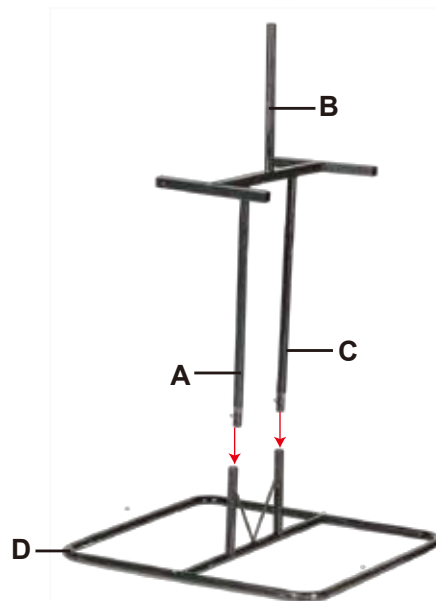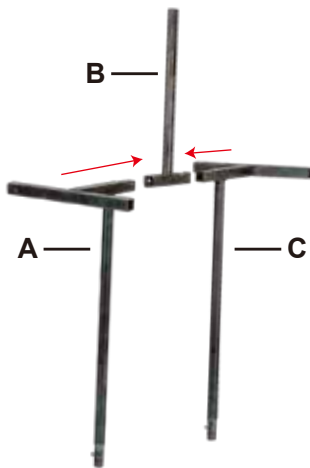


Step 4

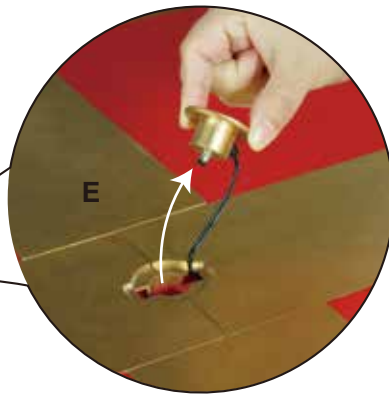


Unplug the DC jack cover


Step 5

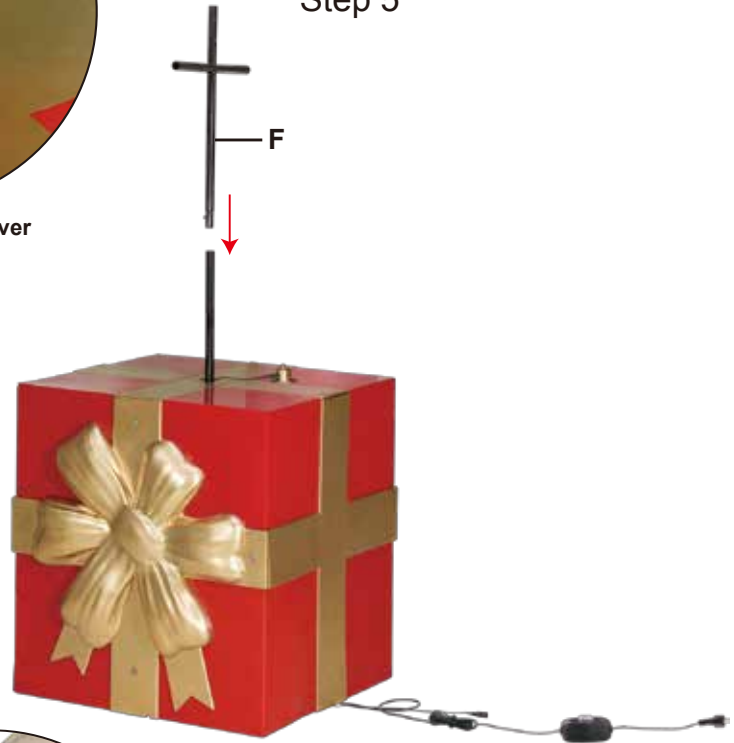

Step 6

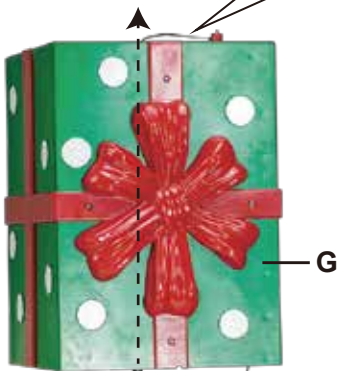

Unplug the DC jack cover

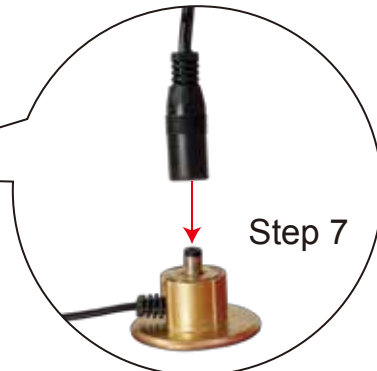

Step 7


Connect the cable from the bottom of gift box 2 (G) into the DC jack on the top of gift box 1 (E)




Step 8



Step 9

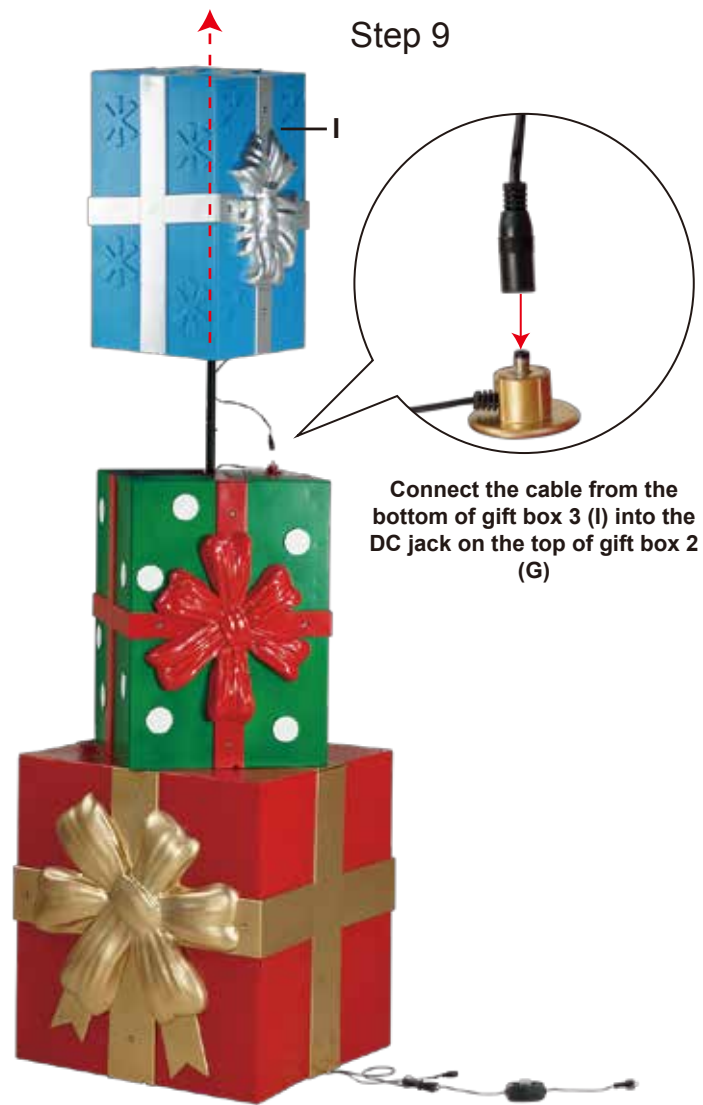


Step 10

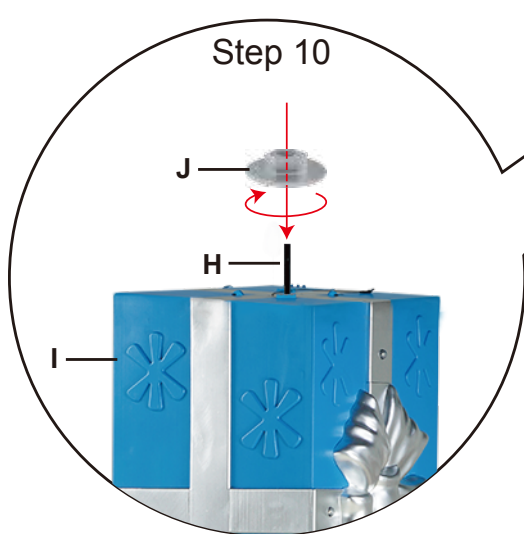

Tighten the free spinning washer nut (J) onto the top end of the metal connecting support for gift box 3 (H) to secure gift box 3 (I) into place.



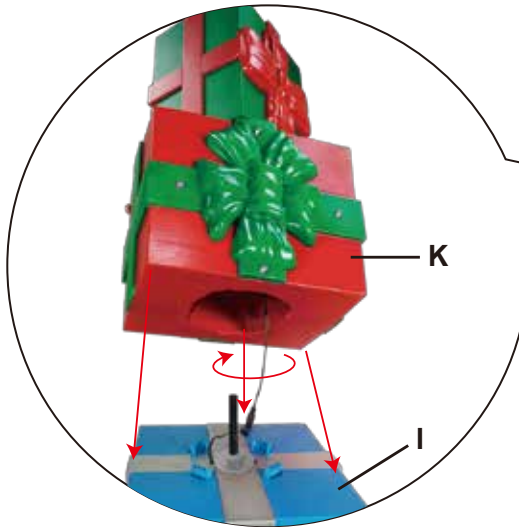

Step 12




Step 11


Connect the cable from the bottom of gift boxes 4 (K) into the DC jack on the top of gift box 3 (I)



Step 13

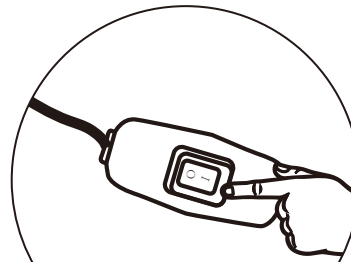




Once the power supply has been plugged in, toggle the ON/OFF switch located on the cable of gift box 1 (E) to the "ON" position to activate LED lights.

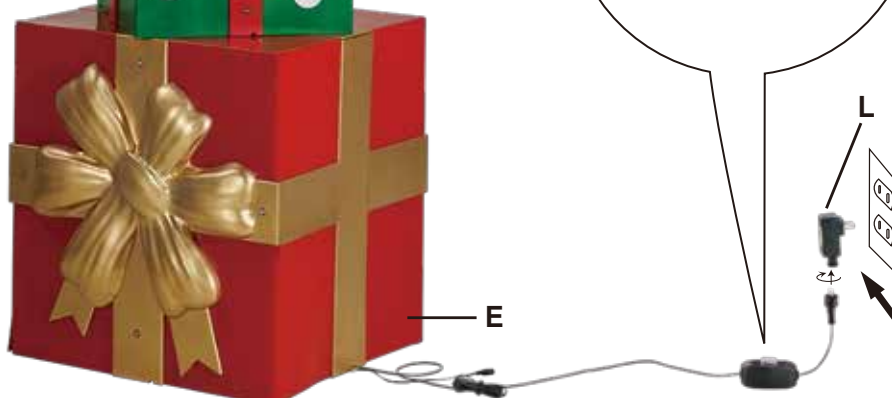

Fully Assembled Product

Connect the UL-Listed, 4.5V 670mA AC/DC Adapter (L) into the connection at the end of the ON/OFF switch cable of gift box 1 (E), and plug it into a standard 100V-240V household power outlet.

UNSTACKED DISPLAY OPTION

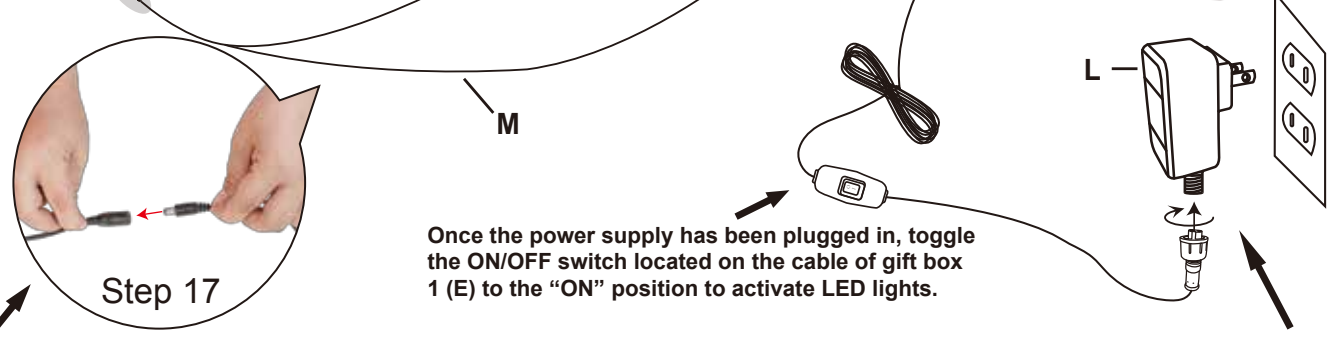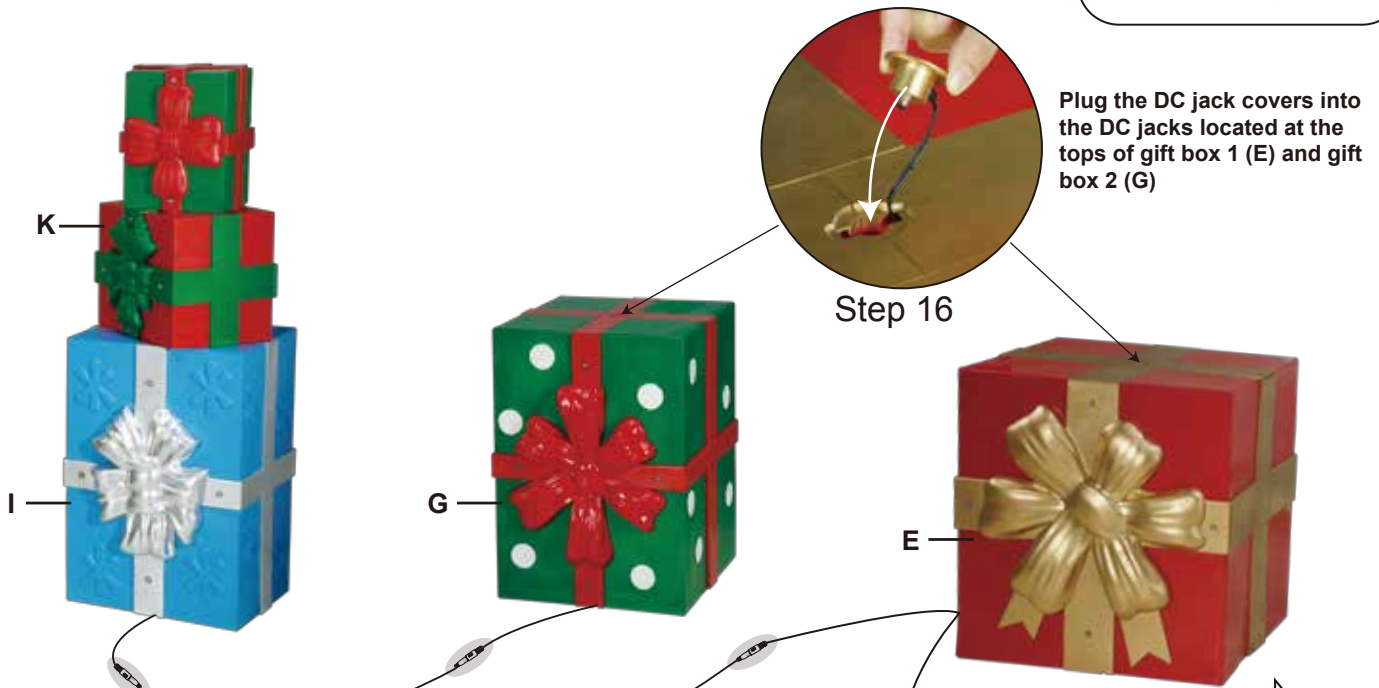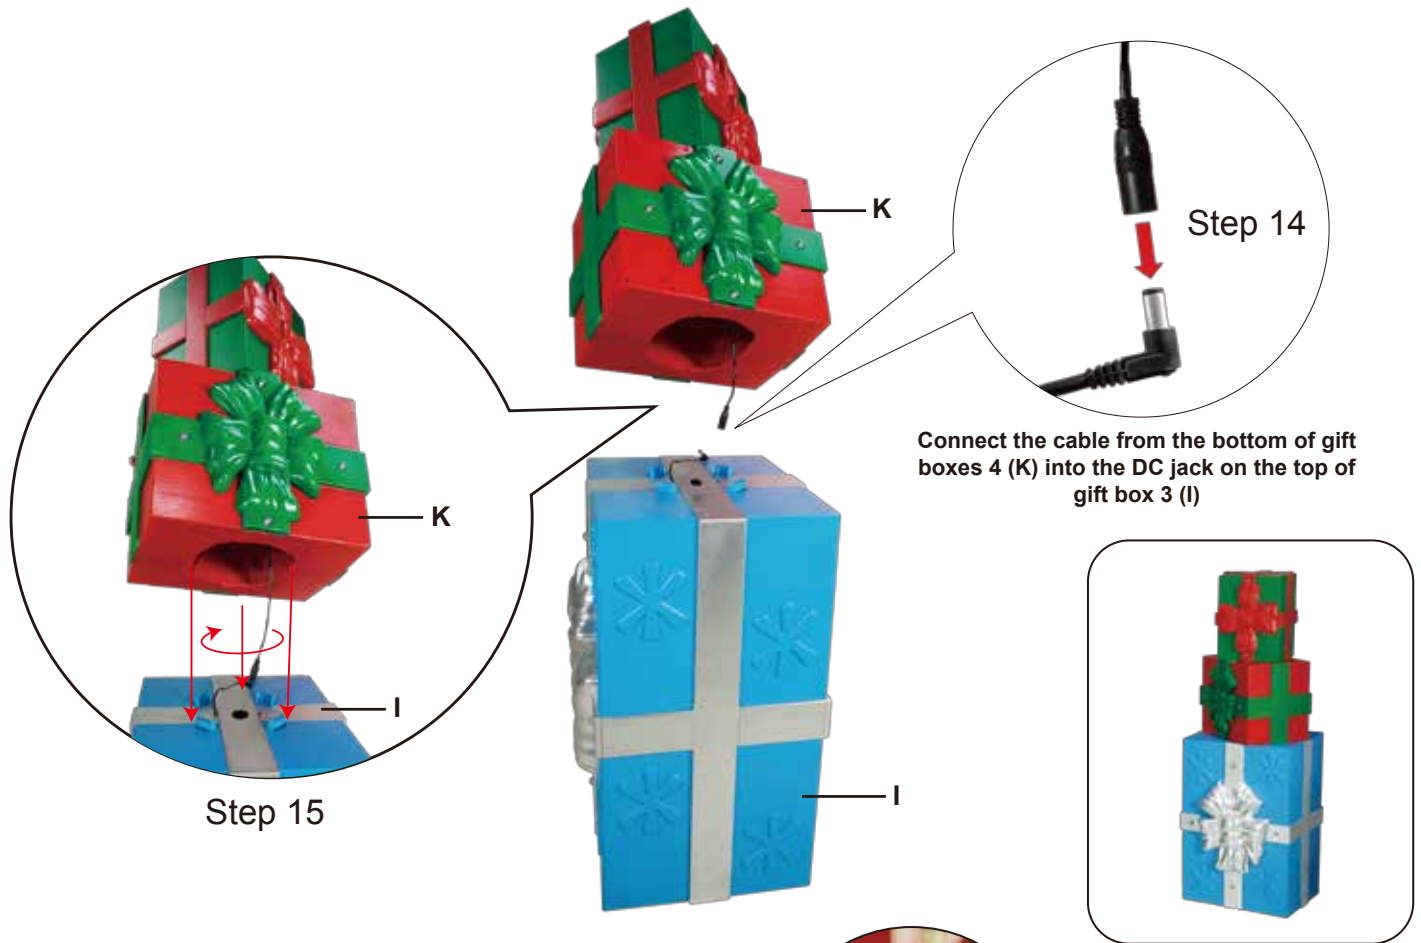

Connect the ends of cable (M) into the end of the cable of gift box 1 (E), gift box 2 (G), and gift box 3 (I)

Connect the UL-Listed, 4.5V 670mA AC/DC Adapter (L) into the connection at the end of the ON/OFF switch cable of gift box 1 (E), and plug it into a standard 100V-240V household power outlet.