

MODEL OVERVIEW

- | | | | |
|---|---|----|---|
| 1 | Water inlet with garden hose connector | 9 | Wheels |
| 2 | High pressure outlet | 10 | Trigger gun |
| 3 | ON/OFF switch | 11 | Trigger gun safety lock |
| 4 | Detergent tank (removeable) | 12 | Key to detach the high-pressure hose from the trigger gun |
| 5 | Storage for trigger gun | 13 | High pressure hose |
| 6 | Transport handle | 14 | Dirtblaster® (Rotary spray wand) |
| 7 | Accessory storage | 15 | Vario Power Spray wand |
| 8 | Power cord with Ground Fault Circuit Interrupter (GFCI) | 16 | Wash brush |

