


User Manual

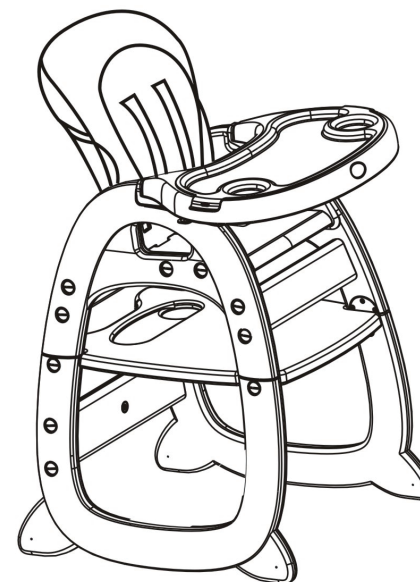

Scan ! To find more surprise!

Model Number: TH17H0216
TH17K0217
TH17L0218



Dear Customer,

Thank you for your purchase.

TOBBI is committed to providing affordable high-quality children products worldwide. Thousands of children enjoy playing TOBBI products as a happy statement.

When you receive the product, please make sure that all the parts are intact.

Then please browse the entire installation manual before assembly.

If problems occur unsatisfactorily as follows:

a.The outer box is damaged.

b.The product is damaged / bent / cracked while you open the box.

c.The parts / accessories / assembly tools are missing.

d.The product is hard to assemble.

e.The instructions are not clear and can not be referred to.

f.The product has functional problems.

g.Other aspects that you are not satisfied with.

Please do not hesitate to contact us through the email service@tobbitoys.com for help.

(Be sure to mark the SKU Number, e.g., TH17R0366, and the TRACKING Number)

Our TOBBI team with factory direct after-sales service will reply within 24 hours and will do our best to resolve the problem for you.No matter which online platform you purchase (Amazon, Walmart, Buybuybaby, eBay, or others),our services will be available at any time.

Sincerely,
TOBBI Team

**TOBBI,
for Kids and Fun!**

Warning

- 1.Do not use until your child can sit by himself.
- 2.Do not use if any spare parts are broken,attrited or missed.
- 3.Do not use until all spare parts are rightly assembled and adjusted.
- 4.It is extremely dangerous place the high chair near the fire, heating applicance,such as electric welding and gas heater. Do not do it.
- 5.Prevent serious injury or death from falls or sliding out.Always secure the child in the restraint.Never leave child unattended.


PRODUCT ASSEMBLY

➔ Remove and discharge the cover

10. Press the oval button on the middle of buckle, and open the buckle. (fig. 17)

11. Press the button on the insert buckle side, and pull the belt out (fig. 18)


12. Pull out the belt from the buttonhole, then discharge the cover. (fig. 19-22)

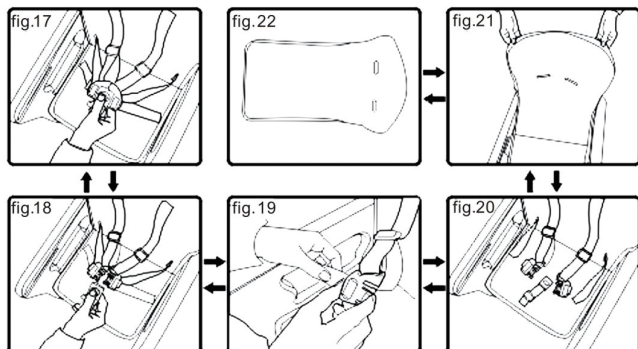

➔ Install table leg cover

13. Please make sure there are four different cover as D1, D2, D3, D4.

Install each cover into the correlative position (fig. 23)

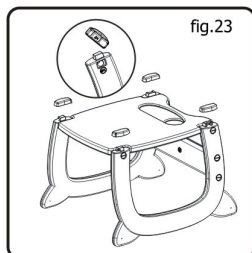


➔ Status when using as table and chair

➔ Highchair operating instructions



Fitting your child into the chair
 1. Sit your child into the chair after fixing.
 2. Fasten the buckle.
 3. Adjust the belt system to the desired length.
 4. Install the adjustable tray.

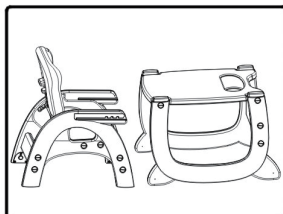

PRODUCT ASSEMBLY


➔ Instruction for Highchair

Important-Retain for future reference, read carefully

Suitable from 6 months to 6 years; less than 18kgs when the child could sit by himself.


it could be used as table after 3 years old.

➔ Major parts name:

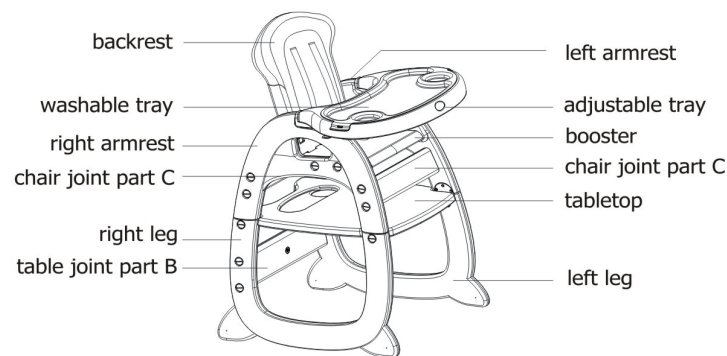


➔ Installation instruction for Highchair

Assemble the backrest and booster


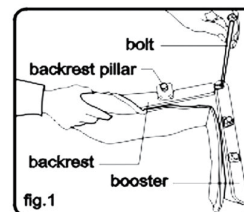


1. Button up the backrest and booster, put the bolt into the axle holes (fig. 1)


Assemble the booster & backrest and the armrest

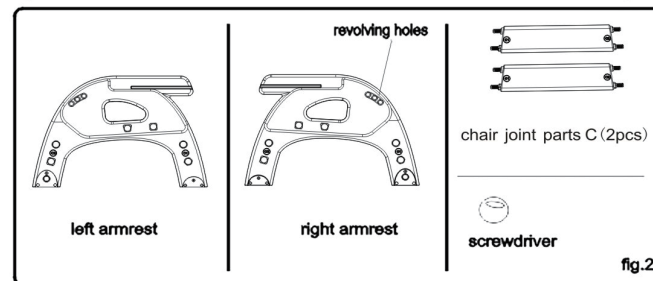



PRODUCT ASSEMBLY

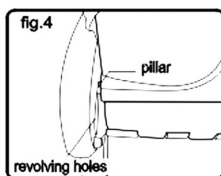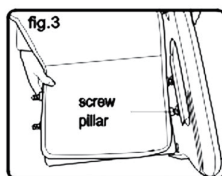

2. Put two screwed pillar on the base into the correlative hole on the left of chair armrest (fig.3)
3. Pillar on the backrest put into the correlative revolving holes (fig.4)



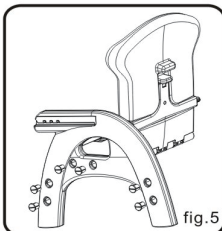


4. Using the screwdriver, insert the plastic screws into holes until locked (fig.5)

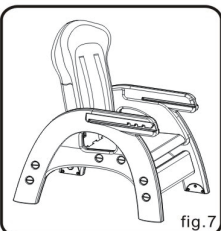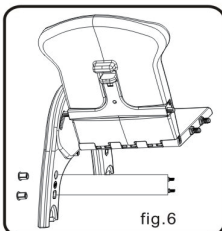

5. Insert two chair joint parts into the correlative holes. (fig.6) Then using the screw, fix up the joint parts, which the same as step 3 (fig.7)



Assemble the table

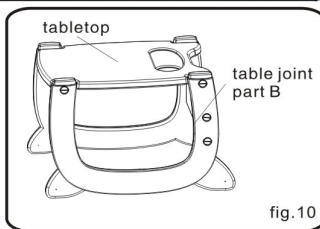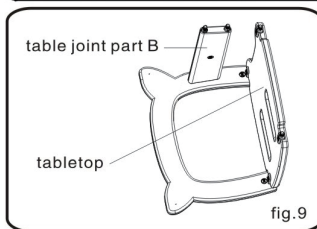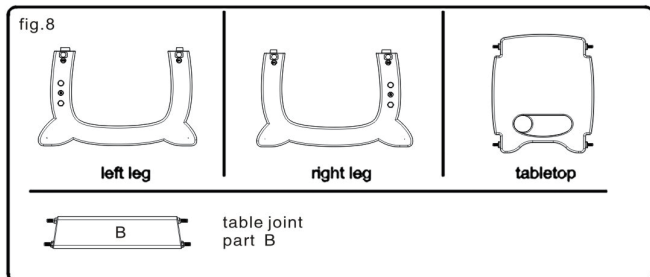

6. Insert tabletop, table joint part B into the correlative left or right holes (fig. 9&10) And tighten the screws and locked




PRODUCT ASSEMBLY

Assemble the chair and table

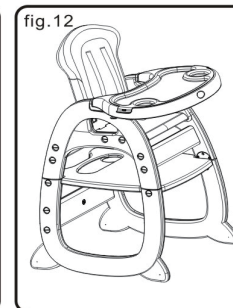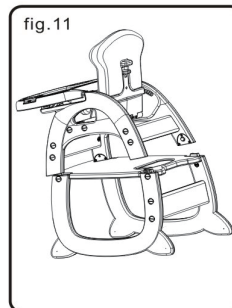


7. Assemble the front chairs match with table (fig.11) then press the button finished as (fig.12)

Install and adjust the adjustable tray

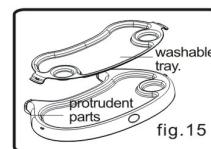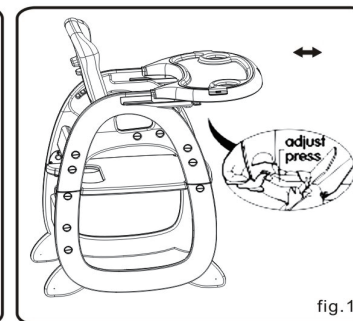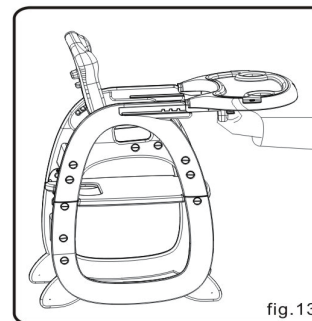

8. Inset notches on both side into the correlative place (fig.13); Press the adjustable button and meantime pull the tray out until heard the click (fig.14&15) The tray could be adjusted 3-positioned.

Adjust the backrest

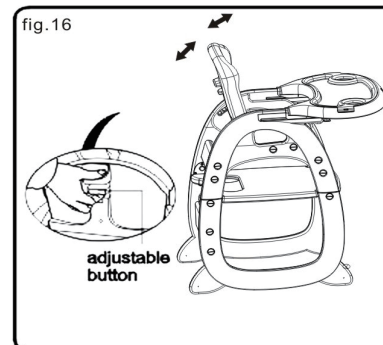

9. The backrest could be adjusted 3-positioned: Pull up the adjustable button and then to the desired position. (fig. 16)