
USE AND CARE GUIDE

ASPENWOOD ROUND CHAT TABLE

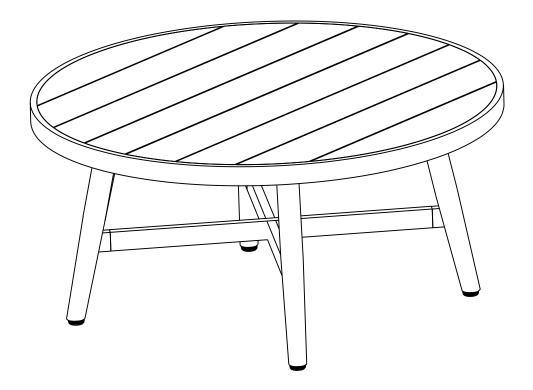

Questions, problems, missing parts? Before returning to the store, call Hampton Bay Customer Service 8 a.m. - 7 p.m., EST, Monday-Friday, 9 a.m. - 6 p.m., EST, Saturday

1-800-841-1350

HAMPTONBAY.COM

THANK YOU

Table of Contents

Table of Contents2	Hardware Included	3
Important Safety Instructions2	Package Contents	4
Warranty2	Assembly	
Pre-Assembly3	Care and Cleaning	
Planning Assembly3	Care and Oleaning	

Important Safety Instructions

SAVE THESE INSTRUCTIONS

READ ALL INSTRUCTIONS BEFORE USE

To reduce the risk of injury to persons:

- Close supervision is necessary when this furnishing is used by or near children, or disabled persons, if applicable.
- Use this furnishing only for its intended use as described in these instructions. Do not use attachments not recommended by the manufacturer.
- Some parts may contain sharp edges. Wear protective gloves.
- Please count the parts before assembly.
- Set up your furniture properly. Ensure that all parts are assembled properly and fully tightened as per instructions. When placing in the desired location, ensure that all legs are resting on the same surface. You may adjust the leg levelers as required to ensure that the item stands in a level position.

Examine occasionally to ensure that there are no loose parts. If loose parts are found, they must be re-tightened fully before additional use.



DANGER: Keep children and parts away from the assembly area.



WARNING: To avoid destroying the finish, please handle the surface by using a soft cloth instead of your bare hands. Due to the nature of iron, surface oxidation (rusting) will occur if these protective coatings are scratched. We recommend immediate touch-up with rust inhibiting paint (not included).



CAUTION: Do NOT over tighten any of the bolts or nuts.

Warranty

3 YEAR WARRANTY

WHAT IS COVERED

This limited warranty is extended to the original purchaser and applies to defects in materials and workmanship of your item provided the item is maintained with care and used only for personal, residential purposes. The item is warranted to be free from defects in material or workmanship for a period of 3 years.

WHAT IS NOT COVERED

We do not reimburse for transportation or delivery costs, or compensate the individual or any outside party for assembling or disassembling the product.

Contact the Customer Service Team at 1-800-841-1350 or visit www. Hamptonbay.com.

Production Number: 2023200013


Pre-Assembly

PLANNING ASSEMBLY

Before beginning assembly of this product, make sure all parts are present. Compare parts with the Hardware Included and Package Contents lists. If any part is missing or damaged, do not attempt to assemble the product. Contact customer service for replacement parts.

IMPORTANT

This assembly requires one to two person. Approximate assembly time: 15~20 minutes.

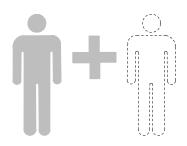

HARDWARE INCLUDED






Part	Part Number	Description	Quantity
H1	H100010023	Bolt M6*15 with Washer	24+2
HW	H090030002	Wrench M6	1

3

Pre-Assembly (continued)

PACKAGE CONTENTS

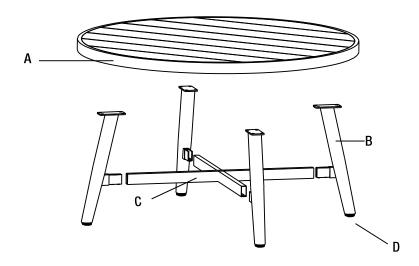


Part	Part Number	Description	Quantity
Α	P00210054501	Table Top	1
В	P00540068101	Leg	4
С	P00050185001	Connector	1
D	P005300029	Foot Pad (Pre-assembled on B)	4

Assembly


Connecting the connector and legs

□ Connect the connector (C) and the legs (B) using 8 bolts (H1). Use the wrench (HW) to loose tighten the bolts.

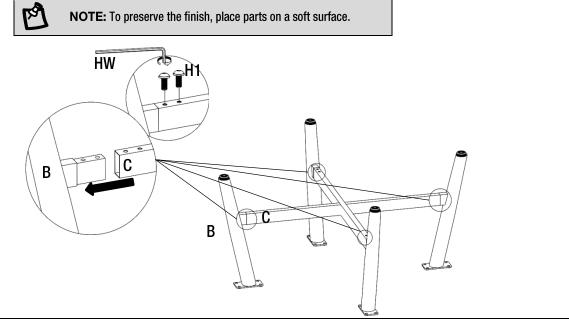

2 Attaching the table top

□ Attach the assembled legs (B) to the table top (A) using 16 bolts (H1). Use the wrench (HW) to fully tighten all the bolts.

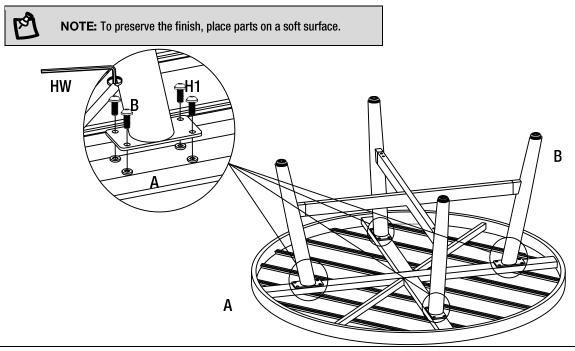

5

Care and Cleaning

	Before using, clean the table completely with a soft dry towel.
	Do not use harsh abrasives or cleaners.
П	When not in use, store in a cool, dry area.

Questions, problems, missing parts? Before returning to the store, call Hampton Bay Customer Service 8 a.m. - 7 p.m., EST, Monday-Friday, 9 a.m. - 6 p.m., EST, Saturday

1-800-841-1350

HAMPTONBAY.COM


Retain this manual for future use.

For certification use only

Factory Model# A209026800

USE AND CARE GUIDE

ASPENWOOD LOUNGE CHAIR

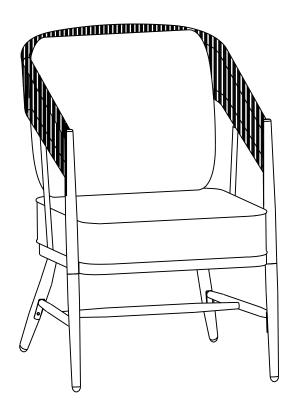

Questions, problems, missing parts? Before returning to the store, call Hampton Bay Customer Service 8 a.m. - 7 p.m., EST, Monday-Friday, 9 a.m. - 6 p.m., EST, Saturday

1-800-841-1350

HAMPTONBAY.COM

THANK YOU

Table of Contents

Table of Contents	2	Hardware
Important Safety Instructions	2	Package (
Warranty	2	Assembly.
Pre-Assembly	3	Care and C
Planning Assembly		Cale and C

Hardware Included	3
Package Contents	4
Assembly	5
Care and Cleaning	6

Important Safety Instructions

SAVE THESE INSTRUCTIONS

READ ALL INSTRUCTIONS BEFORE USE

To reduce the risk of injury to persons:

- 1. Close supervision is necessary when this furnishing is used by or near children, or disabled persons, if applicable.
- Use this furnishing only for its intended use as described in these instructions. Do not use attachments not recommended by the manufacturer.
- Some parts may contain sharp edges. Wear protective gloves.
- 4. Please count the parts before assembly.
- 5. Set up your furniture properly. Ensure that all parts are assembled properly and fully tightened as per instructions. When placing in the desired location, ensure that all legs are resting on the same surface. You may adjust the leg levelers as required to ensure that the item stands in a level position.

 Examine occasionally to ensure that there are no loose parts.
If loose parts are found, they must be re-tightened fully before additional use.



DANGER: Keep children and parts away from the assembly area.



WARNING: To avoid destroying the finish, please handle the surface by using a soft cloth instead of your bare hands. Due to the nature of iron, surface oxidation (rusting) will occur if these protective coatings are scratched. We recommend immediate touch-up with rust inhibiting paint (not included).



CAUTION: Do NOT over tighten any of the bolts or nuts.

Warranty

3 YEAR WARRANTY

WHAT IS COVERED

This limited warranty is extended to the original purchaser and applies to defects in materials and workmanship of your item provided the item is maintained with care and used only for personal, residential purposes. The item is warranted to be free from defects in material or workmanship for a period of 3 years.

WHAT IS NOT COVERED

We do not reimburse for transportation or delivery costs, or compensate the individual or any outside party for assembling or disassembling the product.

Contact the Customer Service Team at 1-800-841-1350 or visit www. Hamptonbay.com.

Production Number: 2023200013


Pre-Assembly

PLANNING ASSEMBLY

Before beginning assembly of this product, make sure all parts are present. Compare parts with the Hardware Included and Package Contents lists. If any part is missing or damaged, do not attempt to assemble the product. Contact customer service for replacement parts.


IMPORTANT

This assembly requires one to two person. Approximate assembly time: 0.5 hour.

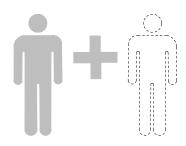

HARDWARE INCLUDED



 


Part	Part Number	Description	Quantity
H1	H100010023	Bolt M6*15 with Washer	14+1
HW	H090030002	Wrench M6	1

3

Pre-Assembly (continued)


PACKAGE CONTENTS

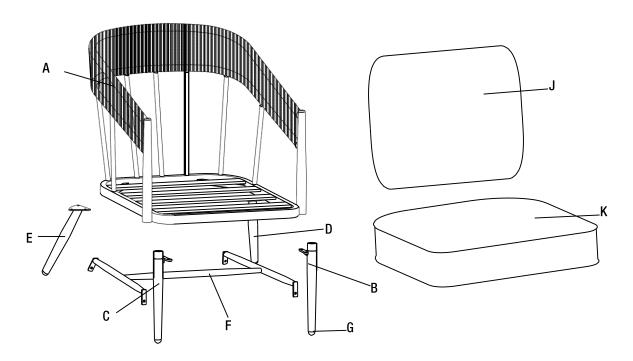

Part	Part Number	Description	Quantity
Α	P00770004701	Seat	1
В	P00540068201	Front Left Leg	1
С	P00540069201	Front Right Leg	1
D	P00540068301	Left Back Leg	1
E	P00540068401	Right Back Leg	1
F	P00050185101	Connector	1
G	P005300001	Foot Pad (Pre-assembled on B, C, D, E)	4
J	P00170014201	Back Cushion	1
K	P00180021701	Seat Cushion	1

1 Attaching the legs

Attach the front legs (B, C) to the seat (A) using 4 bolts (H1). Attach the back legs (D, E) to the seat (A) using 6 bolts (H1). Use the wrench (HW) to loosely tighten the bolts.

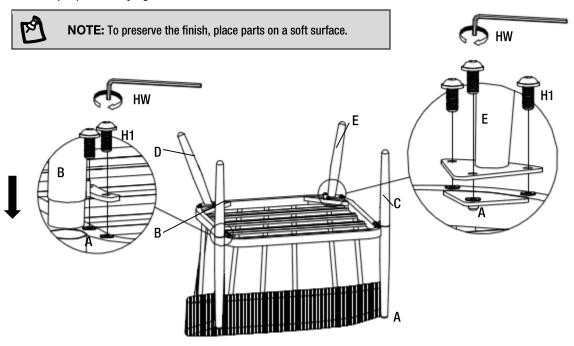


2 Attaching the connector

□ Attach the connector (F) to the assembled legs (B, C, D, E) using 4 bolts (H1). Use the wrench (HW) to fully tighten the bolts.




NOTE: To preserve the finish, place parts on a soft surface.

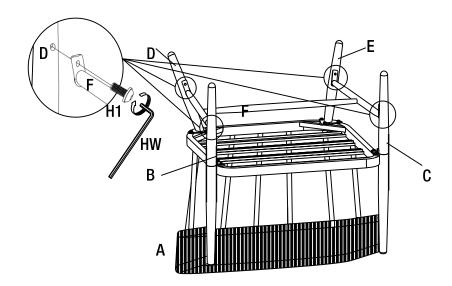

Assembly (continued)

3 Completing the assembly

 \Box Place the back cushion (J) and seat cushion (K) on the chair, hook and loop.

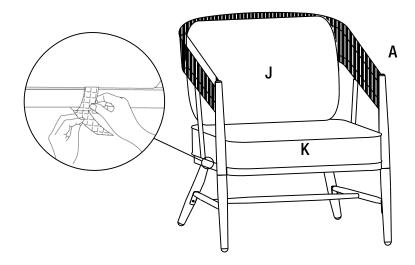

Care and Cleaning

- \square Before using, clean the Chair completely with a soft dry towel.
- Do not use harsh abrasives or cleaners.
- ☐ When not in use, store in a cool, dry area.

Questions, problems, missing parts? Before returning to the store, call Hampton Bay Customer Service 8 a.m. - 7 p.m., EST, Monday-Friday, 9 a.m. - 6 p.m., EST, Saturday

1-800-841-1350

HAMPTONBAY.COM

Retain this manual for future use.

For certification use only

Factory Model# A211122900