


# USE AND CARE GUIDE

---

## LED UTILITY LIGHT

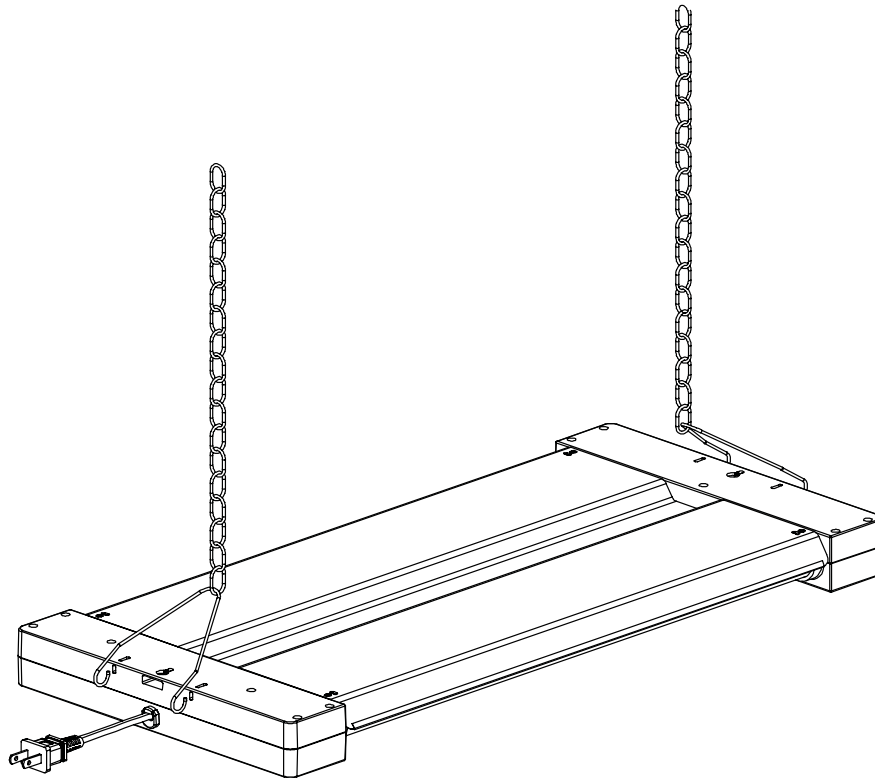

Questions, problems, missing parts? Before returning to the store,  
call Commercial Electric Customer Service  
8 a.m. - 7 p.m., EST, Monday - Friday, 9 a.m. - 6 p.m., EST, Saturday

**1-877-527-0313**

**HOMEDEPOT.COM**

---

***THANK YOU***

We appreciate the trust and confidence you have placed in Commercial Electric through the purchase of this LED Utility Light. We strive to continually create quality products designed to enhance your home. Visit us online to see our full line of products available for your home improvement needs. Thank you for choosing Commercial Electric!

# Table of Contents

Table of Contents .....	2
Safety Information .....	2
Warranty .....	2
Pre-Installation .....	3
Tools Required .....	3
Hardware Included .....	3
Installation Options .....	4-6

# Safety Information

## For your safety, always remember to:

- Turn off the power supply at the fuse or circuit breaker box before you install the fixture.
- Ground the fixture to avoid potential electric shocks and to ensure reliable starting.
- Double-check all connections to be sure they are tight and correct.
- Wear rubber soled shoes and work on a sturdy wooden ladder.
- Account for small parts and destroy packing material, as these may be hazardous to children.

This fixture is designed for use in a circuit protected by a fuse or circuit breaker. It is also designed to be installed in accordance with local electrical codes. If you are unsure about your wiring, consult a qualified electrician or local electrical inspector, and check your local electrical code.



**WARNING:** RISK OF SHOCK. House electric current can cause painful shock or serious injury unless handled properly.



**CAUTION:** Turn off the main power at the circuit breaker before installing the fixture, in order to prevent possible shock.

**NOTICE:** All electrical connections must be in accordance with local and National Electrical Code (N.E.C.) standards. If you are unfamiliar with proper electrical wiring connections obtain the services of a qualified electrician.

Remove the fixture and the mounting package from the box and make sure that no parts are missing by referencing the illustrations on the installation instructions.

**THIS FIXTURE IS INTENDED TO BE ONLY INSTALLED DIRECTLY BENEATH A CEILING-MOUNTED RECEPTACLE.**

**CAUTION, IMPORTANT SAFETY INSTRUCTIONS** - This portable light-emitting-diode (LED) luminaire has a polarized plug (One blade is wider than the other) as a feature to reduce risk of electric shock. This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Never use with an extension cord unless the plug can be fully inserted. Do not alter the plug.

## FCC STATEMENT:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna. Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or an experienced radio/TV technician for help.

# Warranty

## LIMITED WARRANTY

This product is warranted to be free from defects in workmanship and materials for up to 5 years from date of purchase. If it fails to do so, please contact the Customer Service Team at 1-877-527-0313 or visit [www.HomeDepot.com](http://www.HomeDepot.com).

# Pre-Installation



**NOTE:** Hardware not shown to actual size.

## TOOLS REQUIRED



Phillips  
screwdriver

 
## PACKAGE CONTENTS



AA




BB




CC



 DD




EE

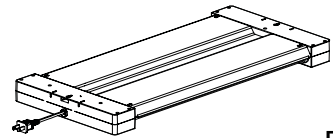


FF

Part	Description	Quantity
AA	12" Hanging Chain	2
BB	V-Hook	2
CC	Zip tie	1
DD	Mounting Screw	2
EE	Wall Anchor	2
FF	2 X 4 LED SHOPLIGHT FIXTURE	1

## PRODUCT DIMENSIONS

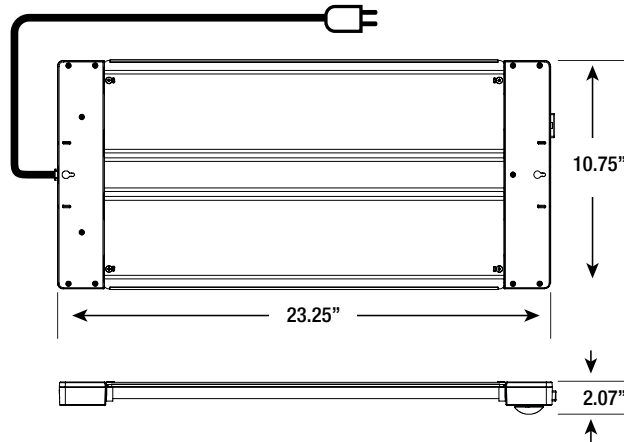

## LINK UP TO 5 SHOPLIGHTS

 

Connect to power outlet

Connect to additional shoplight

Maximum distance between interconnected units: XX in. (XX m.)


# Chain and V-Hook Installation

## 1 Turning off the power

- Turn the power OFF at the switch and fusebox or the circuit breaker.


## 2 Attaching hanging hooks (Hanging hooks not provided)

- Attach two hanging hooks to the ceiling. The spacing between the hanging hooks should be 23.5 in.

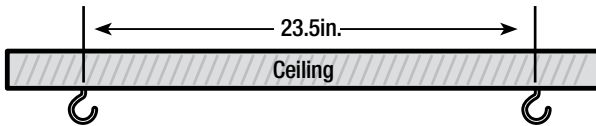


## 3 Installing the chain to V-hooks

- Attach the hanging chain (AA) to the V-hooks (BB) then insert the V-hooks (BB) into the mounting holes located on top of the fixture (FF). Do this for both ends of the fixture.

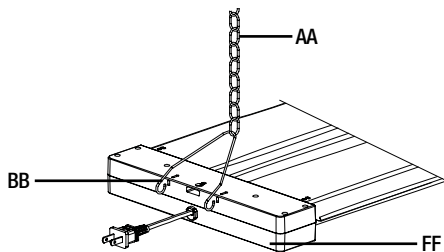


## 4 Attaching the hanging chain

- Hang the hanging chain (AA) onto the hanging hooks and plug in the power cord to the outlet.

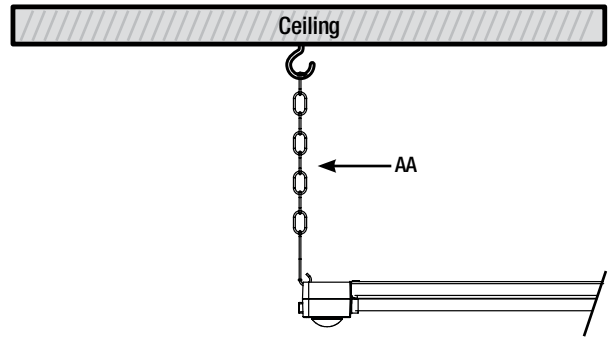

## 5 Attaching the zip tie

- Use the zip tie (CC) to attach the cord to the hanging chain (AA).

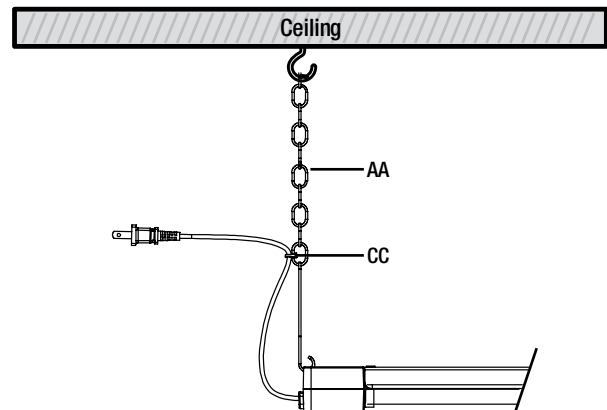


# Fixture Flushmount Screw Installation

## 1 Turning off the power

- Turn the power OFF at the switch and fusebox or the circuit breaker.


## 2 Attaching the anchors and screws

- Install two wall anchors (EE) and mounting screws (DD) on the mounting surface. The spacing between the mounting screws (DD) should be 22.2 in. The spacing between the screw head and the mounting surface should be  $D=0.079 - 0.099$  in.

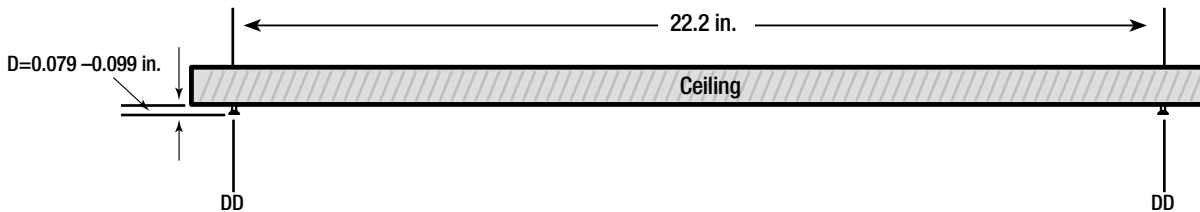

## 3 Securing the fixture


- Lift the fixture (FF) up to the mounting screws (DD) and slide to one side to secure the fixture (FF) into place. The fixture (FF) should be firmly fixed against the mounting screws (DD). Plug in the power cord to the outlet.

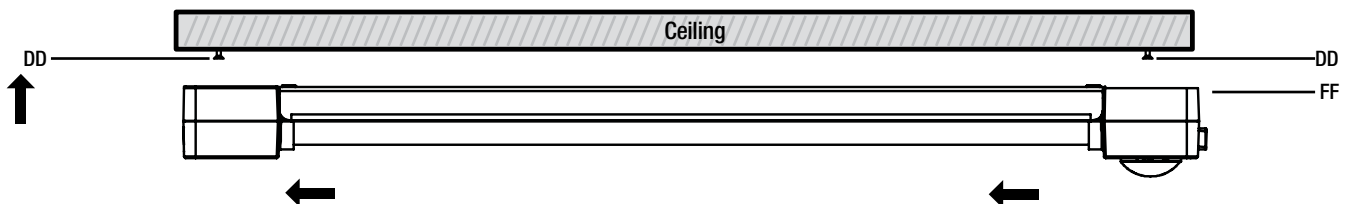

# Motion Sensor



## USE AS UTILITY LIGHT - USE WITH WALL SWITCH

IDEAL FOR GENERAL LIGHTING, GARAGES, BASEMENTS & WORK SHOPS

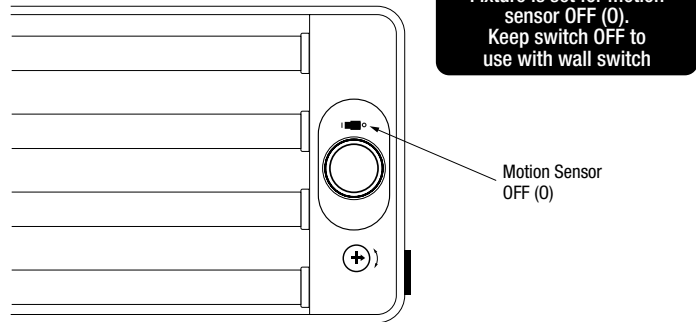


## Use with standard wall switch only

 Simply plug in the fixture (FF) to a switch controlled outlet. Make sure motion sensor is OFF.

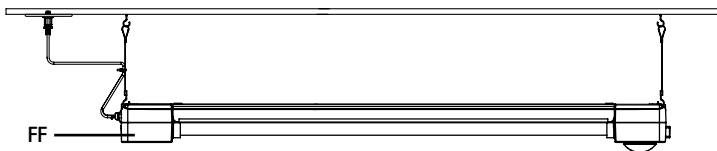

## OPTIONAL USE - USE WITH MOTION SENSOR

IDEAL FOR USE IN PLACES WHERE YOU DON'T WANT TO LOOK FOR THE LIGHT SWITCH: LAUNDRY ROOMS & CLOSETS.

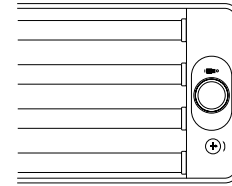

**TO TURN LIGHT ON WHEN ENTERING A ROOM**  
Mount unit as close to entrance as possible. For best results mount where sensor is within 6 feet from the entrance.

When using motion sensor temporarily hang the unit near the entrance to make sure motion sensor is working properly from that location. If not, adjust the fixture position.


The delay time for the PIR has a range from 1 to 10 minutes. Turning the adjustment screw towards "-" will decrease the time setting down to 1 minute. Turning the adjustment screw towards "+" will increase the time setting up to 10 minutes.

### NOTE: MOTION DETECTION WORKS BEST WHEN WALKING ACROSS SENSOR AT AN ANGLE

ALL DISTANCES ARE MEASURED FROM MOTION SENSOR NOT FROM FIXTURE.

#### WALKING STRAIGHT

Walking straight towards sensor approximately 3 ft detection from sensor

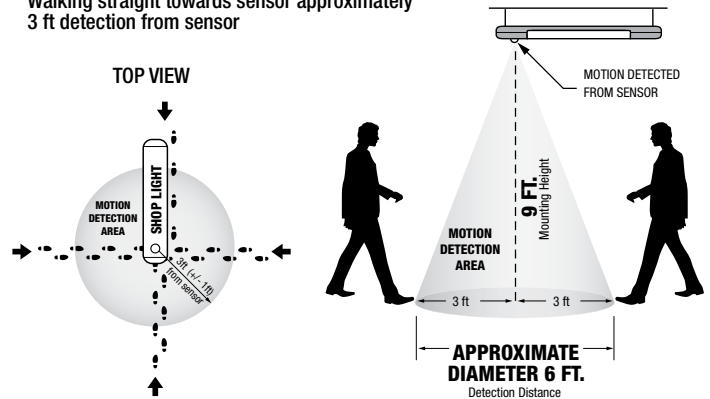

#### WALKING ACROSS

Walking across sensor at an angle approximately 8 ft detection from sensor

