
Assembly Instructions

Caution: You must read this before you proceed.

Dining Chair

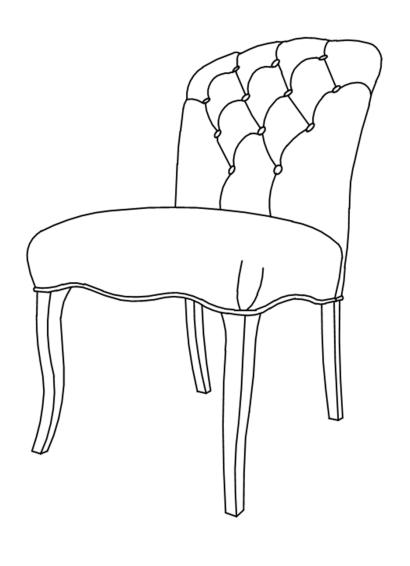


Parts List				
Label	Picture	Description	QTY	
А		Chair Back	1PC	
В		Chair Seat	1PC	
С		Front Legs	2PCS	


<u>Hardware</u>				
Label	Picture	Description	QTY	
а		Dia. M8 Bolt: 60 mm(L)	9	
b	0	Flat Washer	9	
С		Spring Washer	9	
d		Allen Key	1	

Assembly Preparation

  Before Beginning Assembly: Unpack all the parts for a clear overview.







Pack A for locking the back panel of the seat to the horizontal panel of the backrest:

Five Dia.M8 Bolts:60mm(a)+five Flat Washers(b)+ five Spring Washers(c)







Pack B for Locking the Front Legs to the front corner blocks of the seat:Four Dia.M8 Bolts:60 mm(a)+four Flat Washers(b) +four Spring Washers(c)





Allen Key





Read instructions, cover to cover-



Have 2 adults on hand for assembly-



Do not assemble on flooring or carpet-



Assemble on a clean non-marring surface (packing foam)-



Save all packaging until finished-


Assembly Steps Step 1

Place the Chair Back(A) on a clean, non-marring surface.

Chair Back

Take out the two Wooden Legs and the package of Hardware accessories.

Chair Seat

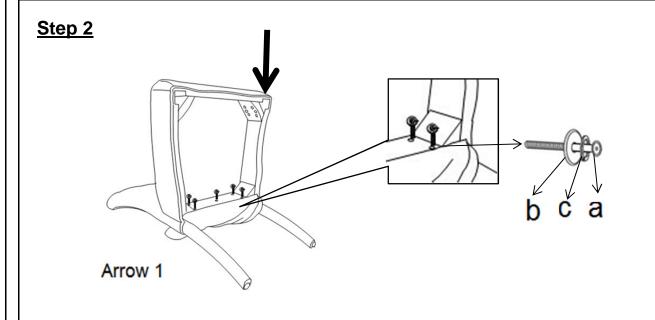


Put the Chair Back(A) onto a clean and flat table or surface.

Align the positioning dowels on the Chair Seat(B) with the mounting position located on the Chair Back(A).

Use your left hand to push the seat frame floorwards, depicted by Arrow 1. This action helps to ensure the Chair Seat(B) is pressed towards to the Chair Back(A) with no gap between these.

Then, lock the middle mounting position first and then the corner mounting positions using Bolts(a), Spring Washers(c) and Flat Washers(b) with Allen Key(d).

At this point of assembly, DO NOT overfasten the connections.

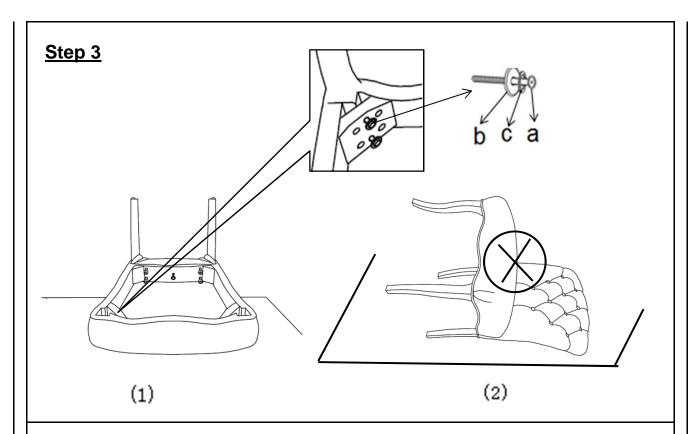


Next, place the chair onto the side of a table with the legs facing skywards. Insert each front leg completely vertically into each seat frame corner. PRESS FIRMLY DOWN with your hand until there is no gap.

Caution: Do not position the chair as shown in Picture 2, as it may cause gaps.

Attach Front Legs using Bolt(a), Spring Washer(c) and Flat Washers(b) with Allen Key(d).

Tighten the bottom Bolt first, then the top Bolt.

Caution: Tighten until secure and stable only, over tightening can cause damage to the product.

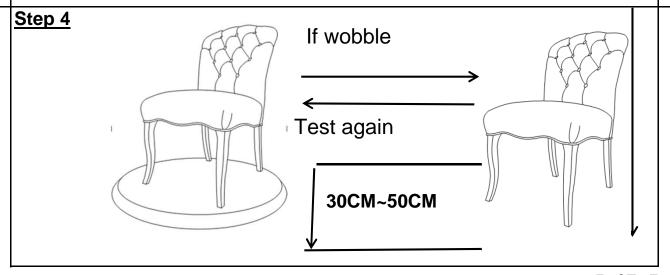

Place the chair on a LEVEL SURFACE to see if it wobbles.

If it wobbles, lift the chair 30cm to 50cm from the ground.

Keep your feet and toes well away from the drop zone.

Drop the chair freely and vertically with the four legs hitting the ground at the same time.

This Drop Test will help to ensure that all the bolts and gaps reach full alignment status.

Test again for evenness on a LEVEL SURFACE.


If no wobble is found, proceed to tighten all the bolts.

CAUTION: When tightening these bolts, tighten sequentially.

DO NOT tighten any bolt fully and then move to the next one, this could cause the frame to warp.

If there is still wobbles, loosen the bolts and execute this same drop test.

Caution: Sitting on a wobbly chair can cause damage to the product.

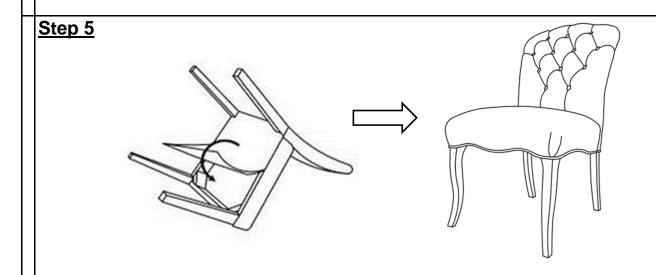

Finally, seal the Seat Base Cover back on to the underside of the chair seat. Turn it the right side up.

Your Chair is ready for use.

Care & Maintenance



• Do not put hot items directly on furniture surface.



Do not clean furniture with harsh cleansers or polish.



Do not place furniture under direct sunlight.



• Do not place furniture near heating or cooling vents.



Do not write on furniture without a padded barrier to protect the surface.



Do not place furniture outside. For indoor use only.



Not for commercial use. For residential use only.



Stains may be removed with mild soap solution and damp cloth.



Dust and pick-up spills using a clean, non-colored, lint-free cloth.