

5.5 FT GRAVE & BONES
LED SKELETON PONY


Pre-Installation / Pre-Operation / Pre-Assembly

PLANNING INSTALLATION

Estimated installation time: 20 minutes
Number of people recommended: One

PREPARATION: Before beginning assembly the product, make sure that all parts are present. Compare parts with package contents list and diagram below. If any part is missing or damaged, do not attempt to assemble, install or operate the product. Contact customer service for replacement parts.

PACKAGE CONTENTS:

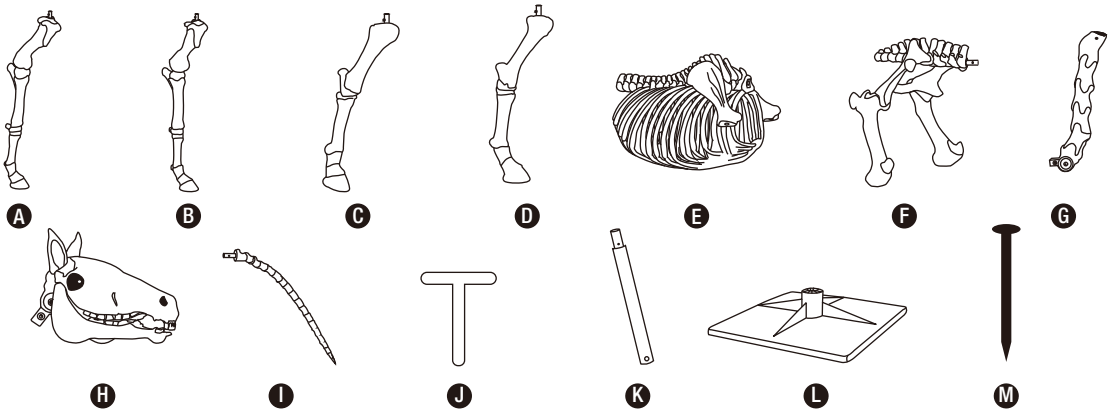

Part	Description	Quantity
A	Right Front Leg	1
B	Left Front Leg	1
C	Right Back Leg	1
D	Left Back Leg	1

Part	Description	Quantity
E	Rib Cage	1
F	Hip	1
G	Neck	1
H	Skull	1


Part	Description	Quantity
I	Tail	1
J	Locking Pin Tool (For Disassembly)	1
K	Base Stand Supports	2
L	Base Stand	1
M	Ground Stakes	4

INSTALLATION

1 Assemble the Skeleton Pony


NOTE: All Parts of the Skeleton Pony are joined together with Locking Pins that “Click” to lock and secure in place, as demonstrated in Fig 2-A and Fig 2-B below. When disassembling the Skeleton Pony, use the “Locking Pin Tool” (J) to depress each of the locking pins to help remove each part. The location for each of the locking pins can be identified by the letter “T” located next to each of the access holes on the Skeleton Pony.

- Step 1: Attach the Left & Right Front Legs (A & B) to the Rib Cage (E).
- Step 2: Attach the Left & Right Back Legs (C & D) to the Hip (F).
- Step 3: Attach the Hip (F) to the Rib Cage (E).
- Step 4: Attach the Tail (I) to the Hip (F).
- Step 5: Attach the Neck (G) to the Rib Cage (E).
- Step 6: Attach the Skull (H) to the Neck (G).

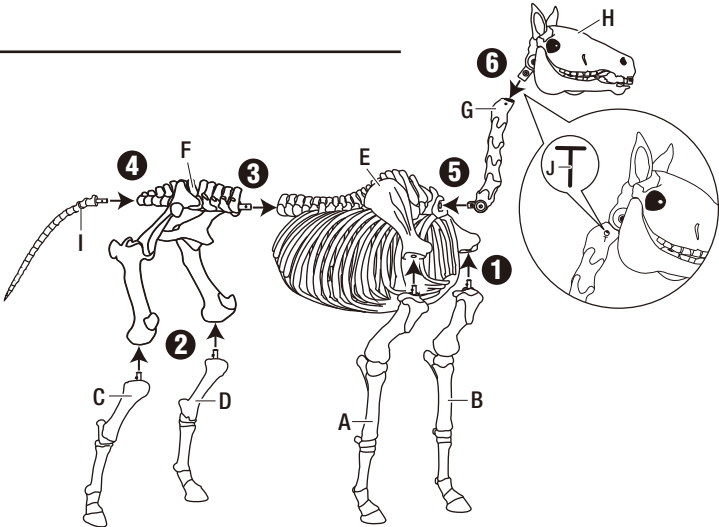


2 Assemble the Base Stand

- Attach the 2X Base Stand Supports (K) into the Base Stand (L), see diagram below.

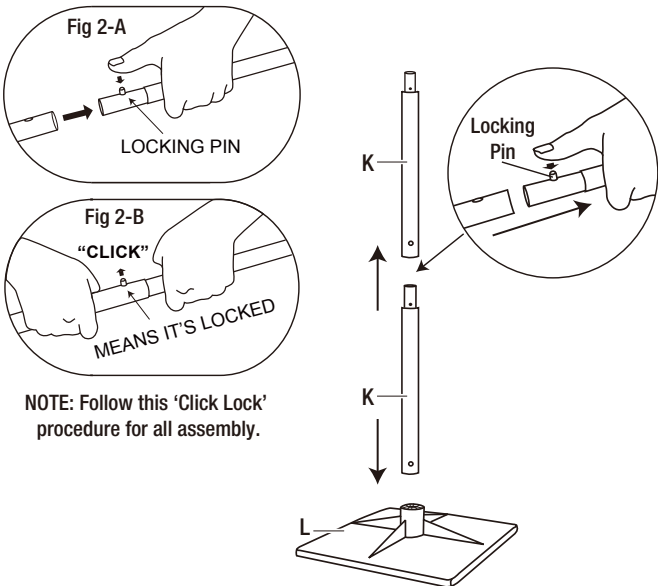


3 Attach Base Stand to Assembled Skeleton Pony

- Ensure the Skeleton Pony Base Stand is on a flat, stable surface prior to attaching it to the assembled Skeleton Pony.
- Attach the top of the assembled base stand into the slot located under the Skeleton Pony's spine, see diagram below.
- Insert the 4X Ground Stakes (M) through the ground stake holes and into the ground for outdoor stability. see diagram below.
- The neck and skull of the Skeleton Pony is poseable.

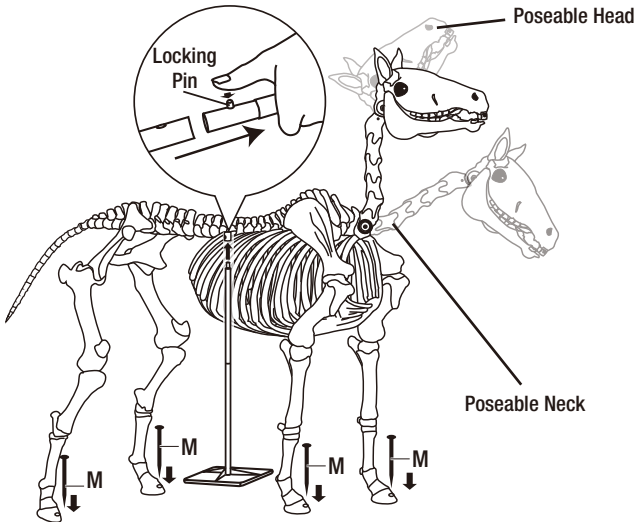

Operation Instructions

FUNCTION CONTROLS:
NOTE: THE CONTROL BOX IS LOCATED INSIDE THE PONY’S MOUTH

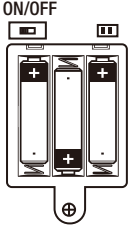	ON Move the switch to “ON” position for Sound Activation mode. Clap your hands or make a loud noise to activate LED lights and full version of sounds.
	OFF Switch to the “OFF” position to activate the TRY-ME feature. Press the TRY-ME button for a short demonstration version .

BATTERY REPLACEMENT & ITEM FUNCTION:
Requires 3 “AA” batteries (batteries are included).
1. Remove the battery compartment cover, which is located inside Pony’s mouth. Using a small screwdriver, remove the safety screw and then remove the battery compartment cover.
2. Clean the battery contacts and also those of the device prior to battery installation.
3. Insert 3 new “AA” batteries with correct polarity and replace cover and safety screw.
4. Replace batteries if the lights dim or the sound becomes distorted or faint.

Troubleshooting

Problem	Solution
The Skeleton Pony does not work	□ Check if the positive and negative terminals of the battery are installed correctly. □ Check whether the battery is drained. Replace the new batteries and try again.
The Sound Sensor does not work	□ Check the ON/OFF switch is located in the "ON" position. □ Check if the triggered sound is too far from the Pony, please keep the distance between the sound and the horse at 39.5 in (100cm). □ Check if the triggered sound is too small, please activate the product with a trigger sound of more than 90 decibel.

Safety Information

 **WARNING:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user’s authority to operate the equipment.
NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
• Reorient or relocate the receiving antenna
• Increase the separation between the equipment and receiver
• Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
• Consult the dealer or an experienced radio/TV technician for help

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Responsible party for FCC: Pan Asian Creations Limited.
Address: PO Box 165, New Hartford, NY 13413
For FCC email: info@pan-asian.com.hk

 **SAFETY INSTRUCTIONS:**
1. All cautions in these operating instructions should be followed completely.
2. Do not use near water; such as a bathtub, laundry tub, kitchen sink, wet basement or swimming pool, etc.
3. Do not display the product near any heat source such as radiators, stoves, fireplaces, etc.
4. Display should be serviced by a qualified service person only. Do not attempt to service this unit beyond what is described in the operating instructions.
5. Take extra care when displaying any figure that may contain small parts around small children.
6. Use of this decoration should always be supervised by an adult.
7. Remove the batteries when not in use.

 **BATTERY USAGE:**
ADULT SUPERVISION IS RECOMMENDED WHEN CHANGING BATTERIES.
1. Do not mix old and new batteries.
2. Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.
3. Alkaline batteries are suggested for longer life.
4. Exhausted batteries are to be removed from the product.
5. Dispose of exhausted batteries with care.
6. Do not dispose of batteries in fire, batteries may explode or leak.

CAUTION: Please remove batteries if their power is consumed or if the product is to be left unused for a long period of time.
WARNING: Please install new battery before use.

RECYCLE YOUR BATTERIES: To help protect our environment, we recommend that all batteries be recycled. You can find a local recycling center by going to: <http://earth911.com/hazardous/single-use-batteries/> Or, in the United States call 1-800-CLEANUP for a recycling location near you.

 **DO NOT SIT ON PONY. THIS ITEM IS FOR DECORATIVE PURPOSES ONLY.**
DO NOT BEAR MORE THAN 30 LBS (13.6KG) OF WEIGHT ON THE SKELETON PONY.

DISTRIBUTED BY:
HOME DEPOT
2455 PACES FERRY ROAD
ATLANTA, GA 30339

03302025_2008482
Printed in China