LA CROSSE® TECHNOLOGY

Mood Light Alarm Clock with Nature Sounds



Model: C83117 DC: 030418

POWER UP



- Insert power cord into the **bottom** of your clock (required)
- 2. Pull the plastic tab in the battery compartment for the CR2032 battery to activate. Backup only.
- 3. Select your language, time and other settings

SETTINGS

- Hold the SET button to enter Setting Menu.
- Press the + or buttons to adjust the values.
- Press the SET button to confirm and move to the next item.

Settings Menu Order

1 Language English/Spanish	<u>2</u> Beep on/off	<u>3</u> Hour	4 Minutes
<u>5</u> Year	<u>6</u> Month	7 Date	8 Snooze Duration 5-120 minutes

WAKE UP WITH LIGHT

Wake to a White Mood Light that gently increases from 2% to 99% over a 5 minute period.

Set Light Alarm:

- Hold the LIGHT ALARM 1 button for 3 seconds to enter alarm time set mode.
- Press the + or buttons to adjust hours than minutes
- Press the LIGHT ALARM 1 button to confirm

WAKE UP WITH SOUND♡

Wake to your chosen Nature Sound that increases in volume from 1 to 8 over a 5 minute period.

Set Sound Alarm:

- Hold SOUND ALARM 2 for 3 seconds to enter alarm settings.
- Press the + or buttons to adjust hours, minutes and select your Nature Sound: (Beep | Rain | Ocean | Backwoods | Thunder | River)
- Press the SOUND ALARM 2 button to confirm

SNOOZE (LIGHT OR SOUND)

 
- When your alarm lights or sounds, press SNOOZE/LIGHT button. SNOOZE - duration will show in date area.
- Press any button except for SNOOZE/LIGHT to exit snooze countdown.
- Press SNOOZE/LIGHT only to change backlight.

DEACTIVATE/ACTIVATE ALARM

- 1. Press the LIGHT ALARM 1 or SOUND ALARM 2 button.
- 2. Alarm time and indicator will show for 3 seconds.
- Press the LIGHT ALARM 1 button or SOUND ALARM 2 button again, to deactivate or activate correct alarm.

PLAY NATURE SOUNDS

- Press the SOUND button to listen to Nature Sound continually.
- Change volume with the + or buttons.
- Press the SELECT button to change Nature Sounds.
- Press SOUND button again to turn off Nature Sounds.

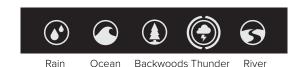

FALL ASLEEP TO NATURE SOUNDS

Set Sleep Timer

- Press the SOUND button to turn sound on.
- Press and release TIMER button to select the Sleep Timer duration in minutes (15, 30, 45, 60, 75, 90, OFF).
- When selection is made the Sleep Timer will start.
- Nature Sound will play for the designated time then shut off.
- Press the SELECT button to change Nature Sounds.
- Press SOUND button again to turn off Nature Sounds.

NAP FEATURE

- Program your Nap duration (5-120 minutes).
- Once set, one press of the NAP button will start the countdown while you rest.

Set Nap Time:

- Hold the NAP button 3 second to enter Nap Setting.
- Use the + or button to select the nap duration.
- Press NAP button again to confirm your selection and start the countdown.
- When Nap countdown reaches zero, the alarm will sound.
- Press any button to exit nap countdown.

MOOD LIGHT INTENSITY AND COLOR

- Press MOOD LIGHT button to select mood light brightness.
 LIGHT and a number will show.
- When selection is made press the COLOR button to select your mood light color or cycle through all colors.

Color choices: Red, Yellow, Green, Cyan, Blue, Purple, White

BACKLIGHT INTENSITY


- Tap the SNOOZE/LIGHT button to select the intensity level of backlight (4 levels and OFF).
- 2. The word BACKLIGHT with the number will show.

3 5

USB CHARGING PORT

There is a 1 Amp USB charging port on the side of the clock.

- Connect your external device's USB charging cable (not included) to the USB charging port.
- Charging times will vary.
- USB Power Output: 1A maximum current.
- Charge 1A devices or devices that are self-regulating.

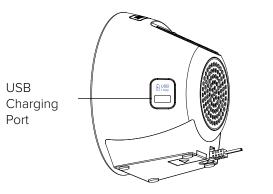

LOW BATTERY INDICATOR

• When the low battery indicator appears, replace the CR2032 battery in your clock.

WE'RE HERE TO HELP!

FIND FULL MANUALS UNDER THE **SUPPORT** TAB AT: http://bit.ly/C83117

JOIN THE CONVERSATION

Ask questions, watch detailed setup videos, and provide feedback on our social media outlets!







NEED MORE HELP?

If you require additional support, call our friendly customer support representatives based out of our office in La Crosse, Wisconsin.

Phone: 1.608.782.1610

Our knowledgeable customer support team is available Monday-Friday, 8am-6pm CST.

in to

WARNING: This product can expose you to chemicals including styrene, which is known in the State of California to cause cancer.

For more information go to: <u>www.P65Warnings.ca.gov</u>

SPECIFICATIONS

Power: 5.0V AC6: HX13-0501500-AU-001 Optional-1- CR2032 battery (included)

USB Output: 1 Amp

Battery Life: Battery life is over 24 months

Dimensions: 5.44" W x 3.4" D x 5.5" H
(13.81cm W x 8.6cm D x 13.97cm H)

WARRANTY INFO

La Crosse Technology, Ltd. provides a **1-year limited time** warranty (from date of purchase) on this product relating to manufacturing defects in materials & workmanship.

For Full Warranty Details, Visit:

www.lacrossetechnology.com/support

CARE + MAINTENANCE

- Do not mix old and new batteries.
- Do not mix Alkaline, Lithium, standard, or rechargeable batteries.
- Always purchase the correct size and grade of battery most suitable for intended use;
- Clean the battery contacts and also those of the device prior to battery installation;
- Ensure the batteries have with correct polarity (+ / -)
- Remove batteries from equipment that will not to be used for an extended period.
- Promptly remove expired batteries.

CANADA STATEMENT

This device complies with CNR Industry Canada license -exempt devices.

Operation is subject to the following two conditions:

- (1) This device may not cause interference; and
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

FCC STATEMENT

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Increase separation between equipment & receiver.
- Consult the dealer or an experienced radio/TV technician for help.

This device must not be co-located or operating in conjunction with any other antenna or transmitter.

Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

aution!

The manufacturer is not responsible for any radio or TV interference caused by unauthorized changes or modifications to this equipment. Such changes or modifications could void the user authority to operate the equipment.

All rights reserved. This manual may not be reproduced in any form, even in part, or duplicated or processed using electronic, mechanical or chemical process without the written permission of the publisher.

This booklet may contain errors or misprints. The information it contains is regularly checked and corrections are included in subsequent editions. We disclaim any responsibility for any technical error or printing error, or their consequences. All trademarks and patents are recognized.

6 8 9