USE AND CARE GUIDE

CHASEWOOD STATIONARY LOUNGE CHAIR



Scan for easy 3D instructions

Tap. Zoom. Rotate with official interactive instructions on the BILT app.



BILT





THANK YOU

Table of Contents

Table of Contents	Chair Package Contents
·	Care and Cleaning5
Pre-Assembly	

 
Important Safety Instructions

SAVE THESE INSTRUCTIONS

READ ALL INSTRUCTIONS BEFORE USE

To reduce the risk of injury to persons:

- 1. Close supervision is necessary when this furnishing is used by or near children, or disabled persons, if applicable.
- 2. Use this furnishing only for its intended use as described in these instructions. Do not use attachments not recommended by the manufacturer.



CAUTION: Read all of the instructions in this manual before you begin assembly. Failure to do so may result in faulty assembly and potential injury!

Warranty

3 YEAR WARRANTY

WHAT IS COVERED

We warrant the product to be free of manufacturing defects to the original purchaser for three years.

WHAT IS NOT COVERED

It remains the customer's responsibility for freight and packaging charges to and from our service center. This warranty does not cover commercial use, hardware, acts of nature, freezing, or abusive use. In addition, purchased parts are not covered under this warranty. We reserve the right to make substitutions with similar merchandise, if the model in question is no longer in production. Contact Customer Care at 1-800-841-1350 or visit www.hamptonbay.com.

Pre-Assembly

PLANNING ASSEMBLY

Please read this entire instruction manual prior to assembly.

Identify all parts packed in the carton against the parts list. Remove all protective materials and place the parts on a non-abrasive surface to avoid scratching.




NOTE: More than one person may be required to assemble this product.

Pre-Assembly

CHAIR PACKAGE CONTENTS



IMPORTANT: Do not fully tighten bolts/screws until all pieces are loosely assembled.

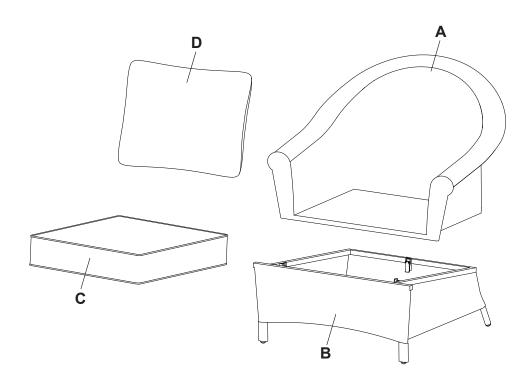


Part	Description	Quantity
Α	Chair Seat	1
В	Chair Base	1
С	Seat cushion	1
D	Back cushion	1

Assembly


Attaching the chair base to the chair seat

Attach the chair base (B) to the chair seat (A) by aligning the latch rings on (B) with the catches on (A). Ensure they engage, then push the levers on (B) to lock in place.

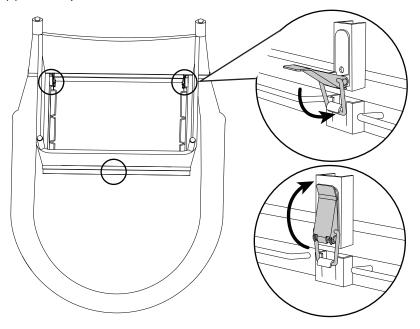

2 Adding the cushions.

 $\hfill\Box$ Add the seat cushion (C) and back cushion (D) to the chair.

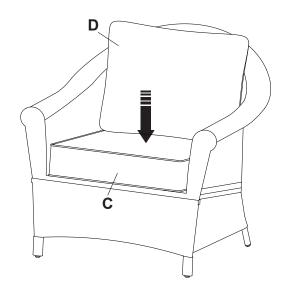

Care and Cleaning

- Do not allow water to build up in the frames. This will cause corrosion and possible freezing damage in cold climates.
- Use a mild soap and water for normal cleaning. Do not use janitorial or alcohol based cleaners. Some cleaners may be marked as natural, but some ingredients may cause discoloration or have an adverse reaction to your finish.
- Rinse with clean water and dry with a soft, absorbent cloth towel.
- Treat the frames with a liquid wax for maximum protection against UV rays and/or salty, damp air.
- Furniture covers are a great way to protect your investment from harsh elements of weather and UV light. However, it is important to ensure the furniture and covers are free of moisture and debris before covering. It is also necessary to promptly uncover furniture after precipitation and during periods of high humidity to prevent moisture build up. Failure to do so can lead to permanent surface and finish damage, which is not covered under warranty.

Questions, problems, missing parts? Before returning to the store, call Hampton Bay Customer Service 8 a.m. – 7 p.m., EST, Monday – Friday, 9 a.m. – 6 p.m., EST, Saturday


1-800-841-1350

HAMPTONBAY.COM

Retain this manual for future use.

USE AND CARE GUIDE

CHASEWOOD SWIVEL GLIDER CHAIR

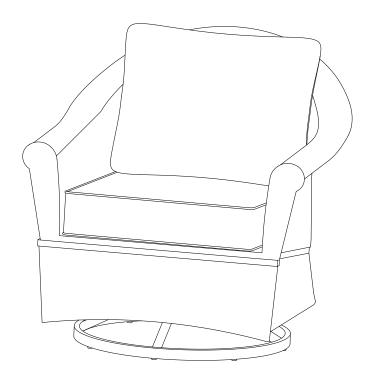

Scan for easy 3D instructions

Tap. Zoom. Rotate with official interactive instructions on the BILT app.



BILT





THANK YOU

Table of Contents

Table of Contents	Hardware Included3
Important Safety Instructions	Chair Package Contents4
Warranty	Assembly5
What is covered	Care and Cleaning6
What is not covered	
Pre-Assembly	
Planning Assembly	

Important Safety Instructions

SAVE THESE INSTRUCTIONS

READ ALL INSTRUCTIONS BEFORE USE

To reduce the risk of injury to persons:

- Close supervision is necessary when this furnishing is used by or near children, or disabled persons, if applicable.
- Use this furnishing only for its intended use as described in these instructions. Do not use attachments not recommended by the manufacturer.



CAUTION: Read all of the instructions in this manual before you begin assembly. Failure to do so may result in faulty assembly and potential injury!

Warranty

3 YEAR WARRANTY

WHAT IS COVERED

We warrant the product to be free of manufacturing defects to the original purchaser for three years.

WHAT IS NOT COVERED

It remains the customer's responsibility for freight and packaging charges to and from our service center. This warranty does not cover commercial use, hardware, acts of nature, freezing, or abusive use. In addition, purchased parts are not covered under this warranty. We reserve the right to make substitutions with similar merchandise, if the model in question is no longer in production. Contact Customer Care at 1-800-841-1350 or visit www.hamptonbay.com.

Pre-Assembly

PLANNING ASSEMBLY

Please read this entire instruction manual prior to assembly.

Identify all parts packed in the carton against the parts list. Remove all protective materials and place the parts on a non-abrasive surface to avoid scratching.

 


NOTE: More than one person may be required to assemble this product.

HARDWARE INCLUDED



NOTE: Hardware not shown to actual size.




Part	Description	Quantity
AA	M8*50 bolt	4
BB	Washer	4
CC	Lock washer	4
DD	Nut	4
EE	Bolt cap for nut	4
FF	Bolt cap	4
GG	Hex wrench	2

Pre-Assembly

CHAIR PACKAGE CONTENTS



IMPORTANT: Do not fully tighten bolts/screws until all pieces are loosely assembled.

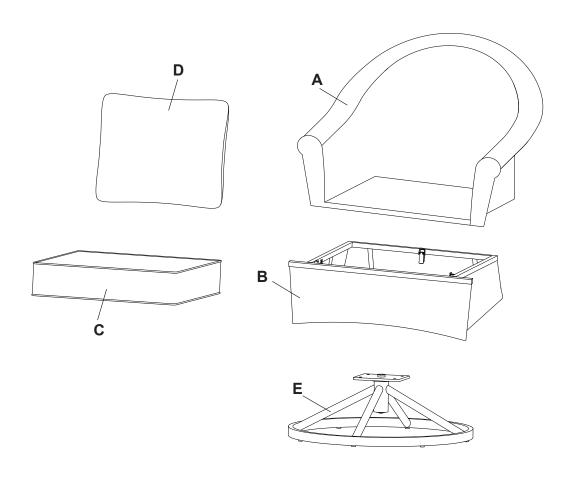

Part	Description	Quantity
Α	Chair back	1
В	Chair seat	1
С	Seat cushion	1
D	Back cushion	1
Е	Chair base	1


Assembly

1 Attaching the chair seat to the chair base

 Attach the chair seat (B) to the chair base (E) using the M8 bolts(AA), washers (BB and CC), and nuts(DD).




NOTE: Please ensure all the bolts are assembled correctly and use the hex wrench (GG) to tighten. Do not fully tighten bolts/screws until all pieces are loosely assembled. Adding corresponding plastic caps after final assembly finished.

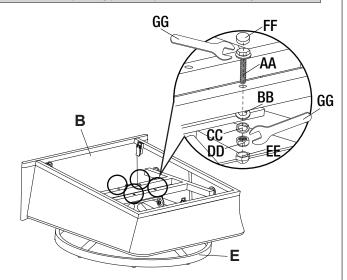


2 Attaching the chair seat to the chair back.

□ Attach the chair seat (B) to the chair back (A) by aligning the I atch rings on (B) with the catches on (A). Ensure they engage, then push the levers on (B) to lock them together.

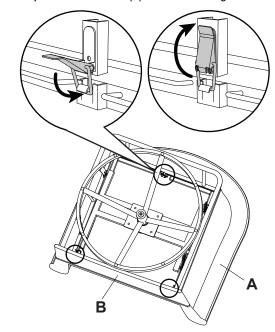

3 Adding the cushions

 $\hfill\Box$ Add the seat cushion (C) and back cushion (E) to the chair.

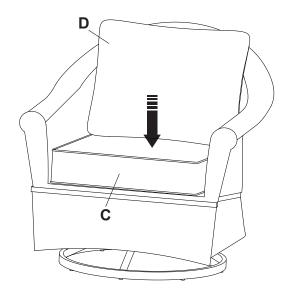

Care and Cleaning

- Do not allow water to build up in the frames. This will cause corrosion and possible freezing damage in cold climates.
- Use a mild soap and water for normal cleaning. Do not use janitorial or alcohol based cleaners. Some cleaners may be marked as natural, but some ingredients may cause discoloration or have an adverse reaction to your finish.
- □ Rinse with clean water and dry with a soft, absorbent cloth towel.
- □ Treat the frames with a liquid wax for maximum protection against UV rays and/or salty, damp air.
- Furniture covers are a great way to protect your investment from harsh elements of weather and UV light. However, it is important to ensure the furniture and covers are free of moisture and debris before covering. It is also necessary to promptly uncover furniture after precipitation and during periods of high humidity to prevent moisture build up. Failure to do so can lead to permanent surface and finish damage, which is not covered under warranty.

Questions, problems, missing parts? Before returning to the store, call Hampton Bay Customer Service 8 a.m. – 7 p.m., EST, Monday – Friday, 9 a.m. – 6 p.m., EST, Saturday


1-800-841-1350

HAMPTONBAY.COM

Retain this manual for future use.

USE AND CARE GUIDE

CHASEWOOD LOVESEAT

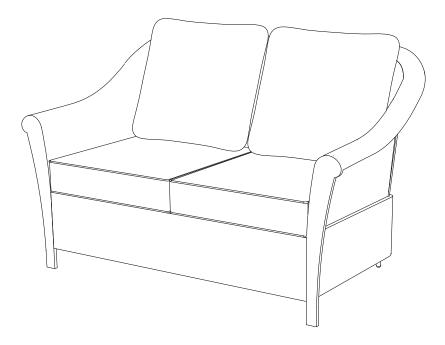



THANK YOU

Table of Contents

Table of Contents	Hardware Included
Safety Information	Chair Package Contents
Warranty	Assembly
What is covered	Care and Cleaning
What is not covered	
Pre-Assembly	
Planning Assembly3	

 
Important Safety Instructions

SAVE THESE INSTRUCTIONS

READ ALL INSTRUCTIONS BEFORE USE

To reduce the risk of injury to persons:

- 1. Close supervision is necessary when this furnishing is used by or near children, or disabled persons, if applicable.
- Use this furnishing only for its intended use as described in these instructions. Do not use attachments not recommended by the manufacturer.



Warranty

3 YEAR WARRANTY

WHAT IS COVERED

We warrant the product to be free of manufacturing defects to the original purchaser for three years.

WHAT IS NOT COVERED

It remains the customer's responsibility for freight and packaging charges to and from our service center. This warranty does not cover commercial use, hardware, acts of nature, freezing, or abusive use. In addition, purchased parts are not covered under this warranty. We reserve the right to make substitutions with similar merchandise, if the model in question is no longer in production. Contact Customer Care at 1-800-841-1350 or visit www.hamptonbay.com.

Pre-Assembly

PLANNING ASSEMBLY

Please read this entire instruction manual prior to assembly.

Identify all parts packed in the carton against the parts list. Remove all protective materials and place the parts on a non-abrasive surface to avoid scratching.



NOTE: More than one person may be required to assemble this product.

HARDWARE INCLUDED



NOTE: Hardware not shown to actual size.













Part	Description	Quantity
AA	M6x20 Bolt	4
BB	M6x50 Bolt	9
CC	Bolt cap	13
DD	Allen driver	1
YY	Hex. screw (6mm)	1
ZZ	Ratchet wrench	1

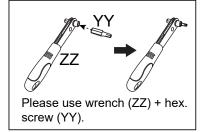

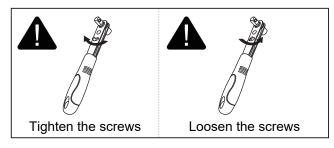


Pre-Assembly (continued)

LOVESEAT PACKAGE CONTENTS



IMPORTANT: Do not fully tighten bolts/screws until all pieces are loosely assembled.

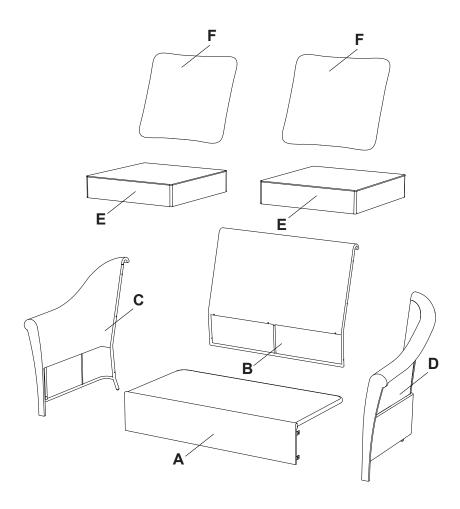

Part	Description	Quantity
Α	Loveseat seat	1
В	Loveseat back	1
С	Right arm	1
D	Left arm	1
Е	Seat cushion	2
F	Back cushion	2


Assembly

1 Attach the right arm to the loveseat seat 2

 Attach the right arm (C) to the loveseat seat (A) using M6 bolts (AA).



NOTE: Please ensure all the bolts are assembled correctly and use the allen driver (DD) to tighten. Do not fully tighten bolts/screws until all pieces are loosely assembled. Add corresponding plastic caps (CC) after final assembly finished.

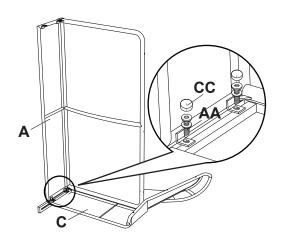


2 Attach the loveseat back to the loveseat seat and right arm

□ Attach the loveseat back (B) to the loveseat seat (A) and right arm (C) using M6 bolts (BB).




NOTE: Please ensure all the bolts are assembled correctly and use the allen driver (DD) to tighten. Do not fully tighten bolts/screws until all pieces are loosely assembled. Add corresponding plastic caps (CC) after final assembly finished.

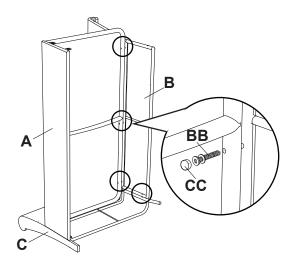

3 Attach the left arm to the loveseat seat and back


□ Attach the left arm (D) to the loveseat seat (A) using M6 bolts (AA).

Attach the left arm (D) to the loveseat back (B) using M6 bolts (BB).

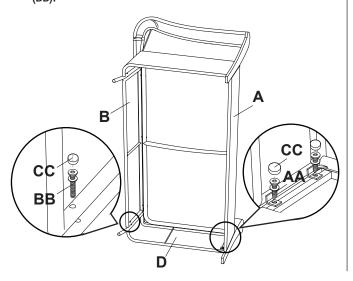

4 Attach the left arm to the loveseat back

 $\hfill\Box$ Attach the left arm (D) to the loveseat back (B) using M6 bolts (BB).

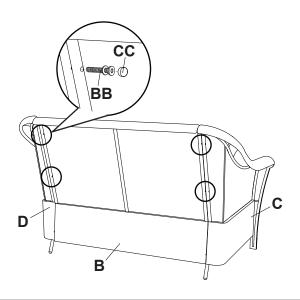


HAMPTONBAY.COM

Assembly

5 Add the cushions

 $\hfill\Box$ Attach the seat cushions (E) and back cushions (F) to love seat.

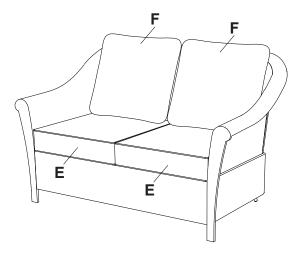

Care and Cleaning

- Do not allow water to build up in the frames. This will cause corrosion and possible freezing damage in cold climates.
- Use a mild soap and water for normal cleaning. Do not use janitorial or alcohol based cleaners. Some cleaners may be marked as natural, but some ingredients may cause discoloration or have an adverse reaction to your finish.
- □ Rinse with clean water and dry with a soft, absorbent cloth towel.
- □ Treat the frames with a liquid wax for maximum protection against UV rays and/or salty, damp air.
- Furniture covers are a great way to protect your investment from harsh elements of weather and UV light. However, it is important to ensure the furniture and covers are free of moisture and debris before covering. It is also necessary to promptly uncover furniture after precipitation and during periods of high humidity to prevent moisture build up. Failure to do so can lead to permanent surface and finish damage, which is not covered under warranty.

Questions, problems, missing parts? Before returning to the store, call Hampton Bay Customer Service 8 a.m. – 7 p.m., EST, Monday – Friday, 9 a.m. – 6 p.m., EST, Saturday


1-800-841-1350

HAMPTONBAY.COM

Retain this manual for future use.

USE AND CARE GUIDE

CHASEWOOD COFFEE TABLE

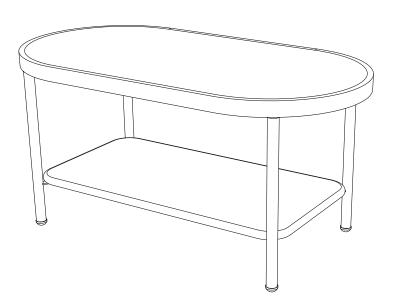



THANK YOU

Table of Contents

Table of Contents	Hardware Included
Safety Information	Table Package Contents
Warranty	Assembly
What is covered	Care and Cleaning
What is not covered	
Pre-Assembly	
Planning Assembly3	

 
Important Safety Instructions

SAVE THESE INSTRUCTIONS

READ ALL INSTRUCTIONS BEFORE USE

To reduce the risk of injury to persons:

- 1. Close supervision is necessary when this furnishing is used by or near children, or disabled persons, if applicable.
- Use this furnishing only for its intended use as described in these instructions. Do not use attachments not recommended by the manufacturer.



Warranty

3 YEAR WARRANTY

WHAT IS COVERED

We warrant the product to be free of manufacturing defects to the original purchaser for three years.

WHAT IS NOT COVERED

It remains the customer's responsibility for freight and packaging charges to and from our service center. This warranty does not cover commercial use, hardware, acts of nature, freezing, or abusive use. In addition, purchased parts are not covered under this warranty. We reserve the right to make substitutions with similar merchandise, if the model in question is no longer in production. Contact Customer Care at 1-800-841-1350 or visit www.hamptonbay.com.

Pre-Assembly

PLANNING ASSEMBLY

Please read this entire instruction manual prior to assembly.

Identify all parts packed in the carton against the parts list. Remove all protective materials and place the parts on a non-abrasive surface to avoid scratching.



NOTE: More than one person may be required to assemble this product.

HARDWARE INCLUDED



NOTE: Hardware not shown to actual size.




Part	Description	Quantity
AA	M6x20 bolt	12
BB	Bolt cap	12
CC	Allen driver	1

Pre-Assembly (continued)

TABLE PACKAGE CONTENTS



IMPORTANT: Do not fully tighten bolts/screws until all pieces are loosely assembled.

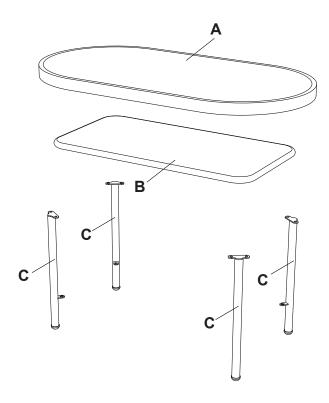

Part	Description	Quantity
Α	Table top	1
В	Support rim	1
С	Table leg	4


Assembly

Attach the table legs to the table top

□ Attach the table legs (C) to the table top (A) using M6 bolts (AA).



NOTE: Please ensure all the bolts are assembled correctly and use the allen driver (CC) to tighten. Do not fully tighten bolts/screws until all pieces are loosely assembled. Add corresponding plastic caps (BB) after final assembly finished.

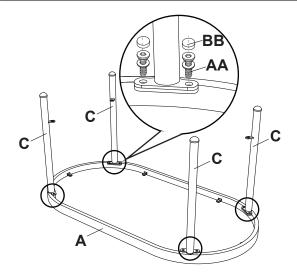


2 Attach the support rim to the table legs

 $\hfill\Box$ Attach the support rim (B) to the table legs (C) using M6 bolts (AA).



NOTE: Please ensure all the bolts are assembled correctly and use the allen driver (CC) to tighten. Do not fully tighten bolts/screws until all pieces are loosely assembled. Add corresponding plastic caps (BB) after final assembly finished.

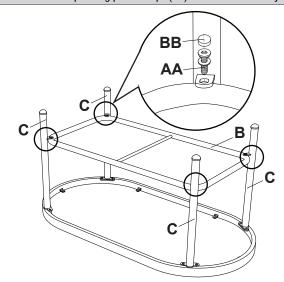

3 Turn the table up

□ Turn the table right side up.



Care and Cleaning

- Do not allow water to build up in the frames. This will cause corrosion and possible freezing damage in cold climates.
- Use a mild soap and water for normal cleaning. Do not use janitorial or alcohol based cleaners. Some cleaners may be marked as natural, but some ingredients may cause discoloration or have an adverse reaction to your finish.
- □ Rinse with clean water and dry with a soft, absorbent cloth towel.
- □ Treat the frames with a liquid wax for maximum protection against UV rays and/or salty, damp air.
- Furniture covers are a great way to protect your investment from harsh elements of weather and UV light. However, it is important to ensure the furniture and covers are free of moisture and debris before covering. It is also necessary to promptly uncover furniture after precipitation and during periods of high humidity to prevent moisture build up. Failure to do so can lead to permanent surface and finish damage, which is not covered under warranty.

Questions, problems, missing parts? Before returning to the store, call Hampton Bay Customer Service 8 a.m. – 7 p.m., EST, Monday – Friday, 9 a.m. – 6 p.m., EST, Saturday

1-800-841-1350

HAMPTONBAY.COM

Retain this manual for future use.