

CURVED LED ALARM CLOCK

WITH INDOOR TEMPERATURE & HUMIDITY




Model: 602-249v2
DC: 040721

For more product information visit: bit.ly/laxtech_support

POWER UP

1. Insert the provided Stand into bottom of the Alarm Clock.
2. Insert the 5.0 Volt USB Power Cord into an outlet, then into your Alarm Clock.

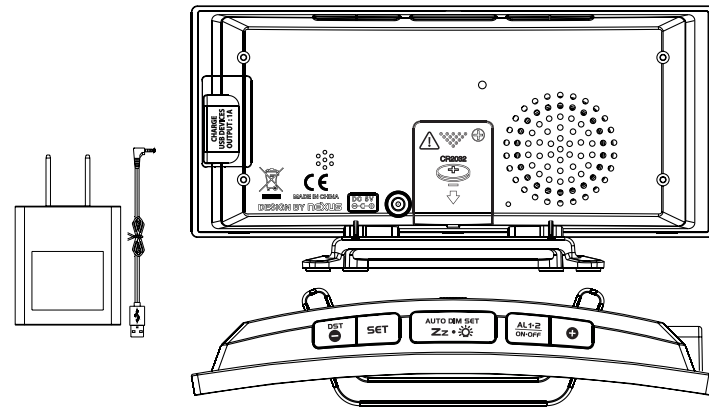

SETTINGS

1. Hold the SET button to enter the Settings Menu.
2. Use the + or DST/- button to adjust values.
3. Press the SET button to confirm and exit.



Settings Menu Order:

- Hours
- Minutes
- 12/24 Hour
- Snooze Duration (05 minutes to 60 minutes)

TIME ALARMS

1. Hold the AL1-2 button to enter the Alarm Settings.
2. Use the + or DST/- button to adjust values.
3. Press the AL1-2 button to confirm and move to the next item.
4. Press the SET button anytime to exit the Alarm Settings.

Alarm Settings Order:

- Alarm 1 Hour  Alarm 1 Icon will show when active
- Alarm 1 Minutes
- Alarm 2 Hour  Alarm 2 Icon will show when active
- Alarm 2 Minutes

Activate | Deactivate Time Alarms:

- Press the AL1.2 button once to activate Alarm 1. The Alarm 1 Icon will show.
- Press the AL1.2 button a twice to activate Alarm 2. The Alarm 2 Icon will show.
- Press the AL1.2 button three times to activate both Alarms.
- Press the AL1.2 button four times to deactivate both alarms. Both the Alarm 1 and Alarm 2 icons will disappear.

Silence a Sounding Alarm:

- When an alarm sounds, the related Alarm Icon will flash.
- Press the AL1.2 button to stop the alarm for one day. The Alarm Icon will remain solid on the display.


Snooze:


- When an alarm sounds, press the AUTO DIM SET button to silence the alarm for the Snooze Duration selected in the Settings Menu.
- Note:** Default Snooze Duration is 5 minutes.
- The appropriate Alarm Icon will flash when snooze is active.
- Note:** If the other Alarm sounds, it will override the Snooze function of the First Alarm. The First Alarm will sound again the next day.

ADJUSTABLE BACKLIGHT HI-LO-OFF

Press the AUTO DIM SET button to adjust the brightness of your clock (HI/LO/OFF).

AUTO DIM BACKLIGHT

1. Hold the AUTO DIM SET button until OFF and the Auto Dim Icon  shows. Press the + or DST/- button to turn ON.
2. Press the AUTO DIM SET button to select the Auto Dim Start Time (10:00pm will flash). Press the + or DST/- button to adjust.
3. Press the AUTO DIM SET button to select the Auto Dim Duration from 1Hr to 12Hr (8Hr will flash). Press the + or DST/- button to adjust.
4. Press the AUTO DIM SET button to confirm and exit.


When the Auto Dim Icon  is displayed, your backlight will automatically dim at the start time and brighten again at the stop time selected.

USB CHARGING PORT

Connect your external device's USB charging cable (sold separately) to the USB Charging Port.

Notes:

- Charging times will vary.
- USB Power Output: 1 Amp maximum current.
- Charge 1 Amp devices or devices that are self-regulating.
- This is a power output charging port. It does not provide power to the alarm clock.

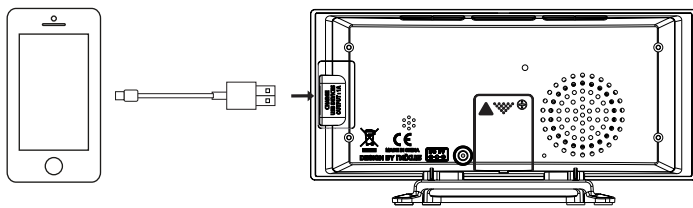

DAYLIGHT SAVING TIME ADJUSTMENT

When observing Daylight Saving time: Hold the DST/- button for a few seconds to move your time ahead 1 hour. The letter “D” will show in front of the time when DST is active.

When observing Standard time: Hold the DST/- button for a few seconds to move your time back 1 hour.

INSTALL CR2032 BATTERY

Your clock requires one CR2032 lithium battery (sold separately) to provide backup power in the event of a temporary power interruption.

1. Place the alarm face down on a soft flat surface.
2. Use a screwdriver to open the battery compartment door. Slide the door down to remove it.
3. Insert one new CR2032 battery into the battery compartment with the PLUS (+) side facing up as indicated.
4. Slide the battery door back into place and tighten the screw.

Note: Backup battery will not run the clock display.

WARNING

WARNING:

1. This product may use a Button Cell Battery.
2. If swallowed, it could cause severe injury or death in just 2 hours.
3. Seek medical attention immediately.

WARNING - KEEP BATTERIES OUT OF REACH OF CHILDREN

1. Swallowing may lead to serious injury in as little as 2 hours or death, due to chemical burns and potential perforation of the oesophagus.
2. If you suspect your child has swallowed or inserted a button battery, immediately seek urgent medical assistance.
3. Examine devices and make sure the battery compartment is correctly secured, e.g. that the screw or other mechanical fastener is tightened.
4. Do not use if compartment is not secure.
5. Dispose of used button batteries immediately and safely. Flat batteries can still be dangerous.
6. Tell others about the risk associated with button batteries and how to keep their children safe.

WE’RE HERE TO HELP!

If you require additional support, get in touch with our friendly customer support team based out of La Crosse, WI.

Phone: 1-608-782-1610

Online: bit.ly/contact_techsupport

Our knowledgeable customer support team is available:
Monday-Friday, 8am-6pm CST.

JOIN THE CONVERSATION

Ask questions, watch detailed setup videos, and provide feedback on our social media outlets!



SPECIFICATIONS

Power Requirements: HX075B-0501200-CU 5 Volt USB Power Cord (included) CR2032 Battery (sold separately)

Battery Life: Over 12 Months

USB Output: 1A Maximum Current.

Temperature Range: 32°F TO 122°F

Humidity Range: 20% to 95% RH

Alarm Duration: 5 Minutes

Snooze Duration: Programmable from 5-60 Minutes

Dimensions: 6.74” L x 1.52” W x 3.43” H
(17.12cm L x 3.86cm W x 8.71cm H)

WARRANTY INFO

La Crosse Technology, Ltd. provides a **1-year limited time warranty** (from date of purchase) on this product relating to manufacturing defects in materials & workmanship.

La Crosse Technology, Ltd, 2830 S. 26th St., La Crosse, WI 54601

For Full Warranty Details, Visit: www.lacrossetechnology.com/pages/warranty

CARE + MAINTENANCE

- Do not mix old and new batteries.
- Do not mix Alkaline, Lithium, standard, or rechargeable batteries.
- Always purchase the correct size and grade of battery most suitable for intended use.
- Clean the battery contacts and also those of the device prior to battery installation.
- Ensure the batteries have with correct polarity (+ / -).
- Remove batteries from equipment that will not be used for an extended period.
- Promptly remove expired batteries.

FCC STATEMENT

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:


- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

CAUTION!

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

All rights reserved. This manual may not be reproduced in any form, even in part, or duplicated or processed using electronic, mechanical or chemical process without the written permission of the publisher.

This booklet may contain errors or misprints. The information it contains is regularly checked and corrections are included in subsequent editions. We disclaim any responsibility for any technical error or printing error, or their consequences. All trademarks and patents are recognized.

 **WARNING:** This product can expose you to chemicals including styrene, which is known to the State of California to cause cancer. For more information go to: www.P65Warnings.ca.gov