

Standard Post Latch Installation Instructions



Read all instructions prior to installing product.

Refer to manufacturers safety instructions when operating any tools.

To register your product, please visit:

BoerboelGateSystems.com

WARNING:


- Improper installation of this product can result in personal injury. Always wear safety goggles when cutting, drilling and assembling the product.
- Incorrect installation may cause harm to the gate or individual.

NOTICE:

- DO NOT attempt to assemble the kit if parts are missing or damaged.
- DO NOT return the product to the store, for assistance or replacement parts call: 1-800-336-2383.

Component list:


| QTY | Description |
|-----|------------------|
| 1 | Latch |
| 1 | Striker |
| 4 | 5/16" Lag Screws |

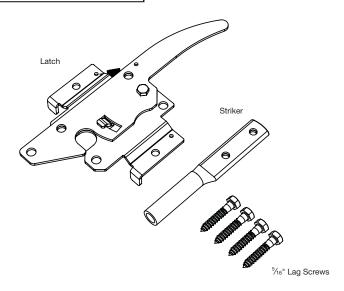

Dete

Determine Latch Specifications for Clearance:

 a. The Standard Post Latch requires a latch clearance of 1"-3" and works with a post size of 4"+ and upright size of 3"+ (Fig. 1).



Determine Latch Location:

 
NOTE: Latch should be on the same side as the hinges.

- a. With gate closed, align latch on post at desired height and center striker on gate (Fig. 2).
- b. Mark screw location on post and gate (Fig. 3).




Mount Latch on Post:


- a. Drill 7/32" pilot holes on the post for latch location (Fig. 4).
- b. Install latch to post with provided screws and tighten (Fig. 5).





Mount Striker on Gate:

    - a. Drill 7/32" pilot holes on the gate for striker location (Fig. 6).
- b. Install striker to gate with provided screws and tighten (Fig. 7).











BARRETTE OUTDOOR LIVING

7830 FREEWAY CIRCLE MIDDLEBURG HEIGHTS, OHIO 44130

TEL: (800) 336-2383 WWW.BOERBOELGATESYSTEMS.COM



