



 
TM

Use and Care Guide

7.5 ft Willow Creek Spruce LED Pre-Lit Tree

Item #1013854053
Model #25PG90052

HARDWARE INCLUDED

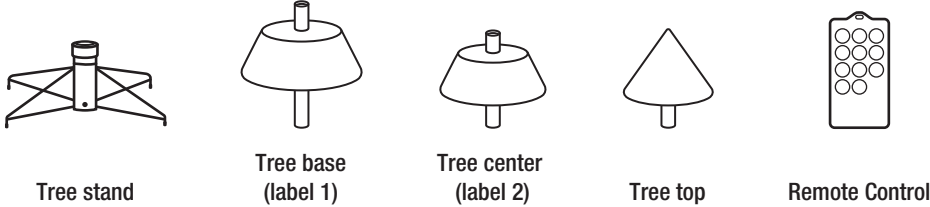

Safety Information

IMPORTANT SAFETY INSTRUCTIONS

When using electrical products, basic precautions should always be followed, including the following:

READ AND FOLLOW ALL SAFETY INSTRUCTIONS

1. Do not use seasonal products outdoors unless marked suitable for indoor and outdoor use. When products are used in outdoor applications, connect the product to a Ground Fault Circuit Interrupting (GFCI) outlet. If one is not provided, contact a qualified electrician for proper installation.
2. This seasonal product is not intended for permanent installation or use.
3. Do not mount or place the product near gas or electric heaters, fireplaces, candles, or other similar sources of heat.
4. Do not secure the wiring of the product with staples or nails, or place on sharp hooks or nails.
5. Do not let lamps rest on the supply cord or on any wire.
6. Unplug the product when leaving the house, when retiring for the night, or if left unattended.
7. This is an electric product and not a toy! To avoid risk of fire, burns, personal injury and electric shock it should not be played with or placed where small children can reach it.
8. Do not use this product for other than its intended use.
9. Do not hang ornaments or other objects from cord, wire, or light string.
10. Do not close doors or windows on the product or extensions cords as this may damage the wire insulation.
11. Do not cover the product with cloth, paper, or any material that is not a part of the product when in use.
12. This product is equipped with push-in type lamps. Do not twist lamps.
13. Read and follow all instructions that are on the product or provide with the product.

SAVE THESE INSTRUCTIONS

Installation & Operation

1 ASSEMBLING THE TREE STAND

- Step 1. Choose a location near a wall outlet.
- Step 2. Pull apart the legs of the stand so that they are snapped into an X-shape, place the tree stand on a level surface.
- Step 3. To close the stand, press the metal button and fold the legs together.

 


2 ASSEMBLING THE TREE

- This tree comes with Quick Set® feature --- Set up and light up your tree in minutes!
- Step 1. Remove the protective caps from the tree bottom and insert the pole into the tree stand.
Note: Do not step on the tree stand legs during the setup. This may deform the tree stand and may result in an unbalanced tree.
- Step 2. Continue by inserting the upper tree section(s) to the lower section(s) until inserting the tree top.
- Step 3. Shape the branches to your preference by working from the bottom to the top. When adjusting the branches, ensure that no wires are tangled around them.
- Step 4. Shape the tree from the bottom to the top. Start with the branches farthest from the pole – fan out in a star shape, and continue until the entire tree is shaped.



- Step 5. When finished shaping the branches, slightly upsweep all branch tips for a uniform look.

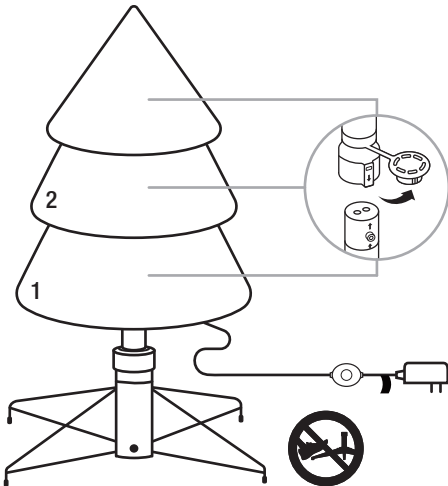

3 TURNING ON THE TREE

- Step 1. Connect the light strings of the tree together and plug the adapter into a wall outlet.
- Step 2. Check for loose connection between light string plugs and the power cord.
- Step 3. If the tree comes with a foot pedal controller, step on the Selector button.
- NOTE: If some bulbs do not light up or flicker, search for any loose plugs or any broken/loose/missing bulbs. Replace the bulbs promptly with the replacement bulbs provided in order to maintain the performance and life expectancy of your tree.

User Servicing Instructions

 
Lamp Replacement

1

Grasp the power adapter or power cord plug, and than unplug from the power outlet. Do not pull the power cord.


2

Lift up lamp lock tab, then pull the lamp and plastic lamp base straight out of the lamp-holder.



3

 
Replace lamp with only 3 Volt, 0.06 Watt LED type lamps provided with this product.



(Reference figure only)




If the new lamp base does not fit in lampholder, follow the steps below before step 3.

 - a. Remove the base of burned out lamp by straightening lamp leads and gently pull lamp out.
- b. Thread leads of new lamp through holes in old base with one lead in each hole.
- c. After lamp is fully inserted into base, bend each lead up, like other lamps in the light set so that the leads will touch the contacts inside the lampholder.

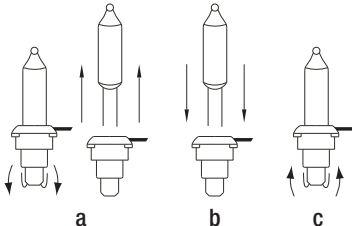

(Reference figure only)

   Troubleshooting

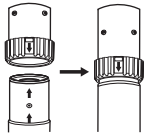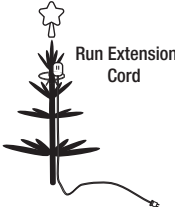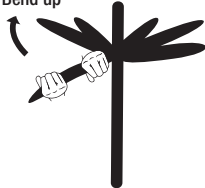Problem			Solution		
The tree does not light			Ensure that all tree sections are plugged into each other and that the tree is plugged into the wall. If your tree came with a foot pedal controller, step on the Selector button.		
			Check for loose, broken, or missing bulbs and replace as needed with the replacement bulbs provided		
Section Out? Ensure pole is fully connected	No Lights Working? Check For Loose Connection	Not Full? Spread Branches	Tree Topper? Run Extension Cord	Branch Hanging Low? Bend up	Lights Cycle Through Functions? This tree is preset to Demo Mode. To deactivate: Press another light function button to switch to a different function. To activate: Press the "Demo" button once. 1. Warm White-Multi Fast Fading 2. Warm White-Fast Fading 3. Warm White-Multi Alternating 4. Warm White-Steady 5. Warm White-Multi Slow Fading 6. Multi Steady 7. Multi Fast Fading 8. Demo
					
Other Issue? Call 1-855-HDHoliday (1-855-434-6543)					

Maintenance

Spare Parts

 
This tree package includes hinge pins, washers and bulbs for any replacement or repair that you need to perform on your tree. If extra parts are needed, contact the Customer Service Team at 1-855-HDHoliday (1-855-434-6543) from 8am to 7pm EST, Monday through Friday, and 9am to 6pm EST, Saturday.

Repairing Loose Hinges

- Step 1. Place the branch into the slot of the bracket.
- Step 2. Insert a new hinge pin through the holes of the bracket and secure with a washer.

Use and Care Instructions

1. When the product is placed on a live tree, the tree should be well maintained and fresh. Do not place on live trees in which the needles are brown or break off easily. Keep the tree holder filled with water.
2. If the product is placed on a tree, the tree should be well secured and stable.
3. Before using or reusing, inspect product carefully. Discard any products that have cut, damaged or frayed wire insulation or cords, cracks in the lampholders or enclosures, loose connections, or exposed copper wire.
4. Before disassembling the tree, unplug the tree and remove all ornaments and decorations.
5. Gently lift the tree top straight up to remove from the center section and fold all branches towards the pole.
6. Repeat this step for the center and bottom tree sections.
7. When storing the product, carefully remove the product from wherever it is placed, including tree, branches, or bushes, to avoid any undue strain or stress on the product conductors, connections, and wires. Cover the protective cap on the poles to avoid damaging the internal parts.
8. When not in use, store neatly in a cool, dry location protected from sunlight.

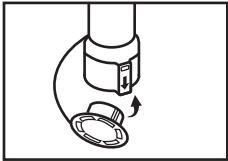

CAUTION:

1. Risk of fire. This product does not contain lamp shunts, which allow the product to operate if one lamp burns out. Replace lamps only with the spare lamps provided with this product.
2. To reduce the risk of fire and electric shock:
 - a. Do not install on trees having needles, leaves or branch coverings of metal or materials which look like metal, and
 - b. Do not mount or support strings in a manner that can cut or damage wire insulation.
3. The controller and remote controller (if included) can only be used with this product.
4. Ensure the ladder is securely fixed and is not slippery. Be cautious when climbing up and down the ladder.

 


Be cautious when using ladder to set up tall trees

Remote Control Instructions

1

Remove the insulation tab of the remote control.

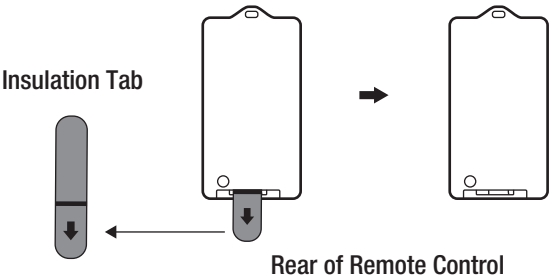


2 HOW TO USE THE REMOTE CONTROL & FOOT PEDAL CONTROLLER:

The lights will turn on automatically when plugged into a power source. Select your favorite light function by pressing the corresponding control button on the Remote Control or by tapping the Selector button on the Foot Pedal Controller to cycle through the functions.

Light Functions:

- | | |
|---------------------------------|---------------------------------|
| 1. Warm White-Multi Fast Fading | 5. Warm White-Multi Slow Fading |
| 2. Warm White Fast Fading | 6. Multi Steady |
| 3. Warm White-Multi Alternating | 7. Multi Fast Fading |
| 4. Warm White Steady | 8. Demo |

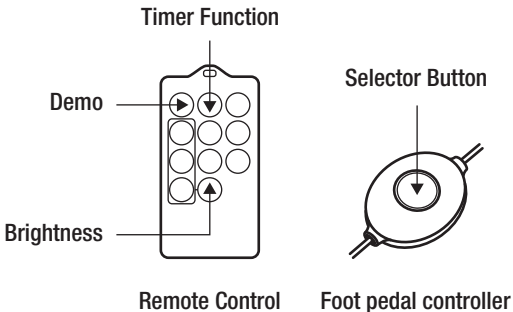 

There are 5 brightness levels available in the Warm White Steady, Multi Steady, and Warm White-Multi Alternating modes. Use the "Brightness" button on the Remote Controller to increase or decrease the brightness level, one level at a time with each press.

DEMO MODE:

NOTE: This tree is preset to Demo Mode. In this mode, the light effects are displayed one by one in sequence until another light function is selected.

To Activate Demo Mode:

1. Using the remote control: Press the "Demo" button once.
Using the foot pedal controller: Press the selector button 8 times to cycle through to the Demo function.
2. The tree is now in demo mode.

To Deactivate Demo Mode:

1. Using the remote control: Press any other light function button to switch to a different light function.
2. The tree is now in normal mode.

TIMER FUNCTION:

1. To Turn ON the Timer Function:
 - a. Press the "Timer" button on the remote control once.
 - b. Alternatively, while the tree is unplugged, press and hold the selector button on the foot pedal controller, then plug it into the wall outlet.
 - c. The clear lights will flash 2 times, indicating that the timer function is activated.
The lights will remain ON for 6 hours and then OFF for 18 hours, cycling until the timer function is turned off.

2. To Turn OFF the Timer Function:
- a. Press the “Timer” button on the remote control again. The clear lights will flash four times, indicating that the timer function is deactivated.

b. You may also unplug the adapter from the wall outlet completely.
- Note: If the power is disconnected during operation, the timer function will be cancelled.

To turn off the lights:

 
Using the Remote Control - Press the On/Off button again.

Using the Foot Pedal Controller - Tap the selector button until you cycle through all functions to OFF.

3

BATTERY REPLACEMENT

1. Locate the push button near the battery tray at the rear.
2. Using a pin or similar object with a fine tip, press and hold down on the button while pulling on the battery tray to disconnect the tray from the remote controller.
3. Remove the pin and continue to pull the battery tray out completely.
4. Replace the old battery with a new one (Battery type: CR2032). Be sure the new battery is installed with the correct polarity (+ and -).
5. Push the battery tray back into the remote controller.

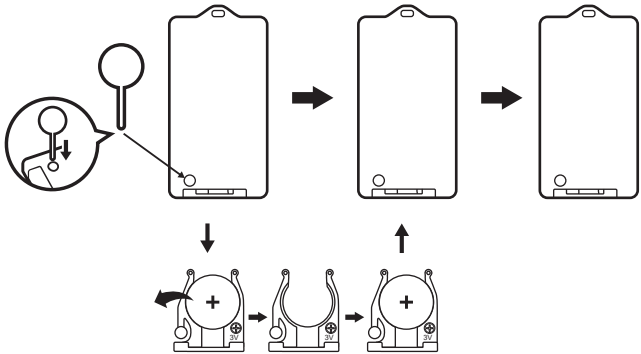

Warning

1. Dispose used battery properly. Observe local regulations regarding disposal of hazardous waste.
2. Ensure the batteries are installed correctly with regard to polarity (+ and -).
3. This product is powered by a lithium battery. Due to their small size, lithium batteries can easily be swallowed by children. Ingestion of such batteries has been known to cause death.
4. This product contains a lithium battery which if swallowed has been known to cause death.
5. Do not expose light set to moisture.
6. Remove batteries when not used for an extended period of time, or when depleted.
7. Clean the battery contacts prior to battery installation.
8. The external flexible cable or cord of this luminaire cannot be replaced; If the cord is damaged, the luminaire shall be destroyed.
9. Dispose of used batteries properly by following directions on batteries.
10. Use only CR2032 batteries for the remote controller.
11. DO NOT DISPOSE OF BATTERIES IN FIRE. BATTERIES MAY EXPLODE OR LEAK.

Warranty

Contact the Customer Service Team at 1-855-HDHOLIDAY (1-855-434-6543) or visit www.HomeDepot.com.

Questions, problems, missing parts? Before returning to the store, call [HOME ACCENTS HOLIDAY] Customer Service 8 a.m. - 7 p.m., EST, Monday - Friday, 9 a.m. - 6 p.m., EST, Saturday

FCC Notices:



WARNING:

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the users authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

1. Reorient or relocate the receiving antenna.

2. Increase the separation between the equipment and receiver.

3. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

4. Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. this device may not cause harmful interference, and

2. this device must accept any interference received, including interference that may cause undesired operation.

POLYGROUP NORTH AMERICA, INC.
9033 Billy The Kid St, El Paso, TX 79907, USA
Polygroup.com