ASSEMBLY INSTRUCTIONS

OUTDOOR LIGHTING

PLEASE READ AND SAVE THESE INSTRUCTIONS:

Be careful when unpacking the lamp since the wires are connected. If the wires are pulled out of their connectors, the lamp will not turn on.

- 1. Carefully organize and place all parts on a smooth, flat surface. Line up all of the parts according to the assembly diagram.
- 2. Screw the lower pole (B) onto base (A), turn to tighten.
- 3. Screw the middle pole(C) and upper pole (D) accordingly, turn to tighten.
- 4. Screw the top part (E) onto pole(D), turn to tighten.
- 5. Place the shade (F) onto top part (E); use the screws (G) to lock it.
 - Important Note: Screws located in Part E screw holes


6.Install bulb, Use only with one Max 60W bulb(Bulb not included)

7. Screw the bulb-shield (H) onto the shade spider on shade (F).

Caution: Refer to the wattage caution label located near the lamp holder for recommended "maximum wattage, do not exceed recommended wattage."

Warning: Do not attempt to replace the bulb while the lamp is plugged into a wall receptacle

Bulb: E26, Type A, 60W X 1 (not included) or E26, CFL, 13W X 1 (not included)

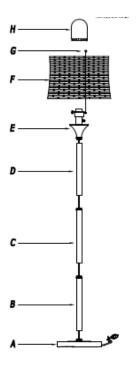



MADE IN CHINA