



## Model RM02 Parts List

A = Standard Equipment

O = Circuit Diagram

Item#	Part#	Description	Q'ty Unit
001	GM00001608	FRONT COVER ASSY ROS80520305	1 PC.
002	GM00001609	FRONT+BACK HOUSING ASSY ROS805	1 PC.
003	GM00001610	FUNCTION BUTTON ASSY ROS805203	1 PC.
004	GM00001611	UPPER FUNCTION BUTTON C9840052	1 PC.
005	GM00001612	SWITCH HOLDER C1040052004	1 PC.
006	GM00001613	BATTERY TERMINAL ASSY ROS80520	1 PC.
007	GM00001614	TERMINAL FIX PLATE C0140052003	1 PC.
008	GM00001615	HOOK HOLDER ROS40520300	1 PC.
009	GM00001627	MAIN LCD PCBA ASSY (USA)	1 PC.
010	GM00001617	RUBBER FM ANTENNA B1502052941	1 PC.
011	GM00001618	METAL HOOK ROS40520300	1 PC.
012	GM00001619	E-RING B0301000500	1 PC.
013	GM00001620	TUNING KNOB SHAFT B2401052941	1 PC.
014	GM00001621	TUNING KNOB C0140052002	1 PC.
015	GM00001622	SOUND SPONGE D1001052401	1 PC.
016	GM00001623	SCREW 3x8 B0130080542	4 PC.
017	GM00001024	SCREW 3X12 B0130120202	5 PC.
018	GM00001395	SCREW 2.6X8PB B0126081102	12 PC.
019	GM00001624	SCREW 2x8 B0120080102	4 PC.