

Insert the metal cup into the opening located at the top of the fireplace so that the lip of the cup rests nicely just inside the indent.

Carefully remove the lid from EchoFlame[™] gel fuel can and insert into the metal cup. (Note: Remove label from can before inserting.)

Use a long match or lighter to ignite the EchoFlame[™] gel fuel and enjoy your very own accent fireplace.

Includes snuffer to easily extinguish flames.

Place snuffer over the top of the can to extinguish flame.



- Keep out of reach of children & pets.
- Open flame Heat producing appliance; Operate with caution & under adult supervision.
- Use only in well ventilated areas.
- Do not move while lit.
- Allow to cool for 15 minutes before touching.
- Do not leave flame unattended.

