



750W METAL FOG MACHINE WITH WIRELESS REMOTE

INSTRUCTION MANUAL

IMPORTANT SAFETY INSTRUCTIONS:

IMPORTANT: READ ALL THE INSTRUCTIONS CAREFULLY BEFORE USE. SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE.



CAUTION:

- Risk of burn, fire or electrical shock.
- For indoor use only.
- Please read instruction manual before using.
- Don't immerse in liquid.
- Not for space heating purpose.

WARNING:

To prevent risk of personal injury, fire, and electric shock:

- Never leave unit unattended while plugged in. Unplug when not in use.
- Read all important safety instructions and cautions.
- Connect only to a properly grounded outlet.
- Place product on a flat, level HARD surface and connect the cord to prevent the product from overturning.
- For use only in covered areas. Keep unit dry, do not expose to rain or moisture. Do not immerse unit.
- Leave enough space for good ventilation. Keep unit cool and away from other objects.
- Do not operate unit without fog liquid.
- Pour fog liquid carefully to avoid spills which could result in electrical shock. Do not use if liquid spills onto unit. Let unit dry completely before plugging in.
- Do not overfill the liquid.
- Keep away from flames and flammable/explosive substances to avoid fire or explosions. Never pour flammable liquids such as gas, perfume etc.. into the fog machine.
- Keep product and fog liquid out of reach of children. Use only under adult supervision.
- Do not spray in the direction of flames or people. Stay at least 20 inches (50cm) from the nozzle at the front of the unit.
- Do not obstruct the nozzle.
- Do not open unit. No user serviceable parts inside, please refer to your vendor. Only an electrician can change the power cord.
- Clean unit before storage to avoid damages.

WARNING: Risk of electric shock and fire, Disconnect from power socket before replacing the fuse.

1. Turn the fuse knob counterclockwise to reveal the fuse.
2. Replace the fuse with the same size and type fuse: 7A, 125V
3. Place fuse in cover and reinstall by turning clockwise. Be sure not to over tighten.

- a) A short power-supply cord (or short detachable power-supply cord) is provided to reduce the risks resulting from becoming entangled in or tripping over a longer cord.
- b) Extension cords (or longer detachable power-supply cords) are available and may be used if care is exercised in their use.
- c) If an extension cord (or a long detachable power-supply cord) is used:
 - 1) The marked electrical rating of the detachable power-supply cord or extension cord should be at least as great as the electrical rating of the appliance;
 - 2) If the appliance is of the grounded type, the extension cord should be a grounding type 3-wire cord; and
 - 3) The longer cord should be arranged so that it will not drape over the countertop or tabletop where it can be tripped over, snagged, or pulled on unintentionally (especially by children).

FOR INDOOR USE ONLY

SAVE THESE INSTRUCTIONS

FOG MACHINE TECHNICAL SPECIFICATIONS:

Model: F-80B

Rating Voltage: AC 120V, 60Hz

Power: 750W

Ambient Temperature: -10~ 45°C

Fuse: 7A, 125V

Preheat Time: 2~ 4 Minutes

Tank Capacity: 1 L

Dimensions: L340 x W170 x H190 mm
L13.4 x W6.7 x H7.5 inch

PARTS LIST

A. Fog Machine



B. Wireless Remote with 2 x 1.5V AAA Batteries

(The infrared sensor has a range up to 6.1 meters/20feet)



GENERAL ASSEMBLY AND OPERATION INSTRUCTIONS

1. Always place this product on a flat, stable, heat-resistant surface, keeping the unit level.
3. Unscrew the Reservoir Tank Lid on the top of the Fog Machine, and fill with Fog Liquid (not included). Close the Reservoir Tank Lid tightly. Always make sure there is enough fluid in the tank before using the fog machine. (See illustration 1)
4. Open battery cover on back of wireless remote. Replace the new 2 X 1.5 V AAA batteries inside. Please observe the correct polarities during installation and follow all battery instructions. (See illustration 2)
5. Plug the A/C power cord into a standard A/C grounded wall outlet.
6. Warm up time is approximately 2 to 4 minutes for the Fog Machine. When fully heated, the Green light on back of unit will light up indicating that the machine is ready.
7. OPERATION:
 - a. **Wireless Remote:** Point wireless remote towards the dome located on top of the Fog Machine. Press the button on the Wireless Remote and the Fog Machine will spray up to approximately 35 seconds and automatically stop when it needs to reheat. Press the button again to stop. Wait for the Green light to come on before operating again.
8. When not in use, unplug the A/C power cord from the A/C grounded wall outlet.

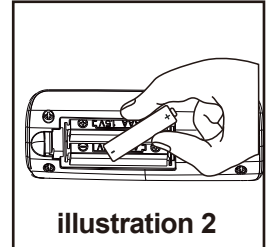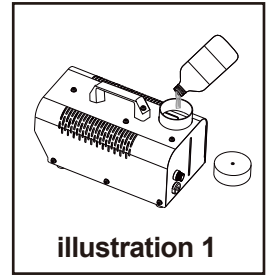

BATTERY USAGE

1. Keep these instructions for future reference because they contain important information.
2. Do not mix alkaline, standard (carbon-zinc) batteries.
3. Do not mix old and new batteries.
4. Non-rechargeable batteries are not to be recharged.

ADDITIONAL INFORMATION

1. It is normal for condensation to appear on the nozzle of the Fog Machine.
2. A small amount of fog may spray during or after operation.
3. The unit will have to reheat after long bursts of use. The unit will stop operation for a short period in order to heat up to operating temperature again. While this is happening, fog cannot be produced. The light on the Receiver will turn on again when the unit is ready to generate more fog.

MAINTENANCE AND SERVICING

Note: Use of fogger liquids not included or those other than HOME DEPOT Fog Liquid are not recommended and may result in blockage, leakage, or other damage to the unit.

INSPECTION

Before each use, check unit for any cracks in the enclosure, remote control, cords, and plugs. Make sure there are no exposed wires. Do not use if any of the above conditions are found.

CLEANING

Should you experience low fog output after many hours of continuous operation or after the machine has been idle or in storage for a long time, it is recommended to run a cleaning solution through the system to prevent the accumulation of particles in the heating element.

- a. While the unit is unplugged and cool, empty all Fog Liquid from the machine and replace with a fog machine cleaning solution in the tank. Plug unit in and allow to warm as usual.**
- b. Run unit in a well-ventilated area until tank is empty.**
- c. Cleaning is now complete.**

All fog machines are prone to clogging due to the consistency of Fog Liquid and the high temperatures at which it vaporizes. However a well maintained machine should provide years of reliable use.

STORAGE

It is important to remove all fluid from the unit when storing for an extended period of time.

- 1. When the unit is unplugged and cool, empty all Fog Liquid from the machine. Plug in unit and allow to warm as usual.**
- 2. Run unit in a well-ventilated area for 10-seconds to confirm tank is empty and dry.**
- 3. Store on a flat, level surface. Keep in a well-ventilated, cool and dry location.**

For best performance, operate unit for 10-minutes every 3 months. Follow the Operation Instructions and Storage instructions accordingly.

FUSE REPLACEMENT

If the Fog Machine does not work at all when it is connected to the power socket, then it is probably that the fuse has been broken