

Automatic Touchless Soap Dispenser Manual

Installation Guide

1. Take out the soap dispenser and all accessories from the package, and ensure the device is powered off.
2. Open the top lid of the dispenser, pour non-granular liquid soap (excluding foam soap and alcohol-containing products) into the water tank, and close the lid tightly to prevent leakage.
3. Place the dispenser in a suitable position (bathroom, kitchen, commercial place, etc.), avoiding direct flushing with water; ensure the infrared sensor is not blocked.
4. If the device is out of power, connect the USB-C charging cable to the charging port (use the rubber plug to seal the port after charging to prevent water entry), and charge it with a charger, power bank, computer or car charger.
5. After full charge, power on the device, and it is ready for use.

Instructions / Assembly

This is a touchless automatic soap dispenser made of stainless steel, with an infrared sensor, adjustable soap output, USB-C rechargeable and IPX5 waterproof functions.

1. Assembly: No complex assembly is required; just pour the applicable liquid soap into the tank and power on the device.
2. Soap Output Adjustment: There are three gears for soap output. Adjust according to needs: Gear 1 (for children, less soap, 0.2s output speed), Gear 2 (for adults, 0.4s output speed), Gear 3 (for dishwashing, 0.75s output speed).
3. Touchless Operation: Put your hand under the infrared sensor, and the dispenser will output soap within 0.2-0.75s (depending on the gear); the soap output is less when the liquid level is low to save soap.
4. Cleaning Mode: Double-click the power button to start cleaning mode, and the dispenser will discharge liquid continuously for 20 seconds; click the power button once to exit the mode.

Use and Care Manual

1. Usage Notes: Only use non-granular liquid soap; do not use foam soap or alcohol-containing products, which may damage the device and cause blockage.
2. Waterproof Care: The device is IPX5 waterproof, which can resist splashing water; do not flush it directly with water. After charging, cover the USB-C port with the rubber plug to prevent water entry.
3. Charging Care: The built-in 1500mAh battery can be used for 3-4 months after full charge, with a service life of more than 50,000 times. Charge it in time when the power is low.
4. Daily Cleaning: Wipe the stainless steel shell with a soft cloth regularly; before adding soap each time, add water to the tank and start the cleaning mode to extend the service life of the device.
5. Maintenance: If the dispenser is blocked or fails to output soap, check the liquid level and whether the sensor is blocked; if the device is loose or damaged, stop using it and check it in time.