
USE AND CARE GUIDE

35 IN. MIX AND MATCH OUTDOOR PATIO RUNNER KIT (FITS CHAIR SKU 1004415329 / MODEL 65-183361)

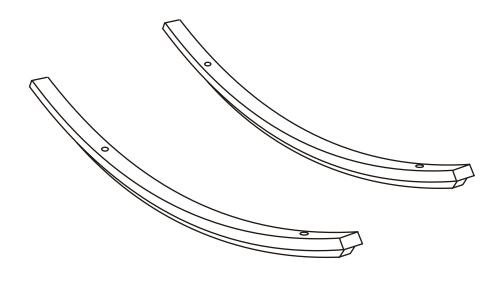

Questions, problems, missing parts? Before returning to the store, call Hampton Bay Customer Service 8 a.m. - 7 p.m., EST, Monday - Friday, 9 a.m. - 6 p.m., EST, Saturday

1-855-HD-HAMPTON

HAMPTONBAY.COM

THANK YOU

Table of Contents

Table of Contents	Pre-Installation3
THD - TOC2	
Safety Information	
What is covered	
What is not covered	Care & Cleaning6
Warranty	Service Parts

Important Safety Instructions

SAVE THESE INSTRUCTIONS



WARNING: FUELS USED IN LIQUEFIED PROPANE GAS APPLIANCES, AND THE PRODUCTS OF COMBUSTION OF SUCH FUELS, CAN EXPOSE YOU TO CHEMICALS INCLUDING BENZENE, WHICH IS KNOWN TO THE STATE OF CALIFORNIA TO CAUSE CANCER AND CAUSE BIRTH DEFECTS OR OTHER REPRODUCTIVEHARM. For more information go to: www.P65Warnings.ca.gov.



WARNING: FUELS USED IN WOOD OR CHARCOAL BURNING APPLIANCES, AND THE PRODUCTS OF COMBUSTION OF SUCH FUELS, CAN EXPOSE YOU TO CHEMICALS INCLUDING CARBON BLACK, WHICH IS KNOWN TO THE STATE OF CALIFORNIA TO CAUSE CANCER, AND CARBON MONOXIDE, WHICH IS KNOWN TO THE STATE OF CALIFORNIA TO CAUSE BIRTH DEFECTS OR OTHER REPRODUCTIVE HARM.

For more information go to: www.P65Warnings.ca.gov

READ ALL INSTRUCTIONS BEFORE USE

To reduce the risk of injury to persons:

- 1. Close supervision is necessary when this furnishing is used by or near children, or disabled persons, if applicable.
- Use this furnishing only for its intended use as described in these instructions. Do not use attachments not recommended by the manufacturer.

SET UP YOUR FURNITURE PROPERLY

- 1. Ensure that all parts are assembled properly and fully tightened as per the instructions.
- 2. When placing in the desired location, ensure that all legs are resting on the same surface.

EXAMINE YOUR FURNITURE

Examine occasionally to ensure that there are no loose parts. If loose parts are found, they must be re-tightened fully before additional use.

OBERVE WEIGHT LIMITS

The	weight	limite	for the	following	nroducte	are listed below	
1110	WGIUIIL	IIIIIIII	IUI LIIG	IUIIUVVIIIU	บเบนนบเอ	are noted below	

☐ Chair: 300 lbs	☐ Sofa: 700 lbs
☐ Swivel Chair: 300 lbs	☐ Rocking Chair: 300 lbs
☐ Loveseat: 500 lbs	☐ Chaise Lounge: 300 lbs
☐ Ottoman: 150 lbs	☐ Dining Table: 100 lbs
☐ Table: 50 lbs	☐ Dining Chair: 200 lbs



CAUTION:

If you overload your furniture, injuries can

occur.

TWO YEAR FRAME, WEAVE AND FABRIC LIMITED WARRANTY

WHAT IS COVERED

We warrant the frame, weave and fabric to be free of manufacturing defects to the original purchaser for two years. For glass table top we warrant 30 days from the date of purchase.

WHAT IS NOT COVERED

This warranty does not cover commercial use, hardware, acts of nature, fire, freezing and abusive use. In addition, purchased parts are not covered under this warranty.


We reserve the right to make substitutions with similar merchandise, if the model in question is no longer in production. Contact the Customer Service Team at 1-855-HD-HAMPTON or visit www.Hamptonbay.com.

Pre-Installation

PLANNING INSTALLATION


To prevent damage, place all parts on a soft surface during assembly. Remove all protective caps before beginning assembly.

HARDWARE INCLUDED

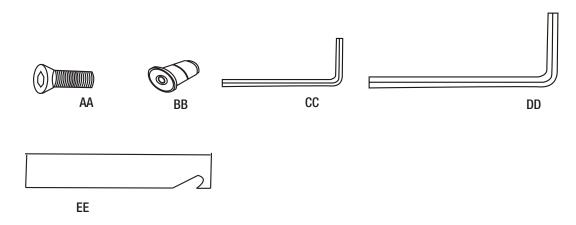



Part	Description	Quantity
AA	Bolt Φ 6 x45mm	4
BB	Compression plug	4
CC	Hex wrench 4mm	1
DD	Hex wrench 6mm	1
EE	Wrench	1

   
PACKAGE CONTENTS

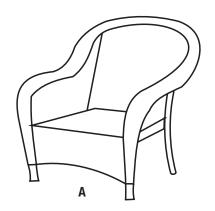










(SOLD SEPARATELY)

Part	Description	Quantity
Α	Chair (THD SKU 1004415329/Model 65-183361 SOLD SEPARATELY)	1
В	Runner	2
C	Cushion (Sold Separately)	1


Remove plastic plugs

- □ Place the chair (A) upside down on a soft surface.
- □ Remove plastic plugs from chair.

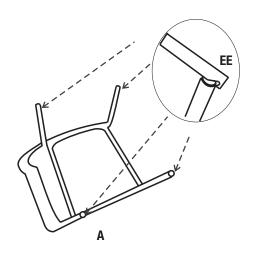


2 Insert compression plugs

 Insert compression plugs (BB) into chair leg tubes with hex wrench (GG) .

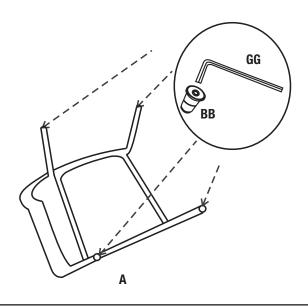


3 Adding the runner to the leg

- □ Place the chair (A) upside down on a soft surface.
- □ Use the bolt (AA) to fix the runner of hole to the leg as below photo shown. Tighten with the hex wrench (CC).

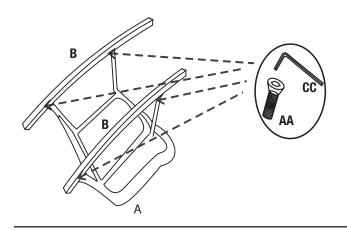

4 Completing the assembly

- Place the chair side up.Place the cushion(C) on the chair.
- □ This chair is now ready for your enjoyment.

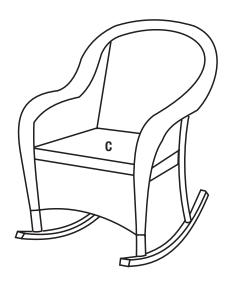

Care and Cleaning

- Before using, wipe with a clean, dry cloth. Do not use bleach or solvents. When not in use, store furniture in a cool, dry place. If your set includes cushions or mesh fabric, they may be cleaned by hand with a mild solution of soap and water.
- Rinse cushion thoroughly and allow to drip dry. Do not machine wash or tumble dry, as cushions may shrink.
- □ Do not use bleach or solvents on fabrics. When cleaning the table top make sure to use a soft, clean cloth that does not bleed color as well.

Care and Maintenance

 \Box Wash the frame with a mild solution of soap and water, rinse with clean water, and dry thoroughly.

Cushions may also be cleaned by hand with a mild solution of soap andwater. Rinse the cushion cover thoroughly and allow to drip dry. The back cushion and pillow should be spot cleaned with a soft cloth. Do not machine wash or tumble dry, as cushions may shrink. Do not use bleach or solvents on fabrics. Never use cleaners that contain acid or abrasive materials.

6

□ Use and operation: To improve the lifespan of this furniture, cover when not use and store in a dry place in the off season.

Service Parts

MODEL TYPE

Part	Description	Quantity
A	Chair (THD SKU 1004415329/Model 65-183361 SOLD SEPARATELY)	1
В	Runner	2
C	Cushion (Sold Separately)	1

7

HAMPTON BAY

Questions, problems, missing parts? Before returning to the store, call Hampton Bay Customer Service 8 a.m. - 7 p.m., EST, Monday - Friday, 9 a.m. - 6 p.m., EST, Saturday

1-855-HD-HAMPTON

HAMPTONBAY.COM

Retain this manual for future use.