


KID'S ART EASEL

USER MANUAL

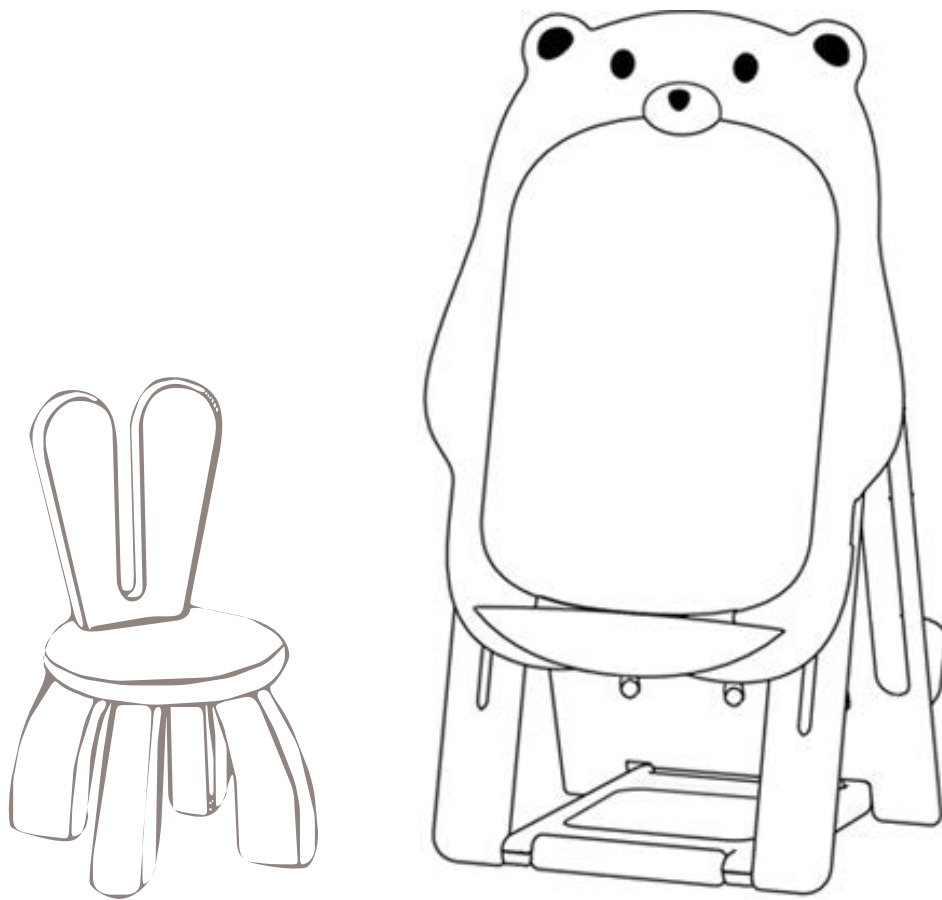

READ AND SAVE THIS INSTRUCTION FOR FUTURE USE

SAFETY & WARNINGS

Read these instructions carefully and retain them for future use. If this product is passed to a third party, then these instructions must be included.

When using the product, basic safety precautions should always be followed to reduce the risk of injury including the following:

- Adult assembly required.
- Ensure no missing parts before assembly.
- During assembly children should be kept away from the product due to possible risk of injury.
- Keep all hardware parts away from children.
- This product is intended for indoor/outdoor domestic family use only.
- Place on a flat, clean floor. Do not place on uneven ground, slope or in water.
- Dispose plastic packaging material to avoid any risk of suffocation.
- Regularly check all parts are installed properly and stable before use.

CARE & MAINTENANCE

- Handle with care.
- Use a slightly damp cloth to clean the product. Do not use bleach or use abrasive cleaning material.
- Do not use the product if any of the parts is damaged or missing.


PLEASE DO NOT RETURN TO STORE




**Please do not return this product to the retailer!!
We are able to assist you in ANY way**

If you find that you have any trouble with assembly or missing or damaged parts please contact the seller.

PART LIST

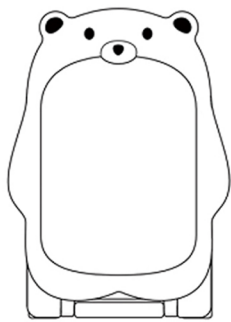

Easel Frame x 1

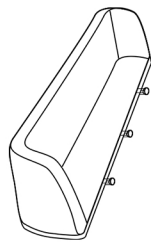

Book Shelf x 2



Pen Bag x 1



Backrest x 1




Seat x 1




Leg x 4


INSTALLATION

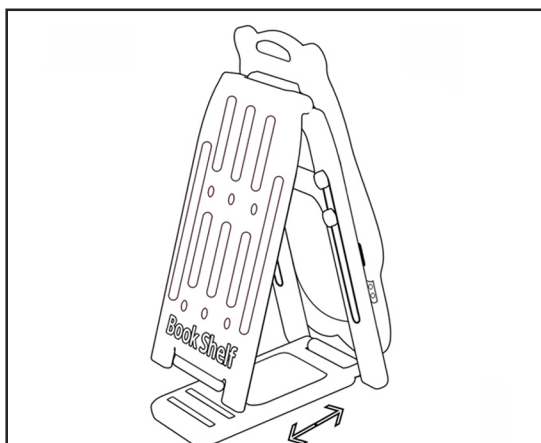

Step 1: Unfold the frame, make sure the foot is fully seated in the groove.

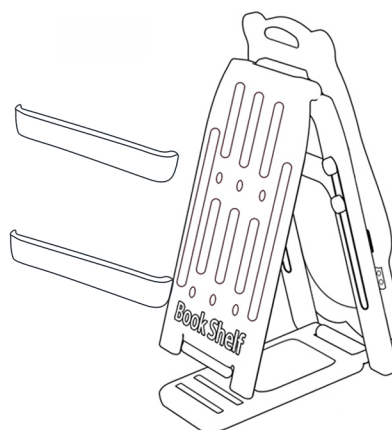

Step 2: Insert the Book Shelf into the holes, and fix it into place.

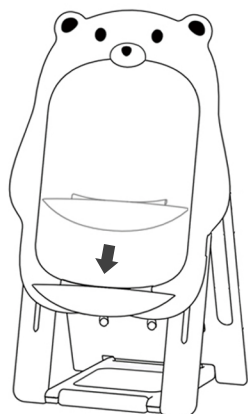

Step 3: Hang the Pen Bag on the frame.



Step 4: Install the Seat together.

Note: Peel off the protective film on the drawing board before use.