


USE AND CARE GUIDE

16.4FT.RGBW LED STRIP LIGHT KIT

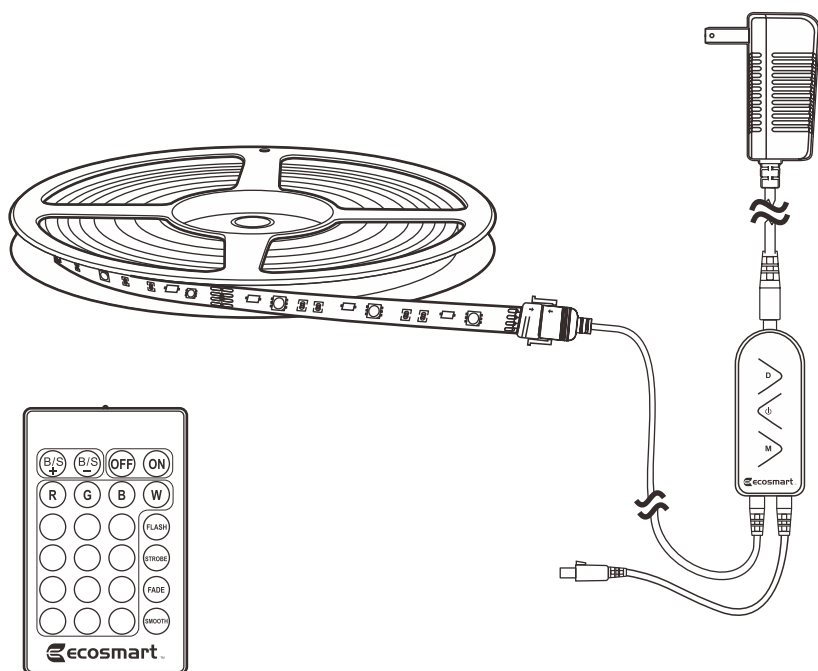

Questions, problems, missing parts? Before returning to the store,
call EcoSmart Customer Service
8 a.m. - 7 p.m., EST, Monday - Friday, 9 a.m. - 6 p.m., EST, Saturday

1-800-910-7164

HOMEDEPOT.COM/ECOSMART

THANK YOU

We appreciate the trust and confidence you have placed in EcoSmart through the purchase of this strip light. We strive to continually create quality products designed to enhance your home. Visit us online to see our full line of products available for your home improvement needs. Thank you for choosing EcoSmart!

Table of Contents

Safety Information	2
Warranty	2
Pre-Installation	3
Installation	4

Remote Control Operation	8
Controller Operation	8
Care and Cleaning	9
Battery Safety	9

Safety Information

Read and understand this entire manual before you attempt to install or operate this product.

- This strip light is intended for indoor use only.
- This strip light is not intended for commercial use.
- Do not expose the strip light to excessive heat or moisture.
- Ensure the connectors are securely fastened before operating the strip light.



WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. Do not damage or crimp the cable. Do not allow the cable to come into contact with sharp objects.



CAUTION: Do not look directly at the strip light when it is illuminated. Eye damage could occur.

NOTICE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTICE: This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Warranty

The manufacturer warrants this fixture to be free from defects in materials and workmanship for a period of three (3) years from date of purchase. This warranty applies only to the original consumer purchaser and only to products used in normal use and service. If this product is found to be defective, the manufacturer's only obligation, and your exclusive remedy, is the repair or replacement of the product at the manufacturer's discretion, provided that the product has not been damaged through misuse, abuse, accident, modifications, alteration, neglect, or mishandling. This warranty shall not apply to any product that is found to have been improperly installed, set-up, or used in any way not in accordance with the instructions supplied with the product. This warranty shall not apply to a failure of the product as a result of an accident, misuse, abuse, negligence, alteration, faulty installation, or any other failure not relating to faulty material or workmanship. This warranty shall not apply to the finish on any portion of the product, such as surface and/or weathering, as this is considered normal wear and tear.

Contact the Customer Service Team at 1-800-910-7164 or visit www.HomeDepot.com/EcoSmart.

 
FCC responsible party name: HOME DEPOT
Address: 2455 PACES FERRY ROAD ATLANTA, GA 30339
Telephone number: 1-800-910-7164

Pre-Installation


PLANNING INSTALLATION

Inspect the product for damage. If any part appears damaged, do not install this product. Contact the Customer Service Team at 1-800-910-7164.

TOOLS REQUIRED (Not Included)



Phillips screwdriver

 

Scissors

 
HARDWARE INCLUDED




NOTE: Hardware not shown to actual size.



AA



BB

 




CC



DD

Part	Description	Quantity
AA	Mounting clips	8
BB	Screw	16
CC	Wire lead connectors (optional use)	2
DD	Strip connectors	2


PACKAGE CONTENTS

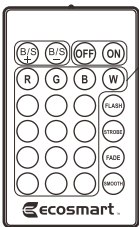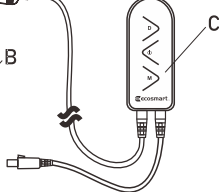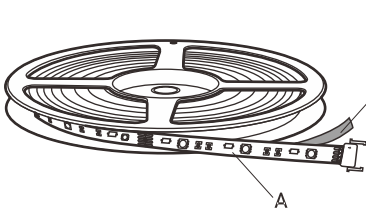




Part	Description	Quantity
A	Strip light	1
B	Adhesive tape	1
C	Inline controller	1
D	Plug-in power supply	1
E	Remote control	1

1 Preparing the strip light

- (optional) Shorten the strip light (A) to the desired length by cutting along for 3.9 inch distance the black lines with the scissors mark.

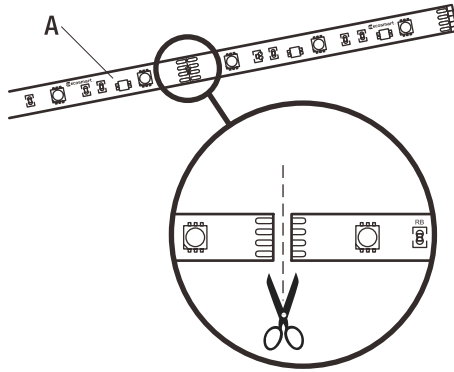

  
- Use the wire lead connector (CC) connect the strip light to make turns and go around corners.
- Use the strip connector (DD) connect the strip light together.

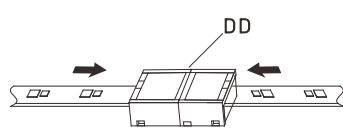

2


How to use included connectors

- Complete steps 5 and 7 to check the device if it works properly before installation
- The wire lead connectors (CC) or the strip connector (DD) are used to join two sections of LED tape.
- Open the lid of the connector opposite the wire.
- (Disconnect product before proceeding) Peel about $\frac{1}{4}$ inch of the paper from the LED strip adhesive backing at the connection point.
- Use a gentle side-to-side motion to slide the strip into the connector, making sure the strip slides under the internal connector contact points.
- Close the connector door firmly.
- Perform a power test to be sure the connection is secure. If the LEDs flicker or do not light, repeat the steps in this guide.

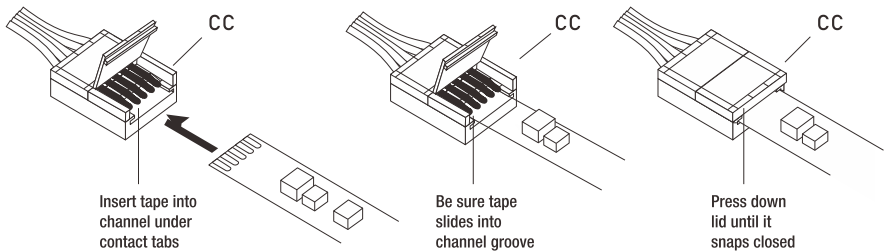


3 Installing the strip light

- Ensure the mounting location is even, clean, and dry.
- Remove the protective film from the back of the strip light (A).
- Press the strip light (A) to the mounting surface and hold in place for a few seconds.

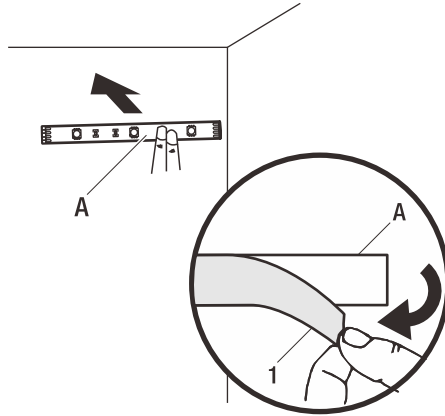


4 Installing the control module

- Align the arrow on the inline controller (C) to the +12V mark on the strip light (A).
- Connect the inline controller (C) to the strip light (A).

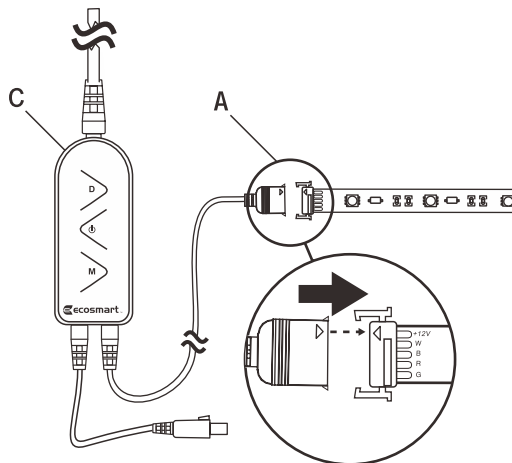


5 Installing the strip light on a hard surface

- Install the strip light (A) to a hard surface using the mounting clips (AA) and screws (BB). Ensure the mounting clips are placed in between LEDs in order not cover the lights.

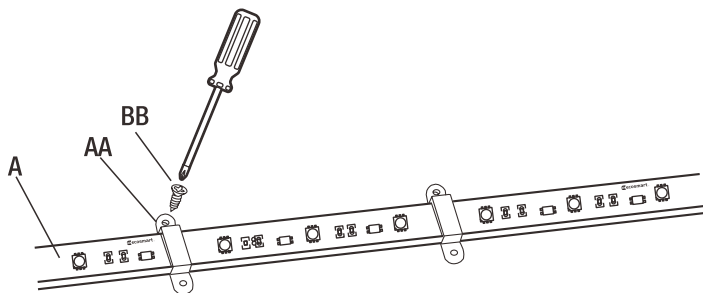


6 Connecting the power

- Connect the plug-in power supply (D) to the inline controller (C)
- Plug the plug-in power supply (D) into a wall receptacle.

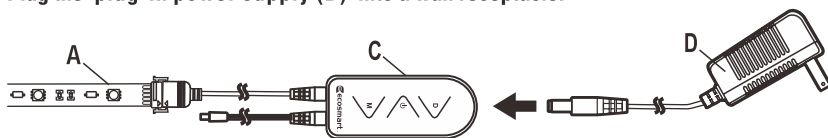

NOTICE: The direct distance of the remote control is up to 5 meters. Please refer the diagram for receiving angle.

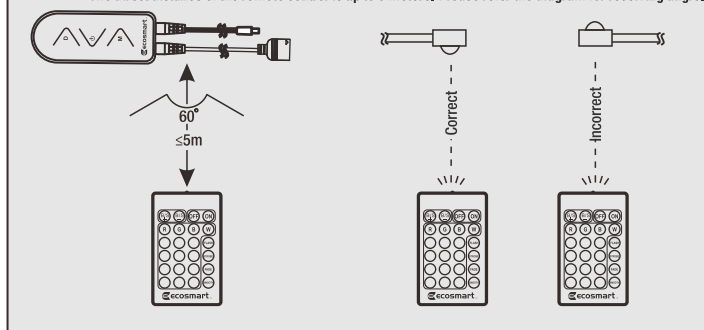


Remote Control Operation

Button	Description
	Switch on the strip light.
	□ Increase the brightness in single color mode. □ Increase the speed in flash, strobe, fade, and smooth modes.
	Flash mode: each color flashes quickly.
	Strobe mode: the color changes every 3 seconds.
	Select from 16 colors, with adjustable brightness.

	Switch off the strip light.
	□ Decrease the brightness in single color mode. □ Decrease the speed in flash, strobe, fade, and smooth modes.
	Fade mode: the color changes slowly.
	Smooth mode: the color changes slightly faster than in fade mode.

Controller Operation

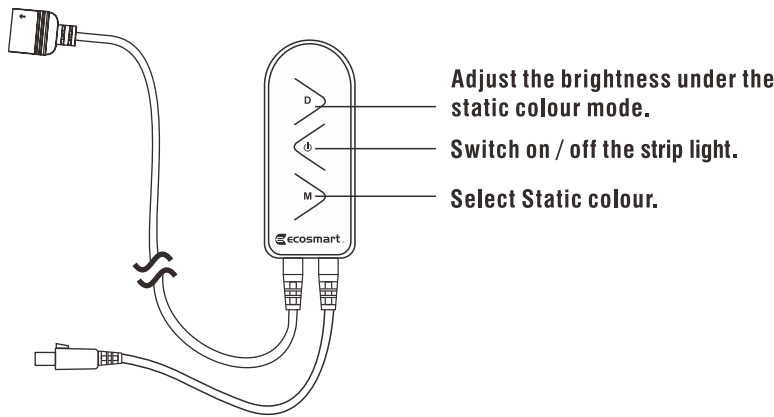

Care and Cleaning

Use a soft, dry cloth to clean the strip light. Do not use alcohol-based cleaners, as this may damage the acrylic surface.

Battery Safety

- Swallowing the batteries may lead to serious injury or death. If swallowed go straight to a medical emergency room.
- Clean batteries and the battery contacts before inserting if necessary with a clean, dry cloth.
- Only use Coin Cell Battery CR2025 3-Volt or CR2032 3-Volt for battery replacement.
- Remove batteries when they are not used for an extended period of time.
- Remove used batteries promptly.
- Keep batteries out of children's reach.
- Do not charge, dismantle, throw into fire, or short circuit the batteries.
- If a battery has leaked, avoid contact with skin, eyes, and mucous membranes. Promptly rinse any affected area with water and seek medical assistance.
- Always use the same type of batteries. Do not mix alkaline, standard (Carbon-Zinc), or rechargeable (Nickel Cadmium) or (Nickel Metal Hydride) batteries.
- Remove and immediately recycle or dispose of used batteries according to local regulations and keep away from children. Do NOT dispose of batteries in household trash or incinerate.
- Even used batteries may cause severe injury or death."
- Call a local poison control center for treatment information.
- Non-rechargeable batteries are not to be recharged.
- Do not force discharge, recharge, disassemble, heat above (manufacturer's specified temperature rating) or incinerate. Doing so may result in injury due to venting, leakage or explosion resulting in chemical burns.
- Ensure the batteries are installed correctly according to polarity (+ and -).
- Do not mix old and new batteries, different brands or types of batteries, such as alkaline, carbon-zinc, or rechargeable batteries.
- Remove and immediately recycle or dispose of batteries from equipment not used for an extended period of time according to local regulations.
- Always completely secure the battery compartment. If the battery compartment does not close securely, stop using the product, remove the batteries, and keep them away from children.



INGESTION HAZARD: This product contains a button cell or coin battery.

⚠ WARNING

- **INGESTION HAZARD:** This product contains a button cell or coin battery.
- **DEATH** or serious injury can occur if ingested.
- A swallowed button cell or coin battery can cause **Internal Chemical Burns** in as little as **2 hours**.
- **KEEP** new and used batteries **OUT OF REACH of CHILDREN**
- **Seek immediate medical attention** if a battery is suspected to be swallowed or inserted inside any part of the body.





Questions, problems, missing parts? Before returning to the store,
call EcoSmart Customer Service
8 a.m. - 7 p.m., EST, Monday-Friday, 9 a.m. - 6 p.m., EST, Saturday

1-800-910-7164

HOMEDEPOT.COM/ECOSMART

Retain this manual for future use.