
USE AND CARE GUIDE

WINDSOR LOUNGE CHAIR

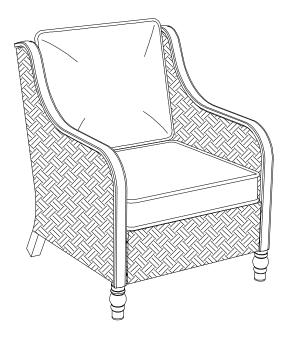

FOR QUICK & EASY ASSEMBLY **FIND 3D INSTRUCTIONS** FOR THIS PRODUCT IN



DOWNLOAD THE FREE APP





Questions, problems, missing parts? Before returning to the store, call Hampton Bay Customer Service 8 a.m. - 7 p.m., EST, Monday-Friday, 9 a.m. - 6 p.m., EST, Saturday

1-800-841-1350

HAMPTONBAY.COM

THANK YOU

Table of Contents

Table of Contents	2
Important Safety Instructions	
Warranty	
Pre-Assembly	
Planning Assembly	

Care and Cleaning	8
Assembly	5
Package Contents	4
Hardware Included	3

Important Safety Instructions

SAVE THESE INSTRUCTIONS

READ ALL INSTRUCTIONS BEFORE USE

To reduce the risk of injury to persons:

- 1. Close supervision is necessary when this furnishing is used by or near children, or disabled persons, if applicable.
- Use this furnishing only for its intended use as described in these instructions. Do not use attachments not recommended by the manufacturer.
- Some parts may contain sharp edges. Wear protective gloves.
- 4. Please count the parts before assembly.
- 5. Set up your furniture properly. Ensure that all parts are assembled properly and fully tightened as per instructions. When placing in the desired location, ensure that all legs are resting on the same surface. You may adjust the leg levelers as required to ensure that the item stands in a level position.

Examine occasionally to ensure that there are no loose parts. If loose parts are found, they must be re-tightened fully before additional use.



DANGER: Keep children and parts away from the assembly area.



WARNING: To avoid destroying the finish, please handle the surface by using a soft cloth instead of your bare hands. Due to the nature of iron, surface oxidation (rusting) will occur if these protective coatings are scratched. We recommend immediate touch-up with rust inhibiting paint (not included).



CAUTION: Do NOT over tighten any of the bolts or nuts.

Warranty

3 YEAR WARRANTY

WHAT IS COVERED

This limited warranty is extended to the original purchaser and applies to defects in materials and workmanship of your item provided the item is maintained with care and used only for personal, residential purposes. The item is warranted to be free from defects in material or workmanship for a period of 3 years.

WHAT IS NOT COVERED

We do not reimburse for transportation of delivery costs, or compensate the individual or any outside party for assembling or disassembling the product.

Contact the Customer Service Team at 1-800-841-1350 or visit www. Hamptonbay.com.

Production Number: 2022200026


Pre-Assembly

PLANNING ASSEMBLY


Before beginning assembly of this product, make sure all parts are present. Compare parts with the Hardware Included and Package Contents lists. If any part is missing or damaged, do not attempt to assemble the product. Contact customer service for replacement parts.

IMPORTANT

This assembly requires one to two person. Approximate assembly time: 0.5 hour.

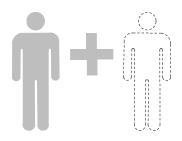

HARDWARE INCLUDED

 




Part	Part Number	Description	Quantity
AA	H100010032	Bolt M6*40 with Washer	10+1
BB	H090030002	Wrench M6	1
CC	H090030009	Rachet Wrench M6	1



PACKAGE CONTENTS

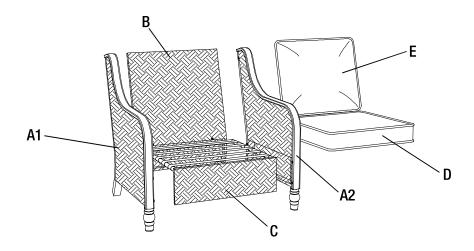

Part	Part Number	Description	Quantity
A1	P00140030701	Armrest (Right)	1
A2	P00140030801	Armrest (Left)	1
В	P00500057401	Back	1
С	P00160023201	Seat	1
D	P001800043	Cushion	1
E	P001700068	Back Cushion	1
F	P005300055	Leveling Feet (Pre-assembled on Front Leg A1/A2)	2
G	P005300056	Leveling Feet (Pre-assembled on Rear Leg A1/A2)	2


Assembly

1 Attaching the Back and Seat

Connect the back (B) with seat (C) using 2 bolts (AA). Use the wrench (BB) or rachet wrench (CC) to loosely attach the bolts. Only attach bolt with approx 3-5 turns (approx 30%).



NOTE: Do not tighten bolts more than 3-5 turns or 30% since this will prevent all holes from lining up.

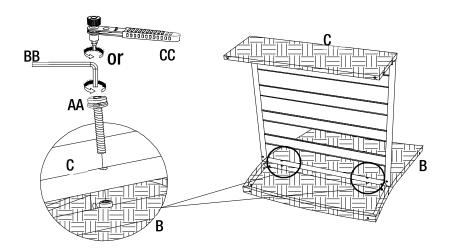


2 Attaching the Armrest (Left)

- □ Insert the bolt on side of back (B) in the hole on the armrest (A2). Move the armrest (A2) backwards and adjust the angle if you find it difficult to insert in the hole.
- Ensure bolt slides down the bottom of hole on armrest (A2). Swivel the armrest (A2) forward to be level with the seat (C).



NOTE: Adjust the angle of the armrest if you find difficult to insert the hole.

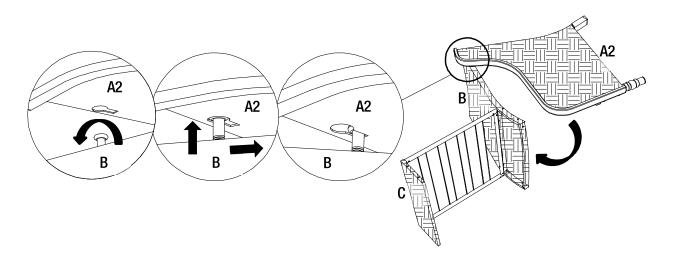


3 Attaching the Armrest (Left)

- Align the back (B) with the mounting holes in the armrest (A2) using bolts (AA). Use the wrench (BB) or rachet wrench (CC) to loosely attach the bolts.
- □ It is recommended to attach bolts in order outlined by 1-4 in illustration. Connect the seat (C) with the armrest (A2) using bolts (AA). Use the wrench (BB) or rachet wrench (CC) to loosely attach the bolts. Only attach bolt with approx 3-5 turns (approx 30%).



NOTE: Do not fully tighten any bolts. If having difficulty aligning holes, loosen bolts already installed and adjust the armrest until holes line up.

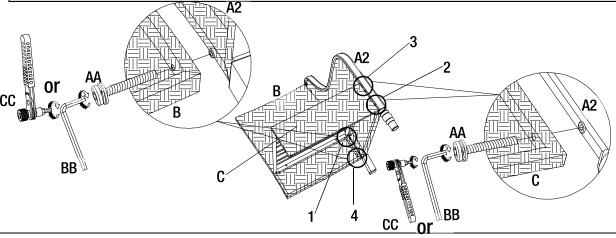


4 Attaching the Armrest (Right)

- □ Insert the bolt on side of back (B) in the hole on the armrest (A1). Move the armrest (A1) backwards and adjust the angle if you find it difficult to insert in the hole.
- □ Ensure bolt slides down to the bottom of the hole in armrest (A1). Swivel the armrest (A1) forward to be level with the seat (C).



NOTE: Adjust the angle of the armrest if you find difficult to insert the hole.

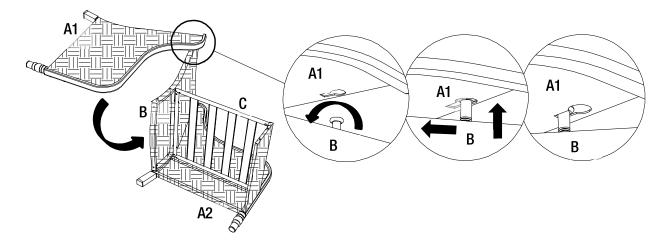


5 Attaching the Armrest (Right)

- Align the back (B) with the mounting holes in the armrest (A1), connect them using bolts (AA). Use the wrench (BB) or rachet wrench (CC) to loosely attach the bolts. Only attach bolt with approx 3-5 turns (approx 30%).
- □ It is recommended to attach bolts in order outlined by 1-4 in illustration. Connect the seat (C) with the armrest (A1) using bolts (AA). Use the wrench (BB) or rachet wrench (CC) to loosely attach the bolts.
- Tighten all the bolts. The tightening process should start with the seat bolts, then tighten one bolt on the right side and one bolt on left side until all bolts are tightened.




NOTE: If having difficulty aligning holes, loosen bolts already installed and adjust the armrest until holes line up.

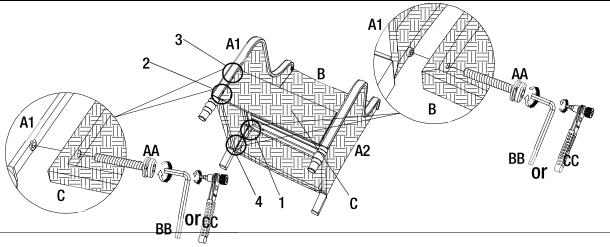

6 Placing the Cushions

Place the cushion (D) and back cushion (E) on the chair to complete the assembly.

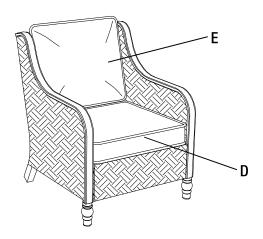

Care and Cleaning

- □ Before using, clean the Chair completely with a soft dry towel.
- Do not use harsh abrasives or cleaners.

Questions, problems, missing parts? Before returning to the store, call Hampton Bay Customer Service 8 a.m. - 7 p.m., EST, Monday-Friday, 9 a.m. - 6 p.m., EST, Saturday

1-800-841-1350

HAMPTONBAY.COM

Retain this manual for future use.

For certification use only

Factory Model# A211004300

USE AND CARE GUIDE

WINDSOR SOFA



Questions, problems, missing parts? Before returning to the store, call Hampton Bay Customer Service 8 a.m. - 7 p.m., EST, Monday-Friday, 9 a.m. - 6 p.m., EST, Saturday

1-800-841-1350

HAMPTONBAY.COM

THANK YOU

Table of Contents

Table of Contents	2
mportant Safety Instructions	
Warranty	
Pre-Assembly	
Planning Assembly	

4
5
9
•

Important Safety Instructions

SAVE THESE INSTRUCTIONS READ ALL INSTRUCTIONS BEFORE USE

To reduce the risk of injury to persons:

- 1. Close supervision is necessary when this furnishing is used by or near children, or disabled persons, if applicable.
- Use this furnishing only for its intended use as described in these instructions. Do not use attachments not recommended by the manufacturer.
- 3. Some parts may contain sharp edges. Wear protective gloves.
- 4. Please count the parts before assembly.
- 5. Set up your furniture properly. Ensure that all parts are assembled properly and fully tightened as per instructions. When placing in the desired location, ensure that all legs are resting on the same surface. You may adjust the leg levelers as required to ensure that the item stands in a level position.

 Examine occasionally to ensure that there are no loose parts.
 If loose parts are found, they must be re-tightened fully before additional use.



DANGER: Keep children and parts away from the assembly area.



WARNING: To avoid destroying the finish, please handle the surface by using a soft cloth instead of your bare hands. Due to the nature of iron, surface oxidation (rusting) will occur if these protective coatings are scratched. We recommend immediate touch-up with rust inhibiting paint (not included).



CAUTION: Do NOT over tighten any of the bolts or nuts.

Warranty

3 YEAR WARRANTY

WHAT IS COVERED

This limited warranty is extended to the original purchaser and applies to defects in materials and workmanship of your item provided the item is maintained with care and used only for personal, residential purposes. The item is warranted to be free from defects in material or workmanship for a period of 3 years.

WHAT IS NOT COVERED

We do not reimburse for transportation of delivery costs, or compensate the individual or any outside party for assembling or disassembling the product.

Contact the Customer Service Team at 1-800-841-1350 or visit www.Hamptonbay.com.

Production Number: 2022200026


Pre-Assembly

PLANNING ASSEMBLY


Before beginning assembly of this product, make sure all parts are present. Compare parts with the Hardware Included and Package Contents lists. If any part is missing or damaged, do not attempt to assemble the product. Contact customer service for replacement parts.


IMPORTANT

This assembly requires one to two person. Approximate assembly time: 0.5 hour.

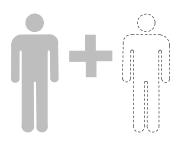

HARDWARE INCLUDED

 


 

Part	Part Number	Description	Quantity
AA	H100010032	Bolt M6*40 with Washer	12+1
BB	H100010006	Bolt M6*15 with Washer	4+1
CC	H090030002	Wrench M6	1
DD	H090030009	Rachet Wrench M6	1



PACKAGE CONTENTS

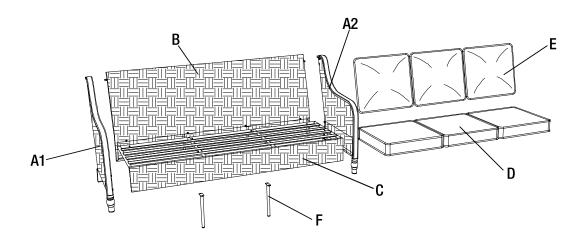


Part	Part Number	Description	Quantity
A1	P00140030701	Armrest (Right)	1
A2	P00140030801	Armrest (Left)	1
В	P00500057501	Back	1
С	P00160023301	Seat	1
D	P001800043	Cushion	3
E	P001700068	Back Cushion	3
F	P005400170	Support Leg	2
G	P005300055	Leveling Feet (Pre-assembled on Front Leg A1/A2)	2
Н	P005300056	Leveling Feet (Pre-assembled on Rear Leg A1/A2)	2
I	P005300058	Leveling Feet (Pre-assembled on F)	2

Assembly


Attaching the Back and Seat


□ Connect the back (B) with seat (C) using bolts (AA). Use the wrench (CC) or rachet wrench (DD) to loosely attach the bolts.

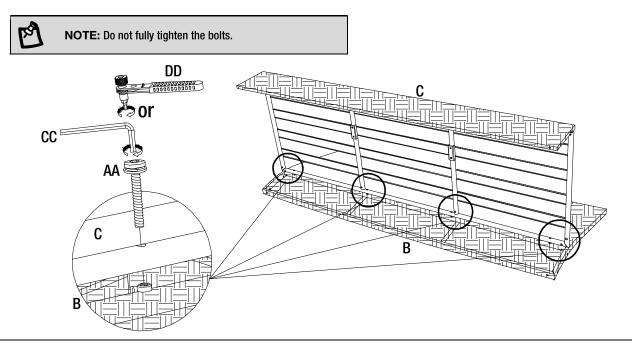

2 Attaching the Armrest (Left)

 - □ Insert the bolt on side of back (B) in the hole on the armrest (A2). Move the armrest (A2) backwards and adjust the angle if you find it difficult to insert the hole.
- Ensure bolt slide down to the bottom of the hole in armrest (A2). Swivel the armrest (A2) forward to be level with the seat (C).



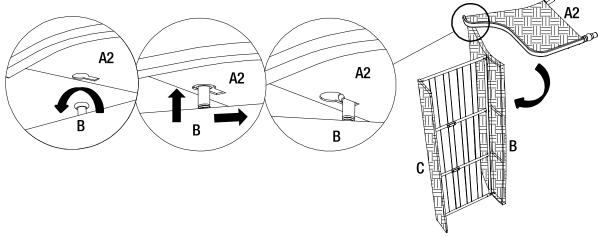


3 Attaching the Armrest (Left)

- Align the back (B) with the mounting holes in the armrest (A2), and connect them using bolts (AA). Use the wrench (CC) or rachet wrench (DD) to loosely attach the bolts.
- It is recommended to attach bolts in order outlined by 1-4 in illustration. Connect the seat (C) with the armrest (A2) using bolts (AA). Use the wrench (CC) or rachet wrench (DD) to loosely attach the bolts.




NOTE: Do not fully tighten any bolts. If having difficulty aligning holes, loosen bolts already installed and adjust the armrest until holes line up.

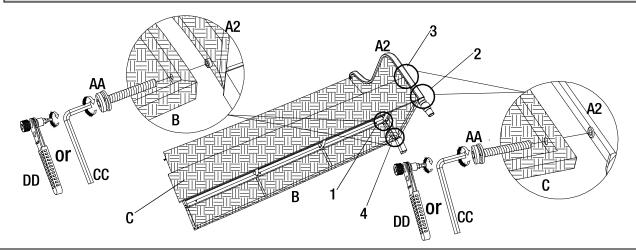

4 Attaching the Armrest (Right)

- Insert bolt on side of back (B) in the hole on the armrest (A1). Move the armrest (A1) backwards and adjust the angle if you find it difficult it to insert in the hole.
- Ensure bolt slides down to the bottom of the hole in armrest (A1). Swivel the armrest (A1) forward to be level with the seat (C).

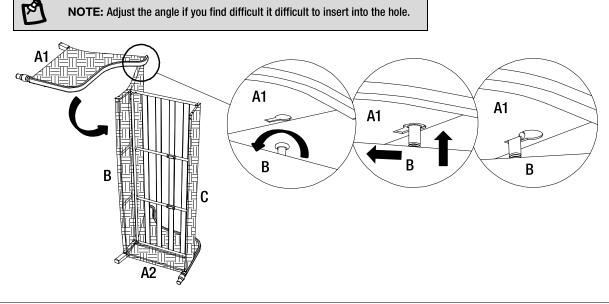


5 Attaching the Armrest (Right)

- Align the back (B) with the mounting holes in the armrest (A1) using bolts (AA). Use the wrench (CC) or rachet wrench (DD) to loosely attach the bolts.
- □ It is recommended to attach bolts in order outlined by 1-4 in illustration. Connect the seat (C) with the armrest (A1) using bolts (AA). Use the wrench (CC) or rachet wrench (DD) to fully attach the all bolts.



NOTE: Do not fully tighten any bolts. If having difficulty aligning holes, loosen bolts already installed and adjust the armrest until holes line up.

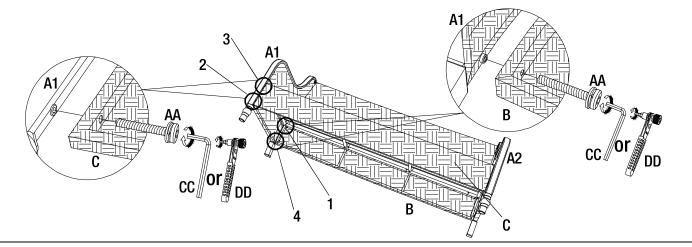


6 Attaching the Legs

Attach the support legs (F) to the assembly seat (C) using bolts (BB). Use the wrench (CC) or rachet wrench (DD) to fully tighten the all bolts.




NOTE: To preserve the finish, place parts on a soft surface.

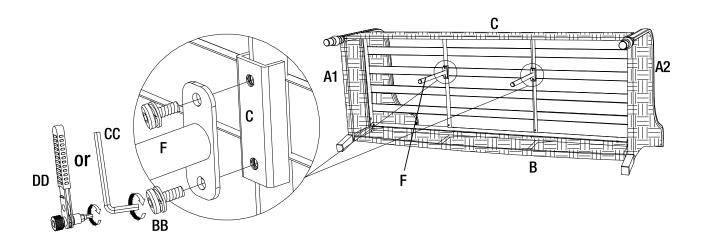

7 Placing the Cushions

Place the cushion (D) and back cushion (E) on the sofa to complete the assembly.

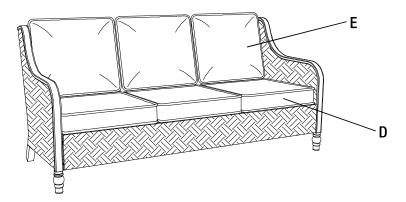

Care and Cleaning

- □ Before using, clean the Sofa completely with a soft dry towel.
- $\ \square$ Do not use harsh abrasives or cleaners.
- □ When not in use, store in a cool, dry area.

Questions, problems, missing parts? Before returning to the store, call Hampton Bay Customer Service 8 a.m. - 7 p.m., EST, Monday-Friday, 9 a.m. - 6 p.m., EST, Saturday

1-800-841-1350

HAMPTONBAY.COM


Retain this manual for future use.

For certification use only

Factory Model# A211004200

USE AND CARE GUIDE

WINDSOR OTTOMAN

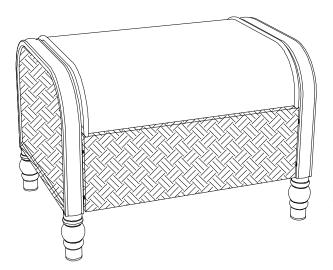

FOR QUICK & EASY ASSEMBLY FIND 3D INSTRUCTIONS FOR THIS PRODUCT IN



DOWNLOAD THE FREE APP





Questions, problems, missing parts? Before returning to the store, call Hampton Bay Customer Service 8 a.m. - 7 p.m., EST, Monday-Friday, 9 a.m. - 6 p.m., EST, Saturday

1-800-841-1350

HAMPTONBAY.COM

THANK YOU

Table of Contents

Table of Contents	2
Important Safety Instructions	
Warranty	
Pre-Assembly	
Planning Assembly	

Hardware Included	3
Package Contents	4
Assembly	5
Care and Cleaning	

Important Safety Instructions

SAVE THESE INSTRUCTIONS

READ ALL INSTRUCTIONS BEFORE USE

To reduce the risk of injury to persons:

- 1. Close supervision is necessary when this furnishing is used by or near children, or disabled persons, if applicable.
- Use this furnishing only for its intended use as described in these instructions. Do not use attachments not recommended by the manufacturer.
- Some parts may contain sharp edges. Wear protective gloves.
- 4. Please count the parts before assembly.
- 5. Set up your furniture properly. Ensure that all parts are assembled properly and fully tightened as per instructions. When placing in the desired location, ensure that all legs are resting on the same surface. You may adjust the leg levelers as required to ensure that the item stands in a level position.

Examine occasionally to ensure that there are no loose parts.If loose parts are found, they must be re-tightened fully before additional use.



DANGER: Keep children and parts away from the assembly area.



WARNING: To avoid destroying the finish, please handle the surface by using a soft cloth instead of your bare hands. Due to the nature of iron, surface oxidation (rusting) will occur if these protective coatings are scratched. We recommend immediate touch-up with rust inhibiting paint (not included).



CAUTION: Do NOT over tighten any of the bolts or nuts.

Warranty

3 YEAR WARRANTY

WHAT IS COVERED

This limited warranty is extended to the original purchaser and applies to defects in materials and workmanship of your item provided the item is maintained with care and used only for personal, residential purposes. The item is warranted to be free from defects in material or workmanship for a period of 3 years.

WHAT IS NOT COVERED

We do not reimburse for transportation of delivery costs, or compensate the individual or any outside party for assembling or disassembling the product.

Contact the Customer Service Team at 1-800-841-1350 or visit www. Hamptonbay.com.

Production Number: 2022200026


Pre-Assembly

PLANNING ASSEMBLY


Before beginning assembly of this product, make sure all parts are present. Compare parts with the Hardware Included and Package Contents lists. If any part is missing or damaged, do not attempt to assemble the product. Contact customer service for replacement parts.

IMPORTANT

This assembly requires one person. Approximate assembly time: 15~20 minutes.

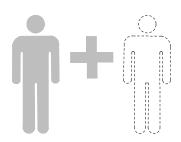

HARDWARE INCLUDED

 




Part	Part Number	Description	Quantity
AA	H100010032	Bolt M6*40 with Washer	12+1
ВВ	H090030002	Wrench M6	1
CC	H090030009	Rachet Wrench M6	1



PACKAGE CONTENTS

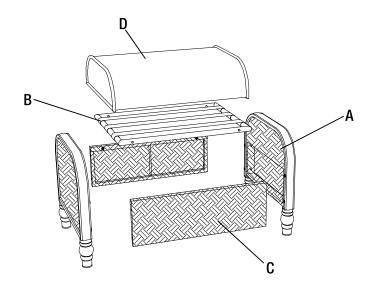


Part	Part Number	Description	Quantity
Α	P00140032101	Side Panel	2
В	P001600089	Seat	1
С	P00380056801	Front/Back Panel	2
D	P001800045	Cushion	1
Е	P005300055	Leveling Feet (Pre-assembled on A)	4

Assembly

Attaching the Back Panel and Side Panel

□ Connect the back panel (C) and the side panels (A) using bolts (AA). Use the wrench (BB) or rachet wrench (CC) to loosely tighten the bolts.

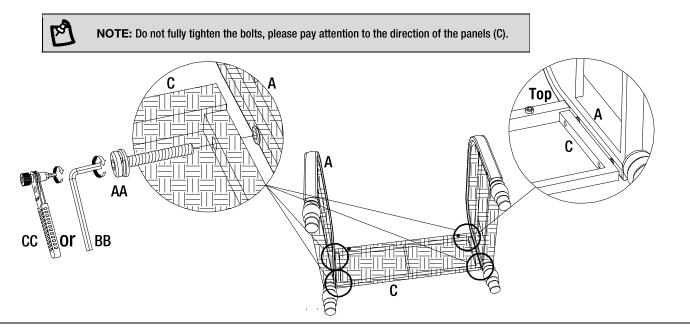


2 Attaching the Front Panel

□ Connect the front panel (C) and the side panels (A) using bolts (AA). Use the wrench (BB) or rachet wrench (CC) to loosely tighten the bolts.





NOTE: To preserve the finish, place parts on a soft surface, please pay attention to the direction of the panels (C).

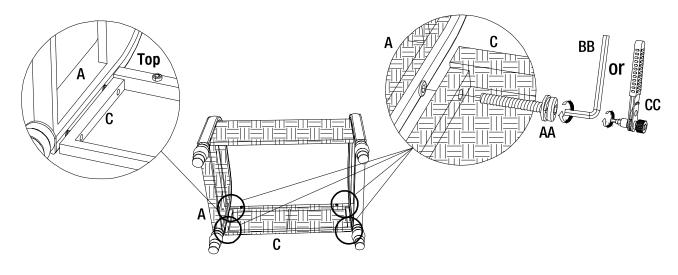

3 Attaching the Seat

 
- □ Attach the seat (B) to the assembly side panels (C) using bolts (AA).



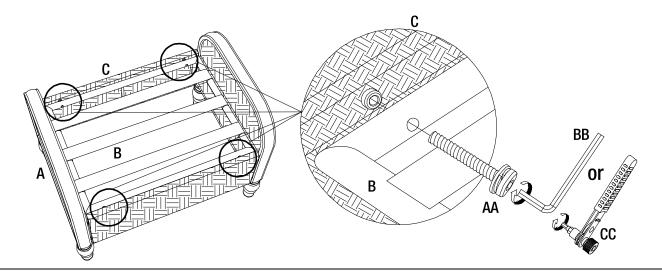

4 Placing the Cushion

Place the cushion (D) on the seat to complete the assembly.

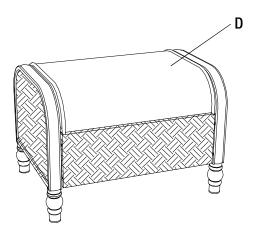

Care and Cleaning

- □ Before using, clean the Ottoman completely with a soft dry towel.
- Do not use harsh abrasives or cleaners.
- $\ \square$ When not in use, store in a cool, dry area.

Questions, problems, missing parts? Before returning to the store, call Hampton Bay Customer Service 8 a.m. - 7 p.m., EST, Monday-Friday, 9 a.m. - 6 p.m., EST, Saturday

1-800-841-1350

HAMPTONBAY.COM

Retain this manual for future use.

For certification use only

Factory Model# A214000100

USE AND CARE GUIDE

WINDSOR CHOW HEIGHT TABLE - BROWN



Questions, problems, missing parts? Before returning to the store, call Hampton Bay Customer Service 8 a.m. - 7 p.m., EST, Monday-Friday, 9 a.m. - 6 p.m., EST, Saturday

1-800-841-1350

HAMPTONBAY.COM

THANK YOU

Table of Contents

Table of Contents	
Important Safety Instructions	
Warranty	
Pre- Assembly	
Planning Assembly	

Care and Cleaning	6
Assembly	5
Package Contents	4
Hardware Included	3

Important Safety Instructions

SAVE THESE INSTRUCTIONS

READ ALL INSTRUCTIONS BEFORE USE

To reduce the risk of injury to persons:

- 1. Close supervision is necessary when this furnishing is used by or near children, or disabled persons, if applicable.
- Use this furnishing only for its intended use as described in these instructions. Do not use attachments not recommended by the manufacturer.
- Some parts may contain sharp edges. Wear protective gloves.
- 4. Please count the parts before assembly.
- 5. Set up your furniture properly. Ensure that all parts are assembled properly and fully tightened as per instructions. When placing in the desired location, ensure that all legs are resting on the same surface. You may adjust the leg levelers as required to ensure that the item stands in a level position.

Examine occasionally to ensure that there are no loose parts.If loose parts are found, they must be re-tightened fully before additional use.



DANGER: Keep children and parts away from the assembly area.



WARNING: To avoid destroying the finish, please handle the surface by using a soft cloth instead of your bare hands. Due to the nature of iron, surface oxidation (rusting) will occur if these protective coatings are scratched. We recommend immediate touch-up with rust inhibiting paint (not included).



CAUTION: Do NOT over tighten any of the bolts or nuts.

Warranty

3 YEAR WARRANTY

WHAT IS COVERED

This limited warranty is extended to the original purchaser and applies to defects in materials and workmanship of your item provided the item is maintained with care and used only for personal, residential purposes. The item is warranted to be free from defects in material or workmanship for a period of 3 years.

WHAT IS NOT COVERED

We do not reimburse for transportation of delivery costs, or compensate the individual or any outside party for assembling or disassembling the product.

Contact the Customer Service Team at 1-800-841-1350 or visit www. Hamptonbay.com.

Production Number: 2022200026


Pre-Assembly

PLANNING ASSEMBLY

Before beginning assembly of this product, make sure all parts are present. Compare parts with the Hardware Included and Package Contents lists. If any part is missing or damaged, do not attempt to assemble the product. Contact customer service for replacement parts.

IMPORTANT

This assembly requires one person. Approximate assembly time: 15~20 minutes.

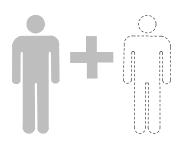

HARDWARE INCLUDED



NOTE: Hardware not shown to actual size.








Part	Part Number	Description	Quantity
AA	H100010006	Bolt M6*15 with Washer	20+2
BB	H090030002	Wrench M6	1
CC	H090030009	Rachet Wrench M6	1



NOTE: 1pc of Rachet Wrench per Set

PACKAGE CONTENTS

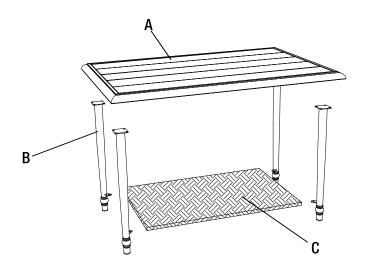


Part	Part Number	Description	Quantity
Α	P002100139	Table top	1
В	P005400171	Leg	4
С	P002200072	Bottom Shelf	1
D	P005300053	Leveling feet (Pre-assembled on B)	4

Assembly


Attaching the Legs

□ Attach the legs (B) to the table top (A) using bolts (AA). Use the wrench (BB) or rachet wrench (CC) to loosely tighten the bolts.

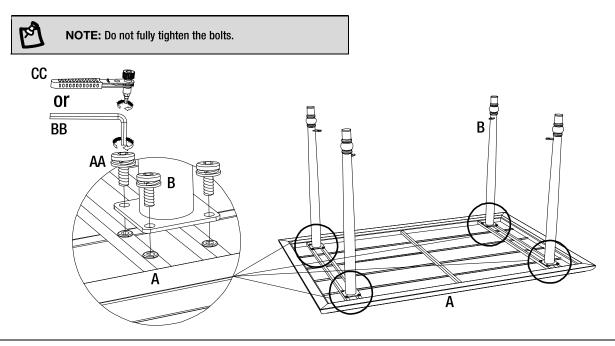

2 Attaching the Bottom Shelf

Attach the bottom shelf (C) to the assembly legs (B) using bolts (AA). Use the wrench (BB) or rachet wrench (CC) to fully tighten the all bolts.

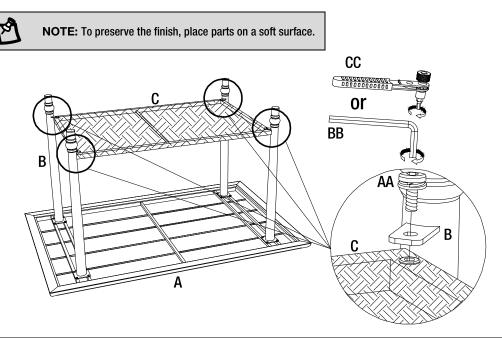

Care and Cleaning

- Before using, clean the Table completely with a soft dry towel.
- $\hfill\Box$ Do not use harsh abrasives or cleaners.
- □ When not in use, store in a cool, dry area.

Questions, problems, missing parts? Before returning to the store, call Hampton Bay Customer Service 8 a.m. - 7 p.m., EST, Monday-Friday, 9 a.m. - 6 p.m., EST, Saturday

1-800-841-1350

HAMPTONBAY.COM

Retain this manual for future use.

For certification use only

Factory Model# A208003600