

BR002-126 BEVERAGE REFRIGERATOR


User Manual

SKU

BR002-126SI-USEH

Model Number

BRU-03

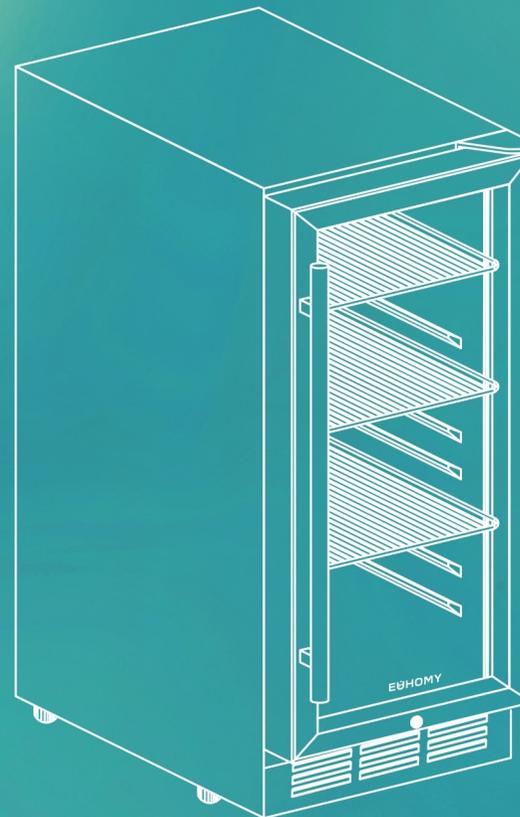

THANK YOU

for purchasing the Euhomy Beverage Refrigerator



**ACTIVATE
YOUR
WARRANTY**

Scan the QR code using a mobile device

<https://euhomy.com/pages/activate-warranty>



RECORD THIS INFORMATION

Model Number BRU-03

Serial Number _____

Date of Purchase _____

Store of Purchase _____

(Keep receipt)

TIP

Check the back or side of the machine for the serial number on the nameplate.

For beverage refrigerators, it's usually on the bottom or side. If you can't find it, don't worry — it won't affect your warranty registration.

CUSTOMER SERVICE



1-833-362-2655(US)



support@euhomy.com



<https://euhomy.com>

JOIN US

 euhomyofficial

 EuhomyOfficial

 Euhomy-global

 euhomy



SCAN HERE to share tips, get support, and connect with fellow enthusiasts!

Contents

Important Safety Instructions	01
Key Components and Structure	05
Control panel and display overview	07
Installation Guide	09
Maintenance	16
FAQs	18
Troubleshooting	20
Specifications	23
Warranty Policy	24

IMPORTANT SAFETY INSTRUCTIONS

 To reduce the risk of fire, electrical shock, or injury when using your appliance, follow these basic precautions:

1. Read all instructions before using the appliance.
2. **DANGER** or **WARNING**: An empty beverage refrigerator can be hazardous for children or small pets. If disposing of the beverage refrigerator, remove all gasket seals, latches, lids, or the entire door from your unused appliance, or take other actions to ensure the beverage refrigerator is harmless.
3. Never allow children to operate, play with, or crawl inside the appliance.
4. Never clean appliance parts with flammable fluids or harsh chemicals. The fumes can create a fire or explosion.
5. **DO NOT** store or use gasoline or any other flammable vapors and liquids in the vicinity of this or any other appliance. The fumes can create a fire or explosion.

SAVE THESE INSTRUCTIONS

6. Keep ventilation openings in the appliance enclosure or in the built-in structure clear of obstruction.
7. **DO NOT** use mechanical devices or other means to accelerate the defrosting process other than those recommended by the manufacturer.
8. **DO NOT** store explosive substances in this appliance, such as aerosol cans with a flammable propellant.
9. **DO NOT** use extension cords or ungrounded (two-prong) adapters.
10. This appliance is intended to be used in households and similar applications such as staff kitchen areas in shops, offices, and other working environments; hotels, motels, and other residential-type environments; bed and breakfast environments; catering and similar non-retail applications.
11. **DO NOT** pull on the power cord when disconnecting the power plug of the beverage refrigerator. Firmly grasp the plug and pull it out from the socket directly.

INSTALLATION OF YOUR APPLIANCE

12.The appliance is designed for freestanding installation.

13.WARNING: **DO NOT** store or install the appliance outdoors.

14.CAUTION: This appliance is designed for storing and cooling beverages or wines. **DO NOT** store perishable food, medicine, or other medical products.

15.Place your appliance on a hard, level floor that is strong enough to support it when fully loaded.

16.To level your appliance, adjust the leveling legs at the bottom of the appliance, if necessary.

17.Allow at least **2 inches (50mm)** of space between the back and sides of the appliance, which allows the proper air circulation to cool the compressor and condenser. We **DO NOT** recommend installing the appliance on a rug or carpet.

18.**DO NOT** install the appliance near an oven or other heating source. Direct sunlight may affect the acrylic coating, and heat sources may increase electrical consumption. For best performance, **DO NOT** install the appliance behind a cabinet door or block the base grille. Extreme cold ambient temperatures may also prevent the appliance from performing properly.

19.Avoid locating the appliance in an area that may be exposed to excessive moisture. WARNING: We **DO NOT** recommend using beverage cabinets outdoors, as this accelerates aging and malfunctions. Avoid direct sunlight exposure if necessary when using outdoors.

20.**DO NOT** use an extension cord with this appliance. However, if you must use an extension cord, it is absolutely necessary that it be a UL-Listed, 3-wire grounding type appliance extension cord having a grounding type plug and outlet and that the electrical rating of the cord is 115 volts and at least 15 amperes.

WARNINGS RELATED TO ELECTRICITY

Use a Properly Grounded Dedicated Outlet: This appliance requires a standard **115V/120V AC ~/60Hz** electrical outlet with a reliable three-prong grounding connection (rated **15A** or more). Have a qualified electrician check the wall outlet and circuit to ensure they are properly grounded.

Dedicated Circuit Required: Always plug the appliance into its own electrical outlet with a matching voltage rating (per the appliance label). **DO NOT** share the outlet with other electrical appliances. This ensures the best performance and prevents overloading house wiring circuits, which could create a fire hazard from overheating.

Handle the Power Cord & Plug Safely:

21. **DO NOT** damage the power cord under any circumstances. Be careful not to damage it when moving the appliance.

22. **DO NOT** plug or unplug power plugs with wet hands.

23. Never unplug the appliance by pulling the power cord. Always grip the plug firmly and pull straight out from the receptacle.

24. Immediately repair or replace all power cords that have become frayed, cracked, abraded, or otherwise damaged. **DO NOT** use a damaged cord.

25. To prevent accidental injury, the cord should be secured behind the appliance and not left exposed or dangling.

26. Voltage Requirements: The beverage refrigerator uses an AC power supply of **115V/60Hz**. If the voltage fluctuation exceeds the range of **115V ±10%**, it can cause accidents or damage the beverage refrigerator.

27. Gas Leak Procedure: In case of leaking gas, turn off the leaking valve and open all doors and windows. **DO NOT** unplug the refrigerator yourself, as it may cause a fire. Contact customer support immediately.

28. No Items On Top: For your safety, **DO NOT** place any electric devices (like microwaves) on top of the beverage refrigerator.

29. Grounded Plug Warning: Improper use of the grounded plug may result in the risk of electrical shock.

WARNINGS RELATED TO USE

30. Make sure there is ample ventilation space surrounding the beverage refrigerator.
31. Be careful not to get your fingers or any dangling accessories caught in the beverage refrigerator door.
32. This beverage refrigerator and its packaging are not intended to be played with or used by children. If a child uses the refrigerator, it must be supervised by an adult to avoid injury.
33. Keep the beverage refrigerator away from moist, damp or humid environments and situations so as not to damage the electrical insulation.
34. **DO NOT** use the base, beverage refrigerator door, etc., as pedal or support.
35. **DO NOT** place heavy objects on top of the beverage refrigerator to prevent accidental damage or injury.


WARNINGS RELATED TO PLACING ITEMS

36. **DO NOT** put flammable, explosive, volatile, or highly corrosive items in the beverage refrigerator to prevent damage to the product or fire accidents.
37. **DO NOT** place flammable items near the beverage refrigerator to avoid fires. **DO NOT** cover or close ventilation and exhaust holes.



KEY COMPONENTS AND STRUCTURE

- ① Glass Door
- ② Hinge
- ③ Gasket
- ④ Control Panel
- ⑤ Shelf
- ⑥ Lock
- ⑦ Air Outlet
- ⑧ Leveling Legs (adjustable)
- ⑨ Drip Tray

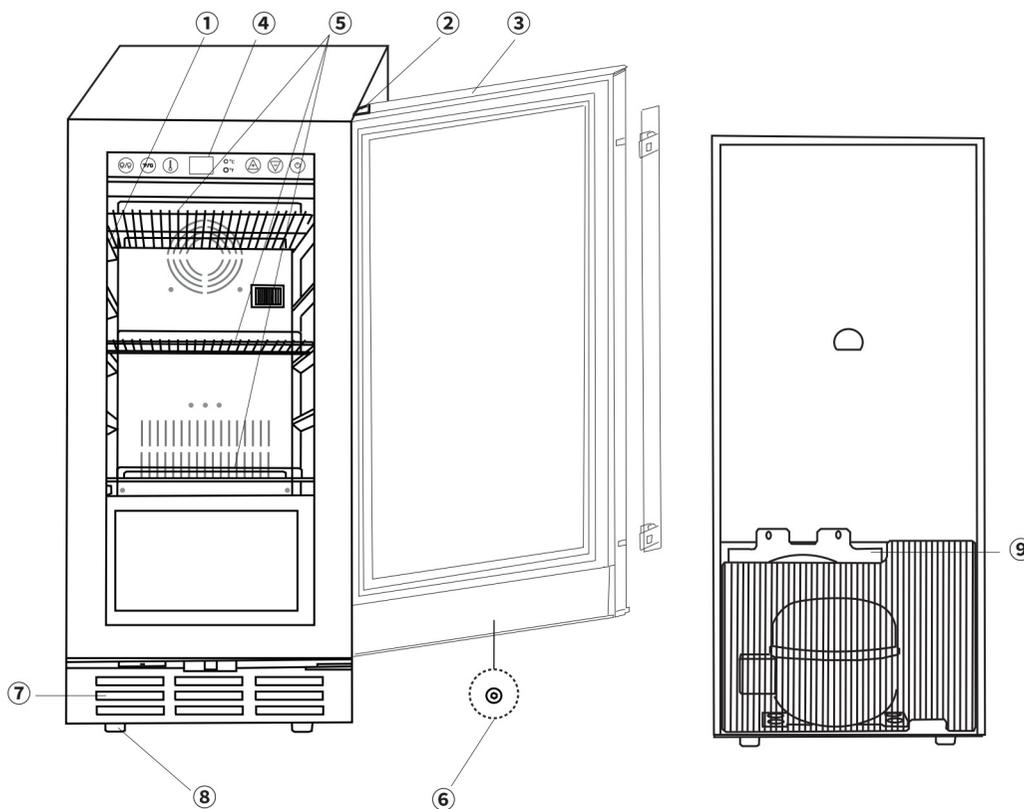

Accessories

2 x Keys

6 x Black Plastic Plugs (used to block the screw holes)

3 x Phillips Screws

2 x Extra Leveling Legs


1 x Upper Hinge

1 x Lower Hinge


1 x Stainless Steel Handle



3 x Phillips Screws

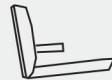

1 x Lower Hinge

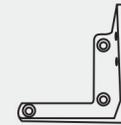

1 x Upper Hinge



1 x Stainless Steel Handle



2 x Extra Leveling Legs




6 x Black Plastic Plugs



2 x Keys

CONTROL PANEL AND DISPLAY OVERVIEW

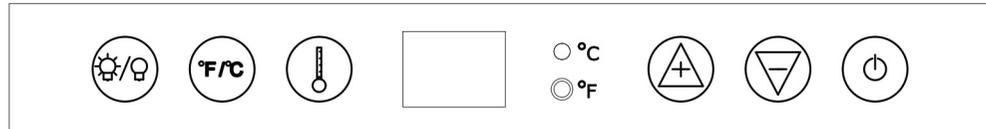

" " Button

Press once to turn on the machine when it is off.
Press and hold for 3 seconds to turn off the machine.

" " and " " Buttons

Use the  and  buttons to set the desired temperature between the range of 3°C-18°C (37°F-65°F).

" " Button

Press to begin adjusting the temperature.

" " Button

Press to toggle the temperature display between Celsius and Fahrenheit.

" " Button

Press once to turn the interior light **ON** or **OFF**.

Door Lock

This beverage refrigerator is equipped with a lock and key system.
The keys are included in the plastic bag with the Instruction Manual.
To **lock** the door: Insert the key into the lock and turn it **clockwise** until the metal pin is fully engaged.

To unlock the door: Turn the key counterclockwise and open the door.
After use, **remove the key and store it in a safe place.**

Light

When the light is off, it will automatically turn on when the door is opened, and it will turn off automatically when the door is closed.

Tips

When first loading the beverage refrigerator to full capacity, we recommend the following steps to effectively cool a large number of beverages.

1. Use the Adjustable Thermostat Control to set the temperature you want.
2. Allow the beverage refrigerator to cool for a minimum of two hours.
3. Load the beverages.
4. After initially filling with beverages, the internal temperature will rise as indicated on the display.
5. Once the beverage refrigerator has cooled the beverages to the temperature you set, select a desired beverage refrigerator internal temperature using the Adjustable Thermostat Control.
6. Allow several hours for the beverage refrigerator to cool to the desired lower temperature.

Note: Temperature variations inside the unit are normal. Areas near the door may be slightly warmer than the interior..

INSTALLATION GUIDE

1. Setup the Beverage Refrigerator

A. Unpack and Inspect

Remove all exterior and interior packaging. Confirm all accessories are included: instruction manual, keys, black plastic plugs, Phillips screws, extra leveling legs, upper hinge, lower hinge, stainless steel handle, etc. If anything is missing, contact our customer service. (email support@euhomy.com or call us at +1-833-362-2655(US)).

B. Prepare the Beverage Refrigerator

Remove any tape securing the door, inner cabinet. Clean the inner cabinet and door with a damp cloth.

C. Position the Beverage Refrigerator

The beverage refrigerator should be placed in a dry, well-ventilated area with convenient access for daily use.

DO NOT install the appliance where the temperature will go below **10°C (50°F)** or **above 32°C (90°F)** because it will not maintain proper temperatures. Be sure to install your beverage refrigerator on a floor strong enough to support it when it is fully loaded. Ensure a clearance of at least 5 cm (2 inches) between the left/right sides and the wall.

D. Allow Refrigerant to Settle

If the unit was tipped during shipping or transportation, let it sit up right for 24 hours to allow the refrigerant to settle before plugging it in.

E. Plug Accessibility

Position the appliance so that the plug is easily accessible.

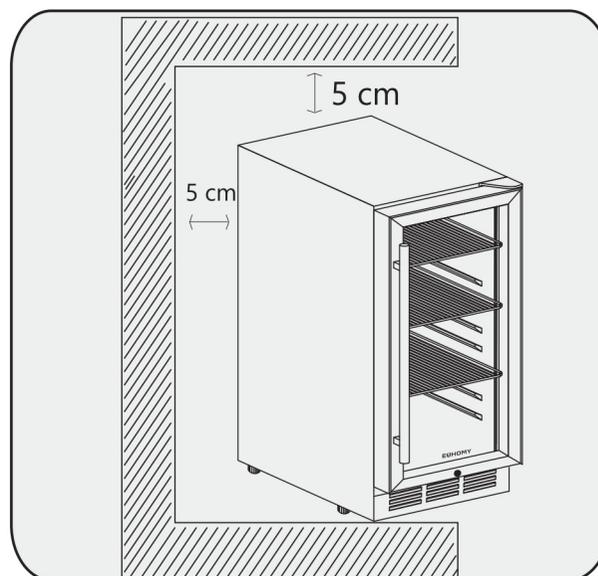


Fig4.1

2. Install Stainless Steel Handle

A. As illustrated in Figure 4.2.1, extract the gasket from the handle installation area. The gasket can be easily removed manually without the need for tools.

B. Align the handle with the pre-installed screws on the door frame. Tighten the screws with a screwdriver until the handle is securely fastened to the door frame, as depicted in Figure 4.2.2. (Avoid over-tightening to prevent damage to the handle assembly).

C. Reinstall the gasket to its original position.

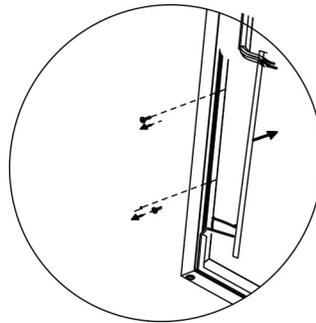


Fig4.2.1


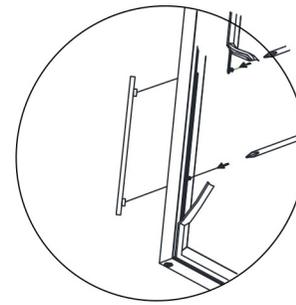


Fig 4.2.2

3.Reverse the Door Swing

The beverage refrigerator is shipped with the door hinge brackets attached on the right side.
The door may be reversed to allow opening from the left side.

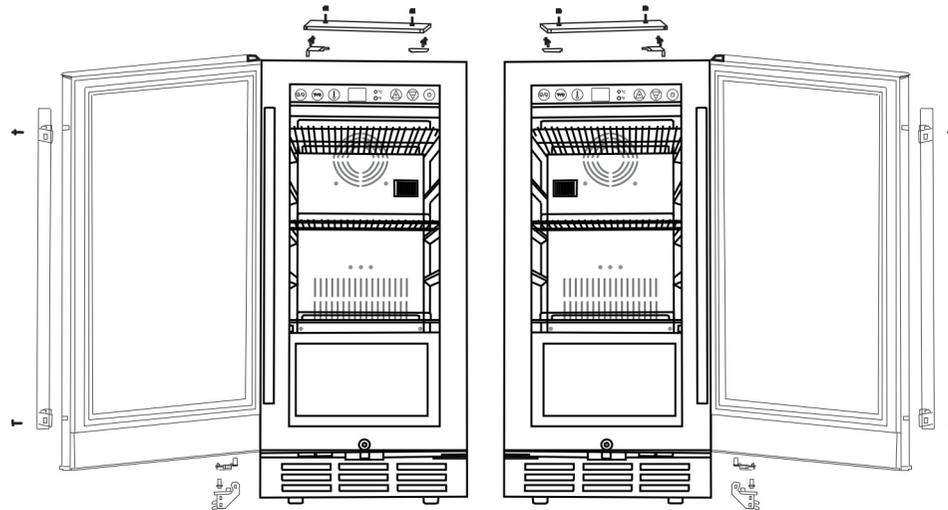

A. Unplug the Power Cord: Before starting door reversal, ensure the unit is unplugged.

B. Remove Plugs: Use a sharp implement to lever out the plugs (there are three on the door frame, both at the top and bottom, and another one on the door). If the plastic plugs were broken, disregard the broken plastic plugs. The holes to move the hinges are already pre-drilled.

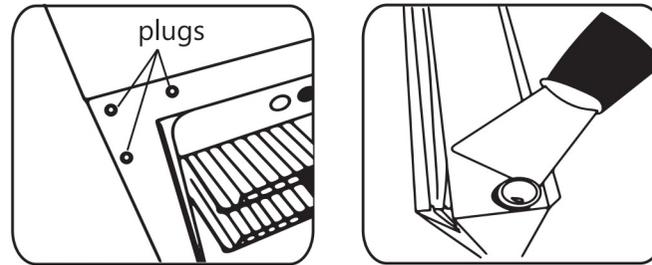


Fig4.3.2

Note: The following instructions describe the reversal installation step-by-step as illustrated in items C-F (please see the picture illustrations to ensure correctness.)

C. Take Off the Door

Please commence disassembly solely from the bottom of the door following below steps:

1) Lay the beverage cabinet flat or tilted with the door facing upward to change its opening direction.

2) Use a hexagonal screwdriver to remove the two screws connecting the door, as shown in the figure 4.3.3 (be cautious not to lose the metal anti-slip washers in between).

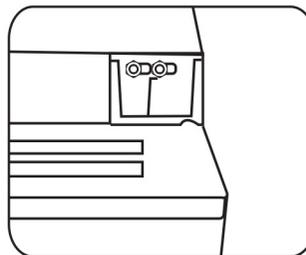


Fig 4.3.3

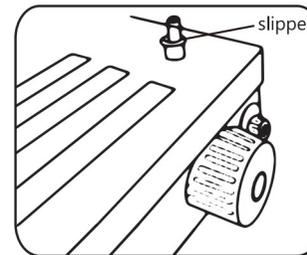


Fig4.3.4

3) Lift slightly as depicted in the illustration to extract the connecting piece between the door and the hinges (i.e., lift from the hinge pin.)

Note: Ensure the preservation of the connecting piece under the door and hinges, for they will be required for subsequent steps.

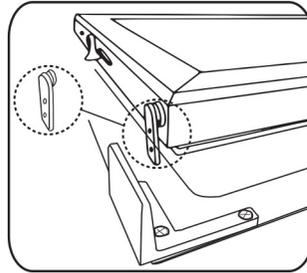


Fig 4.3.5

4) Tilt the door (as shown in the figure 4.2.6) slightly to detach it.

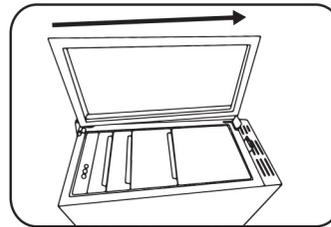


Fig 4.3.6

D. Install the Door on the Opposite Side:

a. Use a Phillips screwdriver to disassemble the hinge brackets from the machine (save the removed screws for the next step).

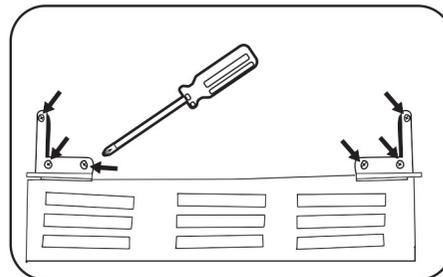


Fig 4.3.7

b.Utilize the screws removed earlier to affix the left hinge brackets found in the accessories onto the door frame of the opposite side of the machine.

c.Transfer the saved the connecting piece(shown in the Fig4.2.5) to the underside of the door on the opposite side.

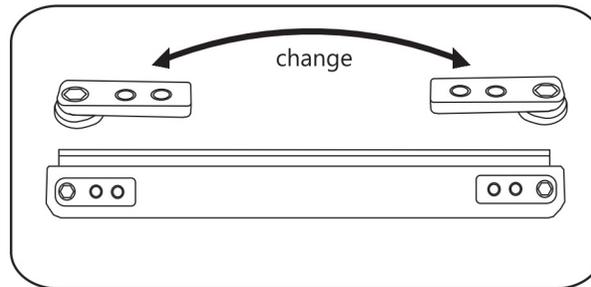


Fig 4.3.8

d.Incline the door and insert it onto the hinge bracket above the machine.

e.Proceed to move the lower part of the door into the hinge bracket pin.

f.Secure the two hex screws for the lower hinge bracket, ensuring not to lose the intermediary metal anti-slip washers.

E.Insert the plugs removed in the second step into the holes on the side from which the door was removed.

F.Settle Down the Refrigerant: Wait at least **24 hours** before plugging in the refrigerator to allow the refrigerant to settle down. Then plug in the unit.

MAINTENANCE

Disconnecting the beverage refrigerator

Unplug the power plug from the socket to disconnect the beverage refrigerator.

Shelves

To remove the shelves from the track, pull each shelf out to the shelf post, as shown in figure 5.1. Lift it up again, then slowly pull the shelf out, as shown in figure 5.2.

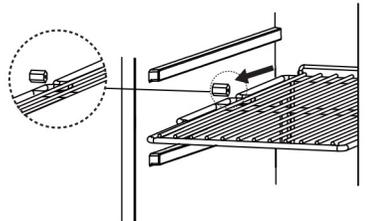


fig 5.1

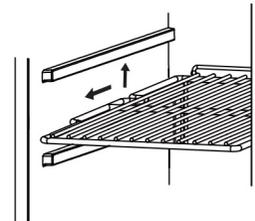


fig 5.2

Defrost the beverage refrigerator

1. Turn off the machine using the button and stop the compressor, unplug the power cord to melt the frost layer. (Never use mechanical devices or methods not recommended by the manufacturer to accelerate defrosting.)
2. Allow the frost to melt on its own, making sure that the internal drain is not blocked.
3. During this time, the melted frost will flow through the internal drain pipe into the water collection tray on top of the compressor. The heat of the compressor will evaporate the liquid (if the drip tray is overfilled, it will need to be cleaned manually)
4. Clean the interior with warm water and a soft cloth, wipe dry thoroughly, and reset the temperature and cool for 2 hours.
You can now put your beverages back into the beverage refrigerator.

Cleaning your beverage refrigerator

Dusting behind the beverage refrigerator and on the surrounding floor area will improve the cooling effect and save energy. The interior of the beverage refrigerator should be cleaned to avoid any odors. Follow the cleaning procedure below:

1. Unplug the beverage refrigerator and empty the contents from the beverage cabinet.
2. Create a cleansing mixture comprising 3-4 tablespoons of baking soda dissolved in warm water.
3. Moisten a sponge or gentle cloth with the solution and use it to clean your beverage refrigerator.
4. Rinse with fresh, warm water, then pat dry with a soft cloth.
5. Maintaining the cleanliness and suppleness of the gaskets is imperative to guarantee an effective seal. Adhere to the general guidelines to clean the door gaskets every three months. A light application of petroleum jelly on the hinge side of the gaskets will preserve their suppleness and ensure a secure seal.
6. Reconnect the beverage refrigerator when it is clean and dry.

Note: **DO NOT** use hard brushes, wire brushes, abrasives, organic solvents, boiling water, acid or alkaline items, as this may damage the surface and interior of the beverage refrigerator.

DO NOT use harsh chemicals, abrasives, ammonia, chlorine bleach, concentrated detergents, solvents, or metal scouring pads. Some of these substances may erode, damage, and/or discolor your beverage refrigerator.

1. Is this Beverage Refrigerator suitable for outdoor use?

This beverage refrigerator is primarily designed for indoor use and is best suited for environments like home kitchens or bars. We recommend keeping it indoors to ensure optimal performance and longevity. If you have any more questions or need further assistance, please don't hesitate to reach out. We're here to help!

2. Why can't the refrigerator maintain a stable temperature?

Due to external factors such as the compressor cycle switch, frequent door openings, high ambient temperatures, or overloading, slight temperature fluctuations are normal. Please ensure good airflow around stored items and avoid overloading to maintain optimal performance. Minor temperature changes help sustain cooling efficiency.

3. Is it possible to change the direction of the door?

The orientation of the Beverage Refrigerator door can be changed. Our manual contains detailed tutorials.

4. Why is the cooling performance of this refrigerator not effective?

Environmental factors, such as ambient temperature, can affect cooling efficiency. Please place the refrigerator in a well-ventilated area, away from direct sunlight, and ensure it's connected to a stable power source. If the cooling performance still significantly differs from expectations, there might be an issue with the unit. Please contact our customer service team for assistance. We're here to help and ensure everything works perfectly for you!

5. Can the shelves inside the refrigerator be moved?

The shelves inside the refrigerator are adjustable and can be moved.

6. How many beverages can the refrigerator hold?

The number of beverages you can store in the refrigerator depends on their size. Typically, it can accommodate a variety of bottles and cans, but the exact number will vary. If you have specific sizes in mind, please feel free to contact our customer service team. We're here to help! Thank you very much.

7. Does it keep food securely cold?

Our Beverage Refrigerator can be set to a temperature range of 37-65°F (3-18°C), ideal for storing various beverages. It offers different temperature settings to keep drinks at their optimal temperature. It can also store some foods that don't require specific temperature settings. However, for items that need freezing, a freezer specifically designed for food storage is necessary.

8. What are the warranty specifications?

We provide a 12-month warranty and lifetime technical support for this refrigerator. If you would like to learn more, please contact our customer service team. Thank you very much.

9. Does this refrigerator need to be installed?

This refrigerator requires no installation. Once you receive it, simply let it sit for 24 hours before plugging it in. This waiting period ensures optimal performance. Of course, you can also choose to add door handles and change the door direction yourself.

10. What is the return and exchange policy for this product?

Our return and exchange policy for this product is designed to ensure your happiness. If there are any quality issues or damage, we will take full responsibility and provide a return label for your convenience. However, if you wish to return the product due to reasons such as no longer needing it or an incorrect purchase, and there are no quality issues, the return shipping cost will need to be covered by you. For more detailed information or assistance, please don't hesitate to reach out to our customer service team. Thank you very much.

For further support, feel free to reach out to the Euhomy support team!

For further support, feel free to reach out to the Euhomy support team!



1-833-362-2655(US)



support@euhomy.com



<https://euhomy.com>


TROUBLESHOOTING

Problem	Possible causes	Solution
The beverage refrigerator does not run.	The beverage refrigerator may not be plugged in, or plug may be loose.	Ensure the beverage refrigerator has been plugged in properly.
	The beverage refrigerator is turned off.	Press  to turn on the beverage refrigerator.
	House fuse blown or tripped circuit breaker.	Check/replace fuse. Reset circuit breaker.
The beverage refrigerator is not cold enough.	External environment may require a higher setting.	Set a colder setting. Allow several hours for the temperature to stabilize.
	The beverage refrigerator has recently been disconnected for a period of time.	It takes 2 hours for the beverage refrigerator to cool down completely.
	Prolonged or frequent door openings.	Open the door less often.
	The door is not closed completely.	Close the door properly.
	The door gasket does not seal properly.	Check the door gasket. Clean or change gasket if necessary.
The compressor turns on and off frequently.	The room temperature is hotter than normal.	It's normal for the beverage refrigerator to work harder under these conditions.
	A large amount of contents has been added to the beverage refrigerator.	A large amount of contents cause the beverage refrigerator to run more until the desired temperature is reached.
	Prolonged or frequent door openings.	Open the door less often.
	The temperature has not been set correctly.	Press either  or  to check the set temperature, and set the temperature properly.
	The door is not closed completely.	Close the door properly.
	The door gasket does not seal properly.	Check the door gasket. Clean or change gasket if necessary.

Problem	Possible cause(s)	Solution
The light does not work.	Not plugged in.	Plug the beverage refrigerator in.
	The circuit breaker tripped or a blown fuse.	Check the breaker and/or fuses.
	The light button is "OFF".	Press  to turn the light ON.
Vibrations.	The beverage refrigerator is not leveled.	Check to assure that the beverage refrigerator is level.
	The bottles are vibrating.	Make sure the bottles don't touch each others
	There is an object under the beverage refrigerator.	Remove the object under the beverage refrigerator.
The beverage refrigerator seems to make too much noise.	The beverage refrigerator is not level	Level the beverage refrigerator.
	Normal noise from the flow of the refrigerant	The rattling noise may come from the flow of the refrigerant, which is normal. As each cycle ends, you may hear gurgling sounds caused by the flow of refrigerant in your beverage refrigerator. Contraction and expansion of the inside walls may cause popping and crackling noises.
The product was damaged upon receipt.	It may have been caused by bumps during transportation.	Please contact support@euhomy.com.
The door will not close properly.	The beverage refrigerator is not level.	Level the beverage refrigerator.
	The door was reversed and not properly installed.	Re-install the door properly.
	The gasket is dirty.	Clean the door gasket.
	The shelves are out of position.	Place the shelves properly.

Problem	Possible cause(s)	Solution
Moisture build up on interior or exterior of the beverage refrigerator.	This is normal during high humidity periods.	Lower the room humidity.
	This is normal in high temperature environment.	Move the beverage refrigerator to a beverage refrigerator place, and avoid heat and sunlight.
	Prolonged or frequent door openings.	Open the door less often.
	The door does not seal completely.	Check door gaskets for proper seal.
Error Code: E1-E2-E3-E4-E7-E8	A sensor has failed.	Contact the customer service.

SPECIFICATIONS

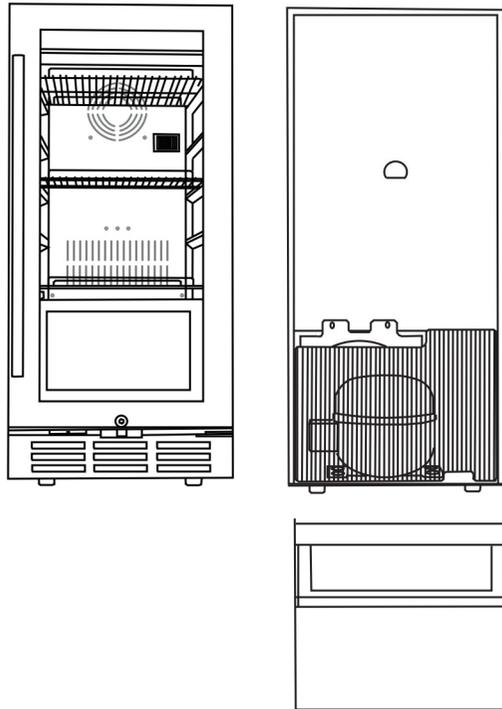

Specification	Value
SKU	BR002-126SI-USEH
MODEL	BRU-03
Refrigerant	R600a 1.52Oz/43g
Voltage/Frequency	115V/60HZ
Product Dimensions	15.1*24.5*33.6 inches
Net/Gross Weight	69.44/83.77 lbs

WARRANTY POLICY

Euhomy is dedicated to delivering top-notch products and outstanding customer service. We back our products 100% and are here to support you every step of the way. To activate your warranty, please Scan the QR code at the beginning or visit <https://euhomy.com>
To request customer service, feel free to contact us anytime!

For further support, feel free to reach out to the Euhomy support team!



1-833-362-2655(US)



support@euhomy.com



<https://euhomy.com>

Business Time: Mon to Fri, 9 AM- 6 PM (ET)

Euhomy 1-Year Limited Warranty

The One-Year (1) Limited Warranty is valid for purchases from this website or official Euhomy purchase channels such as Amazon, TikTok, and Walmart. It covers the original owner and product only and isn't transferable. For purchases made through unauthorized resellers, we recommend you contact them directly.

Euhomy guarantees the unit is free of material and workmanship defects for one year from the purchase date, as long as it's used under normal household conditions and maintained per the User Manual. This is subject to certain conditions and exclusions as follows:

What is covered?

If the original unit or non-wearable parts are found defective, as determined by Euhomy, we will arrange repair or replacement within one year from the purchase date. If you receive a replacement unit, the warranty lasts for the remainder of the original warranty.

What is not covered?

- (a) Normal wear and tear on the unit or parts, as well as any parts lost or damaged due to human factors after delivery; replacement parts are available for purchase. Feel free to contact us using the methods provided below.
- (b) Damage from misuse, mishandling, accidents, or not following the operating instructions.
- (c) Damage caused by exposure to liquids other than water or foreign substances.
- (d) Repairs or modifications not performed by Euhomy.
- (e) Use in commercial settings or non-household environments (except for commercial models).

How to get service?

If your appliance isn't working properly or if you need any assistance, we offer several ways for you to get in touch with us.

You can reach us by calling +1-833-362-2655 (US) or emailing support@euhomy.com directly. For specific product categories, we also offer potential upgrades to enhance your warranty to our VIP service.

Our phone lines are open from Mon to Fri, 8 AM - 4 PM (PT), and we normally respond to emails and forms within 24 business hours. To help us assist you better, we recommend that you register your product online at +1-833-362-2655 (US) and have the appliance with you when you call us.

If you reach out via email, sometimes our emails might end up in your spam folder, so please check there to make sure you don't miss our response. The proof of purchase will be needed when you request a warranty service.

In addition to our one-year warranty, we offer lifetime technical support. After the warranty expires, you can arrange for service at an additional cost.

Feel free to contact us anytime with any issues.

EUHOMY

Live the *cool life*



support@euhomy.com



<https://euhomy.com>



1-833-362-2655(US)