

MULTI-COLOR ALARM CLOCK

 
QUICK START GUIDE




MODEL: W88723V2
DC: 091718

POWER UP

1. Insert the 5 volt power cord into the outlet, then into your Alarm Clock. Optional: Insert 2-AAA batteries for backup.
2. Set time, date, etc.

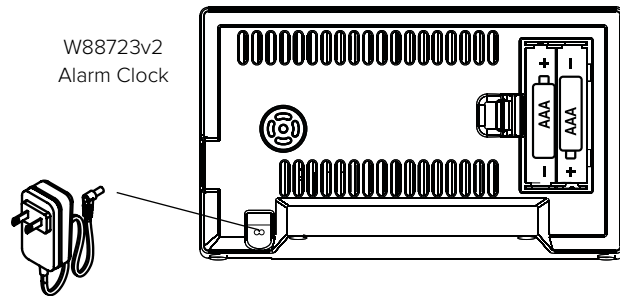

FEATURES

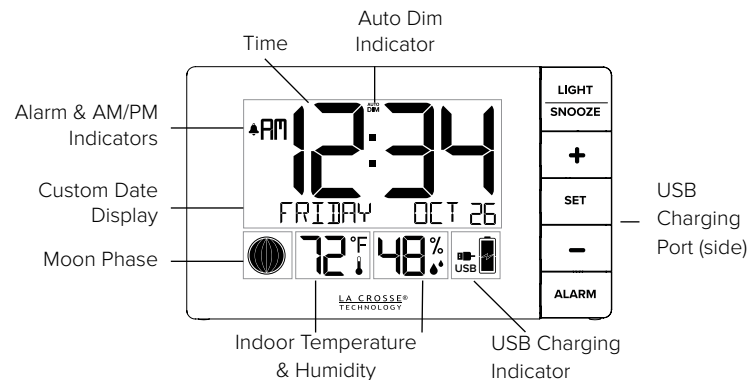 

SETTINGS

1. Hold the SET button to enter the Settings Menu.
2. Use the + or - button to adjust and SET to confirm.
3. Press the LIGHT/SNOOZE button at any time to exit.

Settings menu order:

 
- Language (English, Spanish, French)
- Beep ON/OFF
- 12/24 Hour Time
- Hour
- Minutes
- Year
- Month
- Date
- Fahrenheit/Celsius

Note: When Español or Francais are selected, the instructions will be in the selected language.

Note: Weekday sets as Year, Month and Date are set.

CUSTOM DATE DISPLAY

Press and release the SET button to change your Date Display.

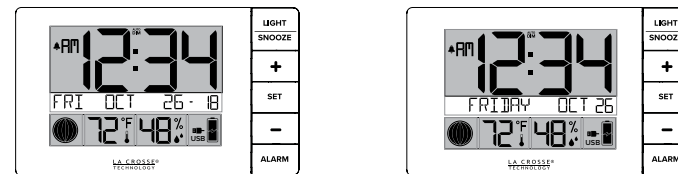

ALARM SETTINGS

1. Hold the ALARM button to enter Alarm Settings.
2. Use the + or - button to adjust values.
3. Press the ALARM button to confirm adjustments and move to the next item. The alarm is active when set.

Alarm Setting Order:

 
- Hour
- Minutes
- Snooze Duration

ACTIVATE/DEACTIVATE ALARM

- Press the ALARM button once to view alarm time.
- While alarm time is showing, press the ALARM button to activate or deactivate alarm.
- When active, the alarm bell will show, and will disappear when deactivated. 🔔

SNOOZE

- When alarm sounds, press LIGHT/SNOOZE button to stop the alarm and activate snooze function. SNOOZE - duration will show in date area. Alarm Icon will flash.
- During snooze count down, press any button except for LIGHT/SNOOZE to exit snooze count down
- Snooze may be repeated.

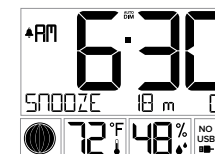


ADJUSTABLE BACKLIGHT

- Press and release the LIGHT/SNOOZE button to adjust the backlight 5 levels of intensity. OFF | 1.5% | 20% | 50% | 100%.

AUTO DIM BACKLIGHT

 1. Hold the LIGHT/SNOOZE button to enter the Auto Dim settings.
2. Use the + or - button to turn the Auto Dim feature ON or OFF. Press the LIGHT/SNOOZE button to confirm.
3. If ON was selected, START TIME will flash on screen. Use the + or - buttons to adjust your Auto Dimmer's starting hour. Press the LIGHT/SNOOZE button to confirm.
4. STOP TIME will flash. Use the + or - buttons to adjust your Auto Dimmer's ending hour. Press the LIGHT/SNOOZE button to confirm and exit.

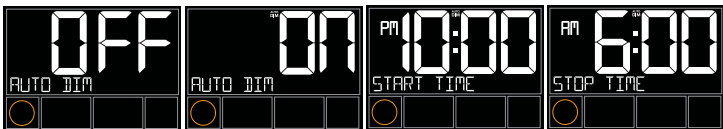

LOW BATTERY INDICATOR

- The Low Battery Indicator will show below the colon when the batteries need to be replaced in the clock.

MOON PHASE

The 12 Moon Phase icons are based on the lunar calendar and will adjust according to the year, month, and date you have set.



USB CHARGING PORT

There is a 1 Amp USB charging port on the side of your clock.

- Connect your external device's USB charging cable (not included) to the USB charging port. CHARGING will show for 3 seconds. The USB Charging Indicator will show.
- Charging times will vary.
- USB Power Output: 1A maximum current.
- Charge 1A devices or devices that are self-regulating.



WE'RE HERE TO HELP!

If you require additional support, call our friendly customer support team based out of La Crosse, Wisconsin.

Phone: 1.608.782.1610

Or fill out our online support request form here:
bit.ly/contact_techsupport

Our knowledgeable customer support team is available:
Monday-Friday, 8am-6pm CST.

JOIN THE CONVERSATION

Ask questions, watch detailed setup videos, and provide feedback on our social media outlets!



SPECIFICATIONS

Indoor:

Temperature Range: +32°F to +99°F (0°C to 37°C)

USB Output: 1 Amp maximum

Power: 5-volt power adapter, included AC 6: HX075-0501200-AU-001
2-AAA, IEC, LR3 batteries (not included)

Battery Life: Battery life is over 24 months

Dimensions: 5.9" L x 1.9" W x 3.5" H
(15.0cm L x 4.8cm W x 8.9cm H)

WARRANTY INFO

La Crosse Technology, Ltd. provides a **1-year limited time warranty** (from date of purchase) on this product relating to manufacturing defects in materials & workmanship.

For Full Warranty Details, Visit: bit.ly/contact_techsupport

CARE + MAINTENANCE

- Do not mix old and new batteries.
- Do not mix Alkaline, Lithium, standard, or rechargeable batteries.
- Always purchase the correct size and grade of battery most suitable for intended use.
- Clean the battery contacts and also those of the device prior to battery installation.
- Ensure the batteries have with correct polarity (+ / -).
- Remove batteries from equipment that will not to be used for an extended period.
- Promptly remove expired batteries.

CANADA STATEMENT

This device complies with CNR Industry Canada license -exempt devices. Operation is subject to the following two conditions: (1) This device may not cause interference; and (2) This device must accept any interference, including interference that may cause undesired operation of the device.

FCC STATEMENT

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Increase separation between equipment & receiver.
- Consult the dealer or an experienced radio/TV technician for help.

This device must not be co-located or operating in conjunction with any other antenna or transmitter.

Operation is subject to the following two conditions:


(1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

CAUTION!

The manufacturer is not responsible for any radio or TV interference caused by unauthorized changes or modifications to this equipment. Such changes or modifications could void the user authority to operate the equipment.

All rights reserved. This manual may not be reproduced in any form, even in part, or duplicated or processed using electronic, mechanical or chemical process without the written permission of the publisher.

This booklet may contain errors or misprints. The information it contains is regularly checked and corrections are included in subsequent editions. We disclaim any responsibility for any technical error or printing error, or their consequences. All trademarks and patents are recognized.

 **WARNING:** This product can expose you to chemicals including styrene, which is known to the State of California to cause cancer. For more information go to: www.P65Warnings.ca.gov