

SETTING UP YOUR NEW TILLER

Honda FG110

Serial Number: FAAA-1235477 ~ Forward


Before Using Your Tiller

Before using the tiller, all tiller operators must read the following chapters and sections of the Owner's Manual:

- TILLER SAFETY
- CONTROL LOCATIONS
- BEFORE OPERATION
- OPERATION
- MAINTENANCE SCHEDULE

Unpacking

1. Carefully remove the tiller from the carton.
2. Unfold the tiller upper handle to the operating position as shown. Be careful not to crimp or pinch the engine switch wires and throttle cable.
3. Tighten the handlebar knobs to secure the handle in the correct operating position.

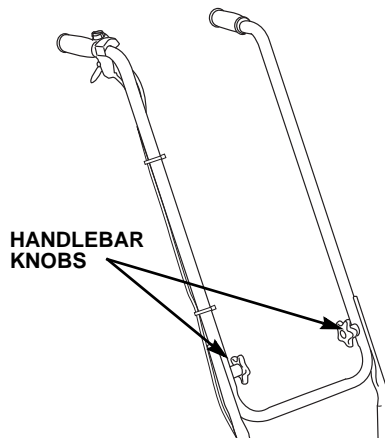

Engine Oil


The tiller is shipped **WITHOUT OIL** in the engine.

Working on a level surface, tip the tiller on its carrying handlebar as shown.

A bottle of oil is included in the box with your tiller. Add the entire contents of the oil bottle into the oil filler opening.

All Honda engines are run at the factory prior to packaging. Most of the oil is removed prior to shipment; however, some oil remains in the engine. The amount of oil left in the engine varies.

If not using the supplied oil, add enough SAE 10W-30 API service category SJ or later oil to bring the oil level to the bottom edge of the oil filler hole.

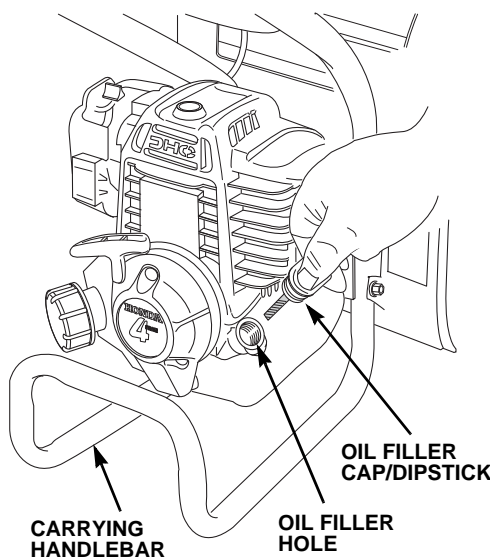

Do not overfill the engine with oil, as the oil tank capacity is small.

Screw in the oil filler cap/dipstick securely.

Fuel

This engine is certified to operate on unleaded gasoline with a pump octane rating of 86 or higher.

We recommend refueling after each use to minimize the air present in the fuel tank.

Refuel in a well-ventilated area with the engine stopped. Never refuel the engine inside a building where gasoline fumes may reach flames or sparks.

Please Register Your Tiller

If your dealer did not collect registration information from you, please take a few minutes and register your purchase with Honda. This allows us to contact you with any important updates regarding your tiller. Your information will remain confidential. It will not be released to any other company or organization. Please note registration is not required to obtain warranty service.

You can register by completing and mailing the included registration card in the Owner's Manual, or go online to www.HondaPowerEquipment.com and click on Product Registration.