

COLLAPSIBLE BIG WHEEL WAGON INSTRUCTIONS

CONTENTS



USE/FEATURES

No assembly required and folds up with one pull on the toggle.
 Extra wide adjustable all-terrain rubber wheels.
 Patented metal construction that will support up to 150 lbs.
 Customized loopholes and configured pockets to hold accessories.
 Easily stores in trunks, garages, back seats, etc.
 UV denier fabric. Clean with damp cloth.
 Versatile expandable utility wagon.
 Folded measures: 30"H x 20"W x 7-1/2"D.
 Open: 20"H x 64"L x 19-1/2"W.
 Weight: 20 lbs. 13 oz.
 Choice of colors. Imported.

CARE

Use a damp cloth to clean. Do not use chemicals.

SET-UP INSTRUCTIONS

Step 1




Remove wagon from travel sleeve and open velcro holding handles together.

Step 2



Spread the wagon frame open and allow it to come to a fully extended position.

Step 3

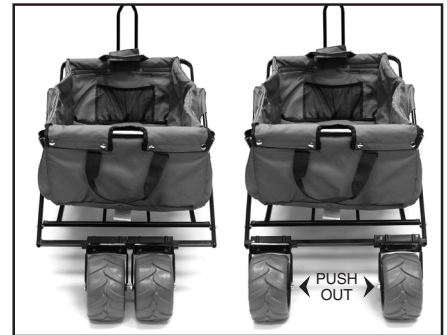

Spread apart the rear wheels until you hear a positive "click" ensuring they are locked to the outer frame.

FOLD-DOWN INSTRUCTIONS

Step 1



Return rear wheels to center location on rear axle. Use caution to prevent pinching hazard.

Step 2



Pull loop in wagon straight up while allowing front wheels to swivel 180 degrees to reverse position.

Step 3



With wheels aligned, close frame tightly and resecure the handles with the velcro enclosure. Put on Travel Sleeve for travel or storage.

COLLAPSIBLE BIG WHEEL WAGON FABRIC REMOVAL INSTRUCTIONS



Tools Required (Not included)

Allen Key #H4

Wrench #10



Fabric can become soiled over time with use. For stubborn stains or extreme soiling, removal of fabric can make clean up easier.



CARE

Use a damp cloth to clean. Do not use chemicals. Do not machine wash
WARNING! Not to be used as a children's ride wagon.


FABRIC REMOVAL INSTRUCTIONS

Step 1



The front and back of the wagon fabric are secured to the frame with velcro and snaps. Release all velcro and snaps on the front and back of the wagon.

Step 2

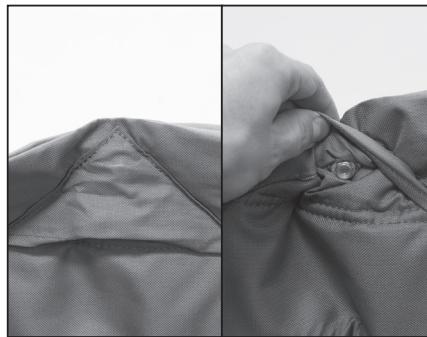

Locate the bolts on the sides of the wagon under the triangle shaped flaps.

Step 3



Using an H4 Allen Key and #10 wrench loosen and remove the nut on the inside of the wagon on both sides. Do not remove the bolt. It holds the frame together.

Step 4



Replace the washer and nut on the bolt to prevent loss.

Step 5



Release the velcro loop under the wagon.

Step 6



The wagon fabric can now be removed from the frame by sliding it down the wagon handle.

TO PUT THE FABRIC BACK ON THE FRAME, REVERSE THE STEPS ABOVE.

HELPLINE 949-381-7367

EMAIL SALES@CREATIVEOUTDOORDISTRIBUTOR.COM