

WARRANTY

Greenmade® wants you to enjoy using this product. If there is a defect in the material or workmanship of the HEAT MACHINE™, we pledge to repair or replace the product, at our option, but only during the first year of purchase. This does not include any damage caused by shipping. Greenmade® and US Merchants are not liable for any consequential damages to any property.

For warranty service, return the product, receipt, and documentation of the date of purchase and description of the defect. Return, shipping pre-paid, to:

Greenmade® Factory Service Department
 US Merchants
 1625 S Proforma Ave
 Ontario, CA 91761
 (310) 228-4000

This warranty is void through:


- Failure to follow the Instructions and Safety Guide
- Misuse or damage caused by self-repair
- Taking the unit apart in any way
- Modifying the unit in any way (such as by replacing parts)
- Without proof of a purchase receipt

This limited warranty to repair or replace the heater at our option is the exclusive remedy for any defect and supersedes all rights and implied warranties, but only to the extent permissible under applicable law. Please follow the Instructions and Safety Guide.

PATENT PENDING



Distributed by

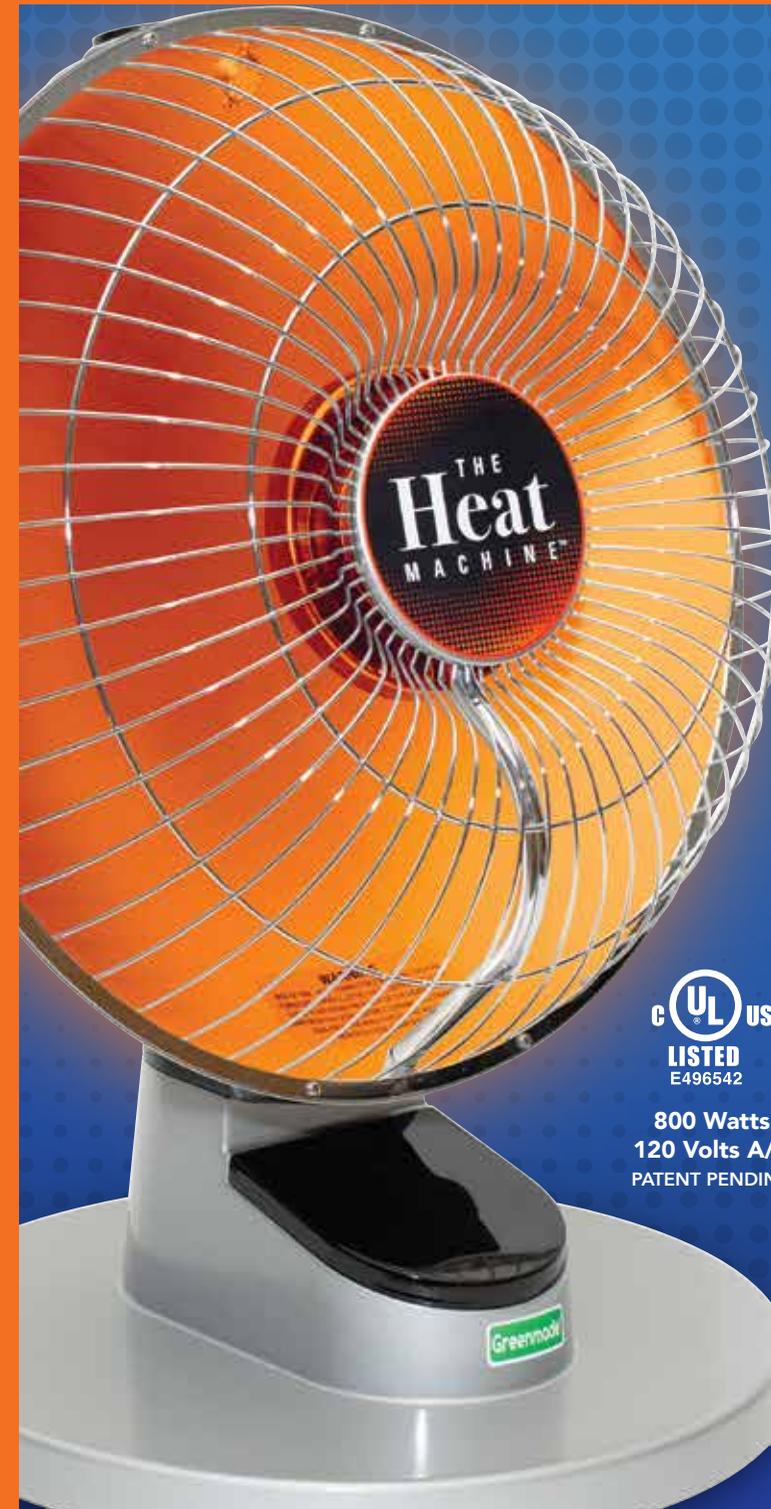

**THE
Heat
MACHINE™**

- Advanced Ceramic Heating System
- Efficient and Portable
- Adjustable Heat Settings
- Easy Carry Handle
- Safety Features:
Automatic Safety Switch
and Warning Alarm
In Case of Tip Over



800 Watts
 120 Volts A/C
 PATENT PENDING

SAFETY GUIDE

The Greenmade® HEAT MACHINE™ provides direct warmth that is adjustable to your desired comfort level. The parabolic design efficiently focuses heat without having to heat the entire room. Lightweight and equipped with Safety Features including Automatic Safety Switch, Alarm Light, Warning Alarm, and Automatic Reset Button.

Efficient and portable • Adjustable heat settings
Heats to full power in under five seconds • Easy carry handle

INSTRUCTIONS

ONLY USE THIS HEATER AS DIRECTED IN THIS MANUAL

SAFETY GUIDE

When using electrical appliances, basic precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

- Read all instructions before using this heater.
- This heater is hot when in use. To avoid burns, do not let bare skin touch hot surfaces. Always use the handle when moving this heater. Keep combustible materials, such as furniture, pillows, bedding, papers, clothes, and curtains at least 3 feet (0.9 m) from the front, sides and rear of the heater.
- Extreme caution is necessary when the heater is used near children or someone who is disabled.
- Do not leave the heater unattended while it is on. Always unplug heater when not in use.
- Do not operate heater with a damaged cord or plug, or after the heater malfunctions. If the heater is damaged in any manner, discard heater, or return it to an authorized service facility for examination and/or repair.
- Do not use outdoors.
- This heater is not intended for use in bathrooms or laundry areas. Never locate heater where it may fall into a bathtub or other water container.
- Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or similar coverings. Do not route cord under furniture or appliances. Arrange cord away from traffic area and where it will not be tripped over.
- To disconnect heater, turn controls to off, then remove plug from outlet.
- Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock or fire, or damage the heater.
- To prevent a possible fire, do not block air intakes or exhaust in any manner. Do not use on soft surfaces, like a bed, where openings may become blocked.
- A heater has hot and arcing sparking parts inside. Do not use it in areas where gasoline, paint, or flammable liquids are used or stored.
- Use this heater only as described in this manual. Any use not recommended by the manufacturer may cause fire, electric shock, or injury to persons.
- Always plug heaters directly into a wall outlet/receptacle. Never use with an extension cord or relocatable power tap (outlet/power strip).
- This heater includes an audible alarm and a visual indicator light to warn that parts of the heater are getting excessively hot. If the alarm sounds, and light flashes immediately turn the heater off and inspect for any objects on or adjacent to the heater that may cause high temperatures. **DO NOT OPERATE THE HEATER WITH THE ALARM SOUNDING AND VISUAL INDICATOR LIGHT IS FLASHING.**

SAVE THESE INSTRUCTIONS

How your HEAT MACHINE™ works

- The Greenmade® HEAT MACHINE™ is designed to focus heat directly to you, not to the entire room, keeping room temperature consistent while reaching a level of personal comfort.
- The HEAT MACHINE™ uses a ceramic heating element and features a 16" all aluminum parabolic radiant reflector, potentially reaching up to 95% of the heat radiating area. The HEAT MACHINE™ also features a 57 line high grade steel grill (Fig C), and a heavy duty electrical cord (Fig D).
- Use the POWER KNOB to turn power ON or OFF. (Fig A)
- To control the heat output to your preference, adjust the POWER KNOB from MIN to MAX.

The HEAT MACHINE™ is equipped with the following SAFETY FEATURES:

1. The AUTOMATIC SAFETY SWITCH (Fig B) offers tip-over protection. In case the heater is tipped over, the AUTOMATIC SAFETY SWITCH will turn the heater OFF.
2. The WARNING ALARM is designed to sound a warning sound when the heater has tipped over, is not on a level surface, or is moved while the power is ON.
3. The ALARM LIGHT will blink if the heater is tipped over, is not on a level surface, or is moved while the power is ON.
4. The AUTOMATIC RESET THERMOSTAT, located in the top part of the reflector, provides some protection from overheating. If the heater overheats, the AUTOMATIC RESET THERMOSTAT will turn the heater OFF. After the heater cools down, it will turn the heater ON automatically.
5. The THERMAL FUSE, located behind the top part of reflector, offers some additional overheating protection. If the heater overheats due to an external factor or the AUTOMATIC RESET THERMOSTAT fails, the THERMAL FUSE will cut off power to the heater.



Fig. A



Fig. B



Fig. C



Fig. D

How to position your HEAT MACHINE™

- Place your HEAT MACHINE™ with the front facing where heat is desired.
- Place your HEAT MACHINE™ at least three feet away from all persons. Increasing distance reduces effectiveness. Adjust distance to your personal preference, up to ten feet.
- Ensure that there aren't any objects between you and the HEAT MACHINE™. Blockages may absorb heat, inhibiting direct heat to you. Blockages may also create hazards.
- Your HEAT MACHINE™ is a personal heater, not a space heater. It is not designed to heat a large, open room.

Cleaning and storing your HEAT MACHINE™

- Clean occasionally and make sure dust does not accumulate on the heater.
- Only clean while the heater is OFF and unplugged and cold.
- To clean, use a soft, slightly moistened/damp cloth to wipe down exterior surfaces only.
- You may use a mild detergent. Do not use a harsh or abrasive cleaner.
- Do not use liquid sprays, including water and other cleaners, on any part of the heater.
- Do not submerge or pour liquid on the heater.
- Store in a dry location, wrapping the cord around the base (Fig D).