


Installation Instructions for Adjustable Gates

(Please read all instructions carefully before starting.)

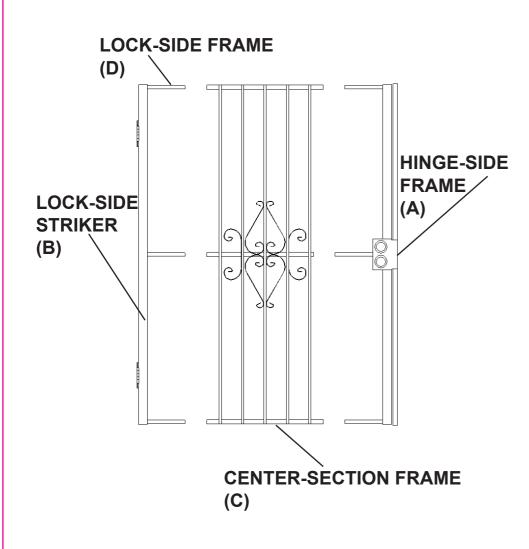

Note: During installation, snug screws in position (do not tighten until door is completely hung) then tighten all screws securely.

1. Center hinge side frame (**A**) against jamb at desired location and install Phillips head screws in hinges

2. Position lock-side striker (**B**) at same elevation on the opposite jamb and install top Phillips head screw only!

3.Attach center section frame (**C**) to hinge side frame (**A**).

4.Attach lock side frame (**D**) to center section frame (**C**).

5. Adjust center section frame (**C**) evenly between two side frames (**A**) and (**D**). Leave 1/4" clearance between lock side frame (**D**) and lock side striker (**B**).

6. Insert tamper-resistant one-way screws in center section frame (**C**). (Remember, do no tighten!)

7. Close door and align against lock side striker (**B**).Hold bottom of lock side striker (**B**) in place, open door, and insert remaining Phillips head screws in lock side striker (**B**).

8. Tighten all screws securely.